


The Device User Guide

Contents

1	Device Layout.....	1
2	Accessories.....	1
3	Touch Gestures.....	2
4	Buttons.....	2
5	Status Icon.....	3
6	Installing The SIM Card.....	4
7	Setup and Activate Product.....	4
7.1	Settings: Entry/Exit.....	4
8	Connect Product To Your Computer.....	4
9	Connect To Wi-Fi.....	5
9.1	Joining Wi-Fi networks.....	5
9.2	Adding Wi-Fi Networks.....	5
9.3	Forgetting Wi-Fi Networks.....	5
10	Browsing the Web.....	5
11	Airplane Mode.....	5
12	Compliance Statement.....	6-7

1 Device Layout

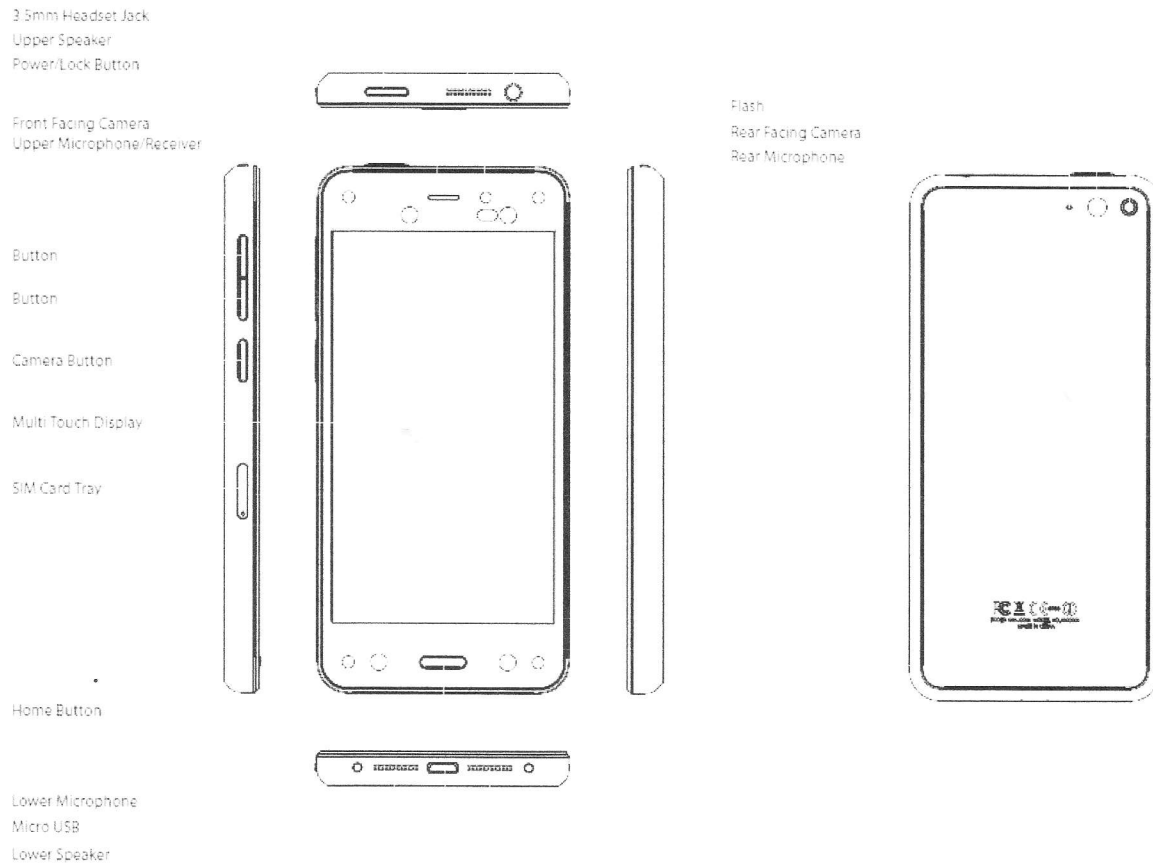

The device features and apps may vary depending on location, language, and carrier.

Note: Apps that send or receive data over a cellular network may incur additional fees. Contact your carrier for information about your devices service plan and fees.

2 Accessories

The following accessories are included with the device:

Accessory	Image	Description
Headset	[INSERT IMAGE]	Headset with remote and microphone to listen to music and videos and make phone calls.
Connecting Cable	[INSERT IMAGE]	Micro USB to USB cable to connect the device to your computer to sync and charge.
USB Power Adapter	[INSERT IMAGE]	USB Power Adapter to be used with the connecting cable to charge the device battery.

3 Touch Gestures

High-level touch gestures used to navigate the device.



Tap

- Tap to select an item.
- Tap to activate an application.



Double-tap

- Double-tap to open a page.
- Double-tap to zoom in or out.
- Double-tap to zoom in or out on a page.
- Double-tap to zoom in or out on a page.
- Double-tap to zoom in or out on a page.



Press and Hold

- Press and hold to open a context menu.
- Press and hold to open a context menu.



Swipe(Horizontal)

- Swipe to go to the previous or next screen.
- Swipe to go to the previous or next screen.
- Swipe to go to the previous or next screen.
- Swipe to go to the previous or next screen.
- Swipe to go to the previous or next screen.



Swipe (Vertical)

- Swipe to go to the previous or next screen.
- Swipe to go to the previous or next screen.
- Swipe to go to the previous or next screen.
- Swipe to go to the previous or next screen.
- Swipe to go to the previous or next screen.



Drag & Drop

- Drag and drop to move an item.



Pull/Pinch

- Pull/pinch to zoom in or out.

4 Buttons

Most of the buttons on the device are virtual ones on the touchscreen. A few physical buttons control basic functions, such as turning the device on or adjusting the volume.

Button	Function
Power	<ul style="list-style-type: none"> • Press and hold to turn the device on or off • Press and hold for more than 8 seconds to reset the device if it has fatal errors, hang-ups, or freezes. • Press to lock or unlock the device. The device goes into lock mode when the display turns off. Both the time for the display to turn off and the activation of lock mode are configurable via settings. While in lock mode the device can still get phone calls, text messages, alarms and notifications. The device can also continue to play music and adjust the volume.
Home	<ul style="list-style-type: none"> • Press to return to the Home screen. • Press to toggle between the view and the grid view • Press and hold to use voice control <p>If display is off:</p> <ul style="list-style-type: none"> • Press to unlock the device.
Volume Controls	<ul style="list-style-type: none"> • Press to adjust the device volume for media, ringers, alerts and other device sound effects.

Button	Function
Other Button	<ul style="list-style-type: none"> Press to launch the camera. <p>In the camera application:</p> <ul style="list-style-type: none"> Press to take an image <p>If display is off:</p> <ul style="list-style-type: none"> Press to unlock the device.

5 Status Icon

The icons in the status bar at the top of the screen given information about the device:

[insert image of status bar]

	Constant Indicators	Description
1	Time	Displays the current time. Always present.
2	Signal	Displays the signal strength and carrier name. The device is in range of the cellular network and can make and receive calls. If there's no signal, "No service" icon appears. Present unless disabled by special state.
3	Network	<p>Displays wireless network. Present unless disabled by special state.</p> <p>Network Icons:</p> <ul style="list-style-type: none"> LTE UMTS UMTS/EV-DO EDGE GPRS WIFI
4	Battery	Represents the amount of battery life left. Always present.


	Transient Indicators	Description
5	Bluetooth Active	Only shows when the device is connected to another device via Bluetooth.
6	GPS	Only shows when a GPS satellite is actively engaging. Will mostly appear in Maps application and when using Turn-by-Turn directions.
7	Alarm	Only shows when one or more alarms have been set to go off in the future.
8	Call Forwarding	Only shows when the device has been set to forward calls to another number.
9	TTY	Only shows when the device is connected to a TTY device.

	Special States	Description
10	Airplane Mode	Indicates when the device is in airplane mode. You can not make phone calls. Also initially disable Wi-Fi, Bluetooth and GPS. These can be turned back on while still in Airplane Mode. Replaces the Signal Strength, Carrier Network and WAN Data Network Type icons.
11	No Service	Indicates when the device is not connected to a voice network. Replaces the Signal Strength, Carrier Network, and WAN Data Network Type icon.
12	No SIM	Indicates when the device does not have a SIM card. Replaces the Signal Strength, Carrier Network, and WAN Data Network Type icon.
13	Emergency Calling Only	Indicates when the device is disabled, except for emergency calling. Replaces the Signal Strength, Carrier Network, and WAN Data Network Type icon.
14	Searching	Indicates when the device is actively trying to acquire a network indicator. Replaces the Signal Strength, Carrier Network, and WAN Data Network Type icon.

6 Installing The SIM Card

Nano SIM card is required in order to use cellular services on this device.

- 1) Locate the SIM tray on the left side of the device.
- 2) Eject the SIM tray from the device by inserting a paperclip into the hole at the top of the SIM tray.
- 3) Place the nano SIM card on the tray.
- 4) Insert the tray with the nano SIM card back into the device.

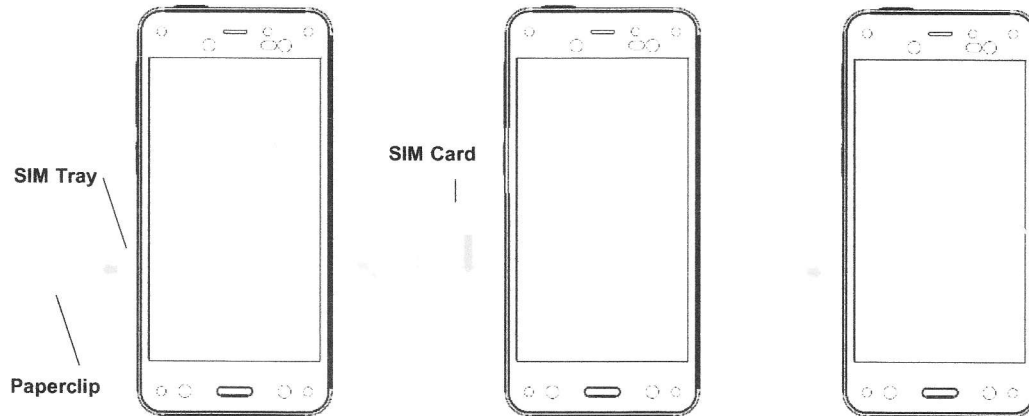

7 Setup and Activate The Device

Activation can be done over a Wi-Fi network or over your carrier's cellular network.

To set up and activate the device turn on the device and follow the setup assistant.

The setup assistant steps you through the process, including:

- Selecting your language
- Connecting to a Wi-Fi network
- Signing in with or creating an account
- Personalize the device LBS services, connect to social networks

7.1 Settings: Entry/Exit

The settings application on the device can be accessed via the system chrome.

- 1) Bezel swipe from the top of the screen down.
- 2) Scroll to the right.
- 3) Tap on the settings icon.

8 Connect The Device To Your Computer

Connecting the device to a computer allows you to sync photos and other content to the device from your computer and vice versa.

Connect the device to your computer using the micro USB to USB cable.

9 Connect To Wi-Fi

The device automatically detects nearby Wi-Fi networks and wireless hotspots that broadcast their network name. Some networks are open for everyone to join, while others require a password to connect. You can connect the device to your home Wi-Fi network, public Wi-Fi networks, and some enterprise private networks. The device will reconnect to previously added networks automatically when the network is within range.

9.1 Joining Wi-Fi networks

To connect to a Wi-Fi network open the settings application as defined in section 7.1.

- 1) Scroll down to Wi-Fi settings.
- 1) Tap on "Connect to a Wi-Fi network"
- 2) Tap a network to connect to it. If you see a lock icon, a network password is required. Enter the Wi-Fi network password, and then tap OK.
 - a. To adjust the settings for a Wi-Fi network a tap Show Advanced Options. You can set an HTTP proxy and define static network settings.

Note: If you don't know the password, check with the person who set up the network. This password is not your account password.

9.2 Adding Wi-Fi Networks

To add a Wi-Fi network open the settings application as defined in section 7.1.

- 1) Scroll down to Wi-Fi settings.
- 2) Tap on "Connect to a Wi-Fi network"
- 3) Tap Add Network located at the bottom of the network list.
- 4) Enter the Network SSID, select the security type and enter the password if it is not an open network, and then tap OK.
 - b. To adjust the settings for a Wi-Fi network a tap Show Advanced Options. You can set an HTTP proxy and define static network settings.

9.3 Forgetting Wi-Fi Networks

Any network that has ever been used, including the current network, can be forgotten so the device will not automatically connect to it. To forget a Wi-Fi network open the setting application as defined in section 7.1

- 1) Scroll down to Wi-Fi settings.
- 2) Tap on "Connect to a Wi-Fi network"
- 3) Tap on the network from the network list.
- 4) Tap on Forget this Network

10 Browsing the Web

To browse the internet use the device browser application.

To open the browser, tap the browser icon from the home screen or from home grid.

Note: An Internet connection either over Wi-Fi or Cellular is required to browse the web.

11 Airplane Mode

To switch to Airplane Mode:

- 1) Bezel swipe from the top of the screen down.
- 2) Scroll to the right.
- 3) Tap on the Airplane Mode icon.

12 Compliance Statements

FCC Regulations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation on the 5.15-5.25 GHz frequency band is restricted to indoor use only.

RF Exposure Information (SAR)

This device has been tested and meets applicable limits for Radio Frequency (RF) exposure.

Specific Absorption Rate (SAR) refers to the rate at which the body absorbs RF energy. SAR limits are 1.6 Watts per kilogram (over a volume containing a mass of 1 gram of tissue) in countries that follow the United States FCC limit and 2.0 W/kg (averaged over 10 grams of tissue) in countries that follow the Council of the European Union limit. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

To reduce exposure to RF energy, use a hands-free accessory or other similar option to keep this device away from your head and body. Carry this device at least 15 mm away from your body to ensure exposure levels remain at or below the as-tested levels. Choose the belt clips, holsters, or other similar body-worn accessories which do not contain metallic components to support operation in this manner. Cases with metal parts may change the RF performance of the device, including its compliance with RF exposure guidelines, in a manner that has not been tested or certified, and use such accessories should be avoided.

Hearing Aid Compatibility Information (HAC)

Your phone is compliant with the FCC Hearing Aid Compatibility requirements.

The Device User Guide

The FCC has adopted HAC rules for digital wireless phones. These rules require certain phone to be tested and rated under the American National Standard Institute (ANSI) C63.19-2011 hearing aid compatibility standards. The ANSI standard for hearing aid compatibility contains two types of ratings:

M-Ratings: Rating for less radio frequency interference to enable acoustic coupling with hearing aids.

T-Ratings: Rating for inductive coupling with hearing aids in telecoil mode.

Not all phones have been rated, a phone is considered hearing aid compatible under FCC rules if it is rated M3 or M4 for acoustic coupling and T3 or T4 for inductive coupling. These ratings are given on a scale from one to four, where four is the most compatible. Your phone meets the M4/T4 level rating.

However, hearing aid compatibility ratings don't guarantee that interference to your hearing aids won't happen. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.