NETGEAR® User Manual

AirCard 797 Mobile Hotspot

December 2018 202-11925-01 **NETGEAR, Inc.** 350 E. Plumeria Drive San Jose, CA 95134, USA

Support

Thank you for purchasing this NETGEAR product.

After installing your device, locate the serial number on the label of your product and use it to register your product at https://my.netgear.com. You must register your product before you can use NETGEAR telephone support. NETGEAR recommends registering your product through the NETGEAR website. For product updates and web support, visit http://support.netgear.com.

Phone (US & Canada only): 1-888-NETGEAR.

Phone (Other Countries): Check the list of phone numbers at http://support.netgear.com/general/contact/default.aspx.

Trademarks

©NETGEAR, Inc. NETGEAR and the NETGEAR Logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.

Compliance

For regulatory compliance information, visit http://www.netgear.com/about/regulatory. See the regulatory compliance document before connecting the power supply.

Contents

Cha	pter 1 Get Started	
М	eet Your Mobile Hotspot	8
	Control Your Device Using the Power Button	
	Sleep Mode	
	Status LED	
Se	et Up Your Mobile Hotspot	9
	echarge the Battery	
	eplace a SIM Card	
	ome Screen	
	onnect to the Internet	
	ecurity Credentials	
	ETGEAR Mobile App for Smartphones and Tablets	
	onnect to the Mobile Hotspot With Tethering	
C	ustomize the Mobile Hotspot Settings	. 1 6
Cha	pter 2 Use Your Mobile Hotspot	
Vi	ew Messages From the Mobile Hotspot Web Page	.19
Vi	ew Messages From the Mobile Hotspot Display	19
D	elete a Message From the Mobile Hotspot Web Page	20
	ew Alerts From the Mobile Hotspot Web Page	
M	anage Your Broadband Network Connection	
	View Mobile Broadband Network Status From the Mobile Hotsp	
	Web Page	
	Turn Domestic Data On and Off From the Mobile Hotspot We	
	Page	
	Turn International Roaming On and Off From the Mobile Hotsp	
C	Web Pageonnect to Wi-Fi	
C	Connect Using the Wi-Fi Password	
	Add a WPS-Enabled Wi-Fi Device From the Mobile Hotspot W	
	Page	
М	anage Wi-Fi	
	Turn On 5 GHz Wi-Fi From the Mobile Hotspot Web Page	
	Turn On Dual-Band Wi-Fi From the Mobile Hotspot Web	_ `
	Page	27
	Change Wi-Fi Settings From the Mobile Hotspot Web Page	

Turn Guest Wi-Fi On and Off From the Mobile Hotspot We	
Page Manage Wi-Fi Security Change Wi-Fi Network Names and Passwords From the M Hotspot Web Page Change Wi-Fi Encryption Settings	33 lobile 33
Chapter 3 Manage Security	
Change the Mobile Hotspot Web Page Login Settings Content Filter Levels	41 43 43 44
Block a Device From the Mobile Hotspot Web Page Unblock a Device From the Mobile Hotspot Web Page View a List of Blocked Devices From the Mobile Hotspot W Page	46 Veb
Set Up an Internet Access ScheduleActivate SIM Security Enable Port Forwarding Enable Port Filtering	47 49 50
Chapter 4 Maintain Your Mobile Hotspot	
Extend Battery Life	ΕΛ
Adjust Wi-Fi Settings to Optimize Battery Life	
Adjust Display Settings to Increase Battery Life	
View Details About Your Mobile Hotspot	
Back Up and Restore Mobile Hotspot Settings	
Back Up Mobile Hotspot Settings Using the Web Page	
Restore Mobile Hotspot Settings Using the Web Page	
Restore Mobile Hotspot Settings Using the LCD Display	
Configure Mobile Broadband	
Enable IP Pass-Through Mode	
Enable VPN Pass-ThroughConfigure APN Details	
Add an APN for Another Network	
Select an APN to Use	
Remove an APN Entry	
Enable DMZ	
Set LAN Options	65
Update Mobile Hotspot Software and Firmware	66

Update in Response to an AlertUpdate Software From the Mobile Hotspot Web Page	
Chapter 5 Frequently Asked Questions	
Questions About Connecting and Disconnecting Devices and Accessing the Internet	70
What do I do if I can't access the Internet?	70 71 the 71 obile 71
connected to a VPN?	72 ng 72
What do I do if my mobile hotspot doesn't connect to my ser provider's network? Questions About the Mobile Hotspot Web Page How do I go back to the mobile hotspot web page?	72 73
What do I do if I forget my attadmin login password? General Questions	74 74
Why is the Signal Strength indicator always low? Why is the download or upload speed slow? The LCD screen is not lit. How do I know if the mobile hotsp still powered on?	74 ot is
How do I find my computer's IP address? Find the IP address on a Windows 7, Windows Vista, or Windows XP device	75
Find the IP address on a Windows 8 device Find the IP address on a Mac OS X device Find the IP address on devices running other operating	75
systemsHow do I find a device's MAC address?Find the MAC address on a Windows 7, Vista , or XP	76
deviceFind the MAC address on a Windows 8 device or newer. Find the MAC address on a Mac OS X device What do I do if the Wi-Fi network name doesn't appear in the	76 77
of networks?	

Chapter 6 Troubleshooting

View Alerts	79
SIM Not Installed	
SIM Error – Check SIM	79
SIM Locked	79
Temperature-Related Alerts	80
Connection Alerts	80
Reset the Mobile Hotspot	82
Reset the Mobile Hotspot From the Mobile Hotspot	82
Reset the Mobile Hotspot From the Mobile Hotspot Web	
Page	82
Appendix A Specifications	
Battery Specifications	85
Display Specifications	
Environmental Specifications	
Mechanical Specifications	
Mobile Band Specifications	87
Package Contents	
Port Specifications	88
Port SpecificationsSecurity Specifications	
	88

1

Get Started

This product regularly checks for new firmware and downloads any appropriate, or you can check for and download new firmware manually. If the features or behavior of your product does not match what is described in this manual, you might need to update your firmware.

This chapter provides an overview of mobile hotspot features, and instructions for how to set up your mobile hotspot and connect to the Internet. The chapter covers the following topics:

- Meet Your Mobile Hotspot
- Set Up Your Mobile Hotspot
- Recharge the Battery
- Replace a SIM Card
- Home Screen
- Connect to the Internet
- <u>Security Credentials</u>
- NETGEAR Mobile App for Smartphones and Tablets
- Connect to the Mobile Hotspot With Tethering
- Customize the Mobile Hotspot Settings

Meet Your Mobile Hotspot

Before you connect your mobile hotspot, familiarize yourself with its LCD screen, icons, buttons, and connectors.



Figure 1. Mobile hotspot buttons and connectors

The mobile hotspot comes with a micro USB charging cable.



Figure 2. Mobile Hotspot Charging Cable

Control Your Device Using the Power Button

The Power button is used to turn the NETGEAR Mobile Hotspot on or off and to choose which information screen to display on the LCD.

Turn mobile hotspot on. Press and hold Power button for 3-4 seconds

Turn mobile hotspot off. Press and hold the Power button for 3-4 seconds

Wake up WiFi signal and device screen. Press and release the Power button.

Cycle through screens. Press and release the Power button.

Sleep Mode

If there have been no transmissions or operation of your device, or if the battery has not been charged, your device automatically enters sleep mode to save power.

In sleep mode, WLAN is disabled.

Press the Power button to turn the display on and exit sleep mode.

WLAN function is enabled and WiFi devices can reconnect to the hotspot.

The time required to recover the network connection varies by environment, settings, etc.

Status LED

The status LED indicates data connection status:

- **Blue**, **slow blink**. The mobile hotspot is ready.
- Blue, double-blink. The mobile hotspot is transferring data.
- **Amber**, **slow blink**. The mobile hotspot is not connected to the network or is in standby mode.

Set Up Your Mobile Hotspot

The mobile hotspot comes with a preinstalled SIM card.

To set up your mobile hotspot:

1. Insert the battery.



- 2. Install the back cover.
- 3. Firmly close the back cover.
- 4. Press the **Power** button to power on the mobile hotspot.



Recharge the Battery

Your battery comes partially charged.

To recharge your battery:

1. Connect the micro USB charging cable to your mobile hotspot.




2. Connect the other end of the cable to the USB port on your computer or to the USB charger.

Replace a SIM Card


The mobile hotspot comes with a preinstalled SIM card. This step is optional for initial setup.

To replace a SIM card:


- 1. Remove the back cover by lifting the corners.
- 2. Remove the battery.
- 3. Slide out the SIM card.

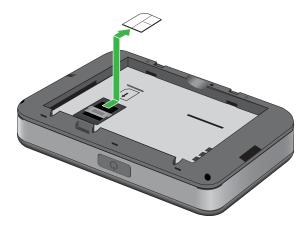

4. Insert the replacement SIM card.

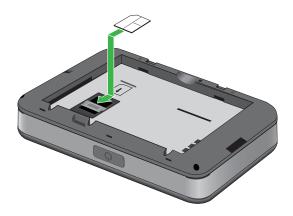

5. Insert the battery.

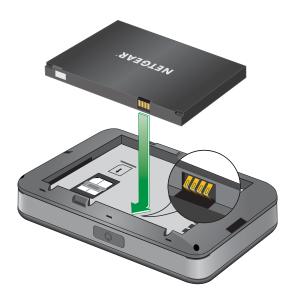

6. Install the back cover.

Home Screen

You can use the home screen icons to view the mobile hotspot's status, configure Wi-Fi settings, view data usage details, and view system alerts.

 


Figure 3. LCD screen display

Table 1. Icons

Icons Description

This indicates the strength of the mobile broadband network signal.



Your 4G LTE wireless device displays one of the following network indicators to let you know which wireless network you are connected to.



- Connected to AT&T's 4G LTE network.
- Connected to AT&T's HSPA+ network.



This indicates the battery is charging.



This indicates the battery is fully charged.



This indicates the mobile router is plugged in to an external power supply and is operating without a battery.



This indicates there are unread alerts.



Connect to the Internet

When you turn on your mobile hotspot, it automatically connects to the network in your area. Connect your device to the mobile hotspot Wi-Fi network to access the Internet.

To connect to the Internet:

1. Press and release the **Power** button to turn on the mobile hotspot.



- 2. On your laptop or Wi-Fi device, open your Wi-Fi network connection manager.
- 3. Connect your device to the hotspot with the Wi-Fi name and password.



Note: Your WiFi network name is different from this example.

If guest Wi-Fi is enabled, press the power button again to reveal the guest credentials.

Security Credentials

Three passwords are associated with the mobile hotspot:

• **Wi-Fi password**. Use this to connect your computer or Wi-Fi device to your mobile hotspot network. This character string is unique to your device. It displays on the main mobile hotspot touch screen. If the screen is blank (a power-saving feature), press and quickly release the Power button. The default Wi-Fi password is also printed on a label under the battery.

For information about changing Wi-Fi passwords, see <u>Change Wi-Fi Encryption</u> <u>Settings</u> on page 36.

- **Guest Wi-Fi password**. When the guest Wi-Fi network is enabled, guests can use this password to access the network.
- **attadmin login password**. Use this to log in to the mobile hotspot web page as an administrator. You must log in as an administrator to use certain features and to make changes to your mobile hotspot settings. The default attadmin login password, **attadmin**, is printed on a label under the battery. The attadmin login password can be 5-31 characters.

NETGEAR Mobile App for Smartphones and Tablets

Download and use the complimentary NETGEAR Mobile app to view your connection, settings, and data usage from your smartphone or tablet. Search the app store for NETGEAR Mobile.



To manage all mobile hotspot settings, visit the mobile hotspot web page at **http://attwifmanager/** .

Connect to the Mobile Hotspot With Tethering

You can connect a computer to the mobile hotspot using the micro USB cable instead of connecting with Wi-Fi. This kind of cable connection is called tethering.

Note: The tethering feature is not available on the model AC797ABS-1A1NAS, but you can use your computer to access the mobile hotspot web page.

Note: The first time you use the micro USB cable to connect to the mobile hotspot your computer's operating system detects the new device.

To install drivers on computers running Windows:

- 1. Ensure that the mobile hotspot is powered off.
- 2. Connect the mobile hotspot to your computer using the USB cable.



The mobile hotspot automatically powers on.

Note: Make sure that your computer has access to Internet when you first use the tethering feature because your computer might need to access the Internet in order to download the required software driver.

After the driver is installed, you can visit the mobile hotspot web page to customize your mobile hotspot's advanced settings. This is an optional step.


Customize the Mobile Hotspot Settings

You can personalize the mobile hotspot and change its settings on the web page.

To log in to your mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- Enter http://attwifmanager/.
 The mobile hotspot web page displays.
- 3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

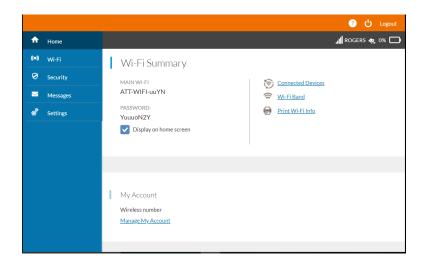

2

Use Your Mobile Hotspot

This chapter explains how to use your mobile hotspot. The chapter covers the following topics:

- <u>View Messages From the Mobile Hotspot Web Page</u>
- <u>View Messages From the Mobile Hotspot Display</u>
- Delete a Message From the Mobile Hotspot Web Page
- <u>View Alerts From the Mobile Hotspot Web Page</u>
- Manage Your Broadband Network Connection
- Connect to Wi-Fi
- Manage Wi-Fi
- Manage Wi-Fi Security

View Messages From the Mobile Hotspot Web Page

To view messages from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Messages.

A list of messages displays, showing the first portion of the text.

5. Click a message to read the full text.

View Messages From the Mobile Hotspot Display

You can tell from your mobile hotspot display if you have unviewed messages, and you can view them directly from there.

This hotspot display indicates you have an unread message.



To view messages from the mobile hotspot display:

1. Press the **Power** button to view the messages.

Note: Although you can view messages directly on the mobile hotspot, use the mobile hotspot's web page to delete them.

Delete a Message From the Mobile Hotspot Web Page

To delete a message from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is attadmin. The password is case-sensitive.

The home page displays.

4. Select Messages.

A list of messages displays, showing the first portion of the text.

5. Select the message and click the **Delete** button.

The message is deleted.

View Alerts From the Mobile Hotspot Web Page

Your mobile hotspot displays alerts to advise you of device status changes. When there are outstanding alerts, the alerts displays on the screen. Alerts remain as long as the issues that cause them are active. When the issues are resolved, the alerts are removed automatically.


To view alerts from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

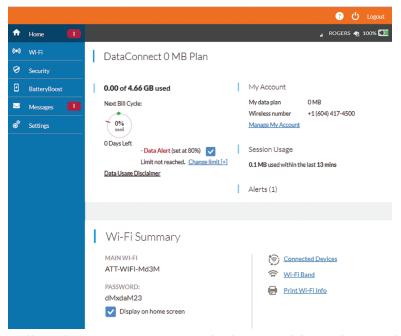

Follow the instructions in each alert to address the conditions that caused it to display.

Manage Your Broadband Network Connection

You can view the mobile broadband network status, turn domestic data on and off, and turn international roaming on and off.

View Mobile Broadband Network Status From the Mobile Hotspot Web Page

To view network status from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is attadmin. The password is case-sensitive.

The home page displays.

4. Select **Settings > About**.

The About page displays.

5. View the Network Status section.

Turn Domestic Data On and Off From the Mobile Hotspot Web Page

To turn domestic data on and off from the mobile hotspot:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is attadmin. The password is case-sensitive.

The home page displays.

4. Select Settings > Mobile Broadband > Preferences.

The preferences page displays.

5. Click the **Domestic Data** button.

The Save and Cancel buttons display at the bottom of the page.

6. Click the **sSave** button.

Your settings are saved.

Turn International Roaming On and Off From the Mobile Hotspot Web Page

Before you turn on international roaming, make sure that you are aware of any extra charges for data that you might incur.

To turn international roaming on and off:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > Mobile Broadband > Preferences.

The preferences page displays.

5. Click the **International Roaming** button.

The Save and Cancel buttons display at the bottom of the page.

6. Click the **Save** button.

Your settings are saved.

Connect to Wi-Fi

You can connect up to 15 Wi-Fi devices (such as smartphones, laptops, tablets, digital cameras, printers, gaming consoles, and digital picture frames) to your mobile hotspot network. For information about setting connections for main Wi-Fi and guest Wi-Fi networks, see <u>View Mobile Broadband Network Status From the Mobile Hotspot</u> on page?

You can add a Wi-Fi device to your Wi-Fi network manually. If the device that you are adding is WPS enabled, you can use the WPS method to connect the device without using the Wi-Fi password.

Connect Using the Wi-Fi Password

To connect using the Wi-Fi password:

- 1. On the Wi-Fi device, view the list of available Wi-Fi networks.
- 2. Connect to the network that corresponds to your mobile hotspot network as displayed on the LCD screen.
- 3. When prompted, enter the Wi-Fi password for your mobile hotspot network. The Wi-Fi password displays on the mobile hotspot LCD screen. If the screen is turned off, press and quickly release the **Power** button to wake the mobile hotspot.

Add a WPS-Enabled Wi-Fi Device From the Mobile Hotspot Web Page

You can add a WPS-enabled Wi-Fi device to your Wi-Fi network without a Wi-Fi password, using the mobile hotspot or the mobile hotspot web page. Note that this feature is not available on the AC797ABS-1A1NAS model mobile hotspot.

To add a WPS-enabled Wi-Fi device from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.


The default password is attadmin. The password is case-sensitive.

The home page displays.

4. Select Wi-Fi > Connect.

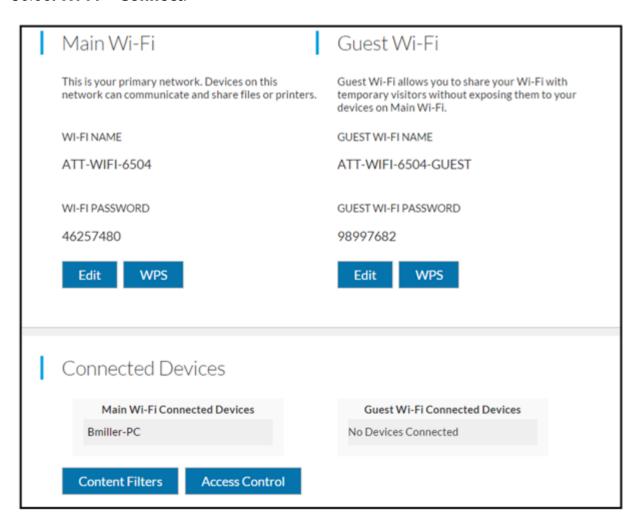

5. Click the **WPS** button for either the main Wi-Fi or guest Wi-Fi network (if available).

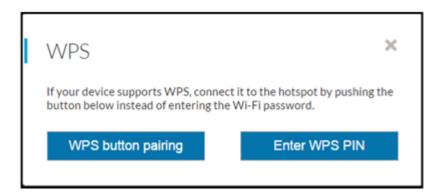

- 6. Click the button for the WPS method that you want to use:
 - **WPS button pairing**. If the device that you want to connect includes a WPS key, click the **WPS button pairing** button and, within two minutes (120 seconds), press the device's WPS key.
 - **Enter WPS PIN**. If a WPS pin is associated with the device that you want to connect, click the **Enter WPS PIN** button and enter the device's WPS PIN.

Your mobile hotspot and the Wi-Fi device communicate and establish the connection.

Manage Wi-Fi

Advanced users can set up the Wi-Fi radio of the mobile hotspot to meet their Wi-Fi needs by customizing settings on the mobile hotspot web page.

On the mobile hotspot web page, the following Wi-Fi profiles are available:

- **Default**, **main Wi-Fi**. Share your main Wi-Fi with 2.4 GHz devices that you trust.
- **5 GHz Wi-Fi**. Share your main Wi-Fi with 5 GHz devices that you trust.
- **Dual-band Wi-Fi.** Share your Wi-Fi with 2.4 GHz and 5 GHz devices.

By default, main Wi-Fi is enabled and both dual-band Wi-Fi and guest Wi-Fi are disabled. If your place of business does not allow Wi-Fi or for any other reason you want to disable Wi-Fi and use the mobile hotspot only in tethered mode, the mobile hotspot gives you that option.

Note: Whenever you change Wi-Fi settings, any devices connected to the mobile hotspot are disconnected and might need to be reconnected.

Turn On 5 GHz Wi-Fi From the Mobile Hotspot Web Page

When all of your devices support 5 GHz Wi-Fi, use 5 GHz Wi-Fi for faster downloads.


To turn on 5 GHz Wi-Fi from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- Enter http://attwifmanager/.
 The mobile hotspot web page displays.
- 3. Enter the administrator login password.

 The default password is attadmin. The password is case-sensitive.

The home page displays.

4. Select Wi-Fi > Options.

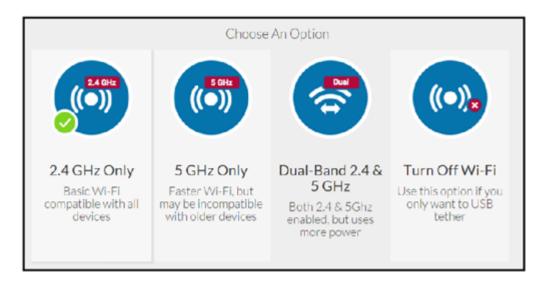

5. Select **5GHz Only**.

The Save and Cancel buttons display at the bottom of the page.

6. Click the Save button.

A message displays telling you that to save this change, your device must restart Wi-Fi connections.

7. Click the **Save** button.

Your settings are saved.

Turn On Dual-Band Wi-Fi From the Mobile Hotspot Web Page

The mobile hotspot can broadcast Wi-Fi signals in the 2.4 GHz and 5 GHz Wi-Fi bands. Note that the overall throughput speed could decrease when Wi-Fi dual-band is enabled.

To turn on dual-band Wi-Fi from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is attadmin. The password is case-sensitive.

The home page displays.

4. Select Wi-Fi > Options.

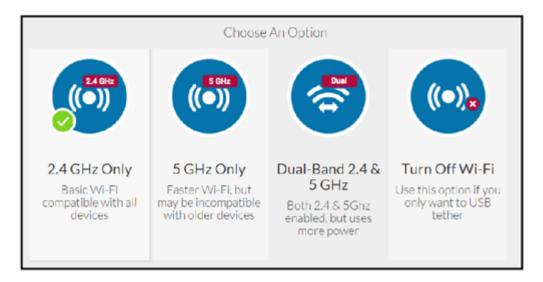

5. Select Dual-Band 2.4 & 5 GHz.

The Save and Cancel buttons display at the bottom of the page.

6. Click the Save button.

A message displays telling you that to save this change, your device must restart Wi-Fi connections.

7. Click the **Save** button.

Your settings are saved.

Change Wi-Fi Settings From the Mobile Hotspot Web Page

To select a Wi-Fi profile or create a custom profile on the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.


The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Wi-Fi > Options.

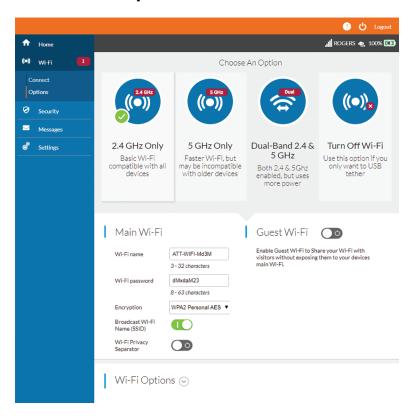

5. Click the down arrow next to Wi-Fi options.

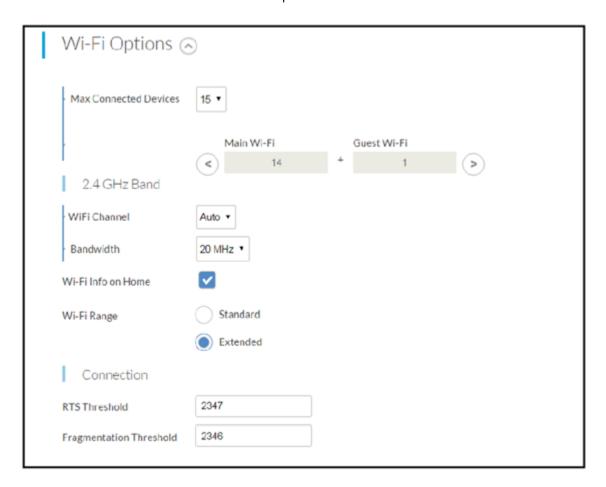

- 6. To change the maximum number of devices that can connect to the Wi-Fi network:
 - a. In the **Max Connected Devices** menu, select a number.
 - b. Click the arrow buttons to change the numbers in the **Main Wi-Fi** and **Guest Wi-Fi** fields.
- 7. Set the Wi-Fi channel.

Best practice is to set the channel to **Auto**. The mobile hotspot chooses the channel that provides the least interference.

8. Set the Wi-Fi channel.

Best practice is to set the channel to **Auto**. The mobile hotspot chooses the channel that provides the least interference.

9. Set the Wi-Fi bandwidth.

You can set this to 20 MHz or 40 MHz.

- 10. To allow the Wi-Fi information to be displayed on the mobile hotspot home screen, leave the Wi-Fi Info on Home check box selected.
- 11. Set the Wi-Fi range.

Selecting the Extended radio button expands the range of the mobile hotspot. This setting uses more battery power than the Standard setting.

- 12. Specify advanced connection settings:
 - **RTS Threshold**. The smallest packet size (in bytes) used by the Request to Send/Clear to Send handshaking protocol.

 Best practice is to use a value of 2347. If you are experiencing inconsistent data flow, you can make minor changes to this value to try to alleviate the problem.
 - **Fragmentation Threshold**. The largest allowable size (in bytes) for a packet. If a packet is larger than the threshold, it is sent in multiple packets, which can affect network performance. Keep this value as large as possible (up to 2346).
- 13. Click the **Save** button.

A message displays to tell you that changing the Wi-Fi info will temporarily cause connectivity loss.

14. Click the **OK** button.

Your settings are saved.

Turn Guest Wi-Fi On and Off From the Mobile Hotspot Web Page

Guest Wi-Fi lets temporary visitors access your Wi-Fi mobile hotspot without having to share your main Wi-Fi password. Guest Wi-Fi uses the same band (2.4 GHz or 5 GHz) as your main Wi-Fi.

To enable guest Wi-Fi from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.


The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Wi-Fi > Connect.

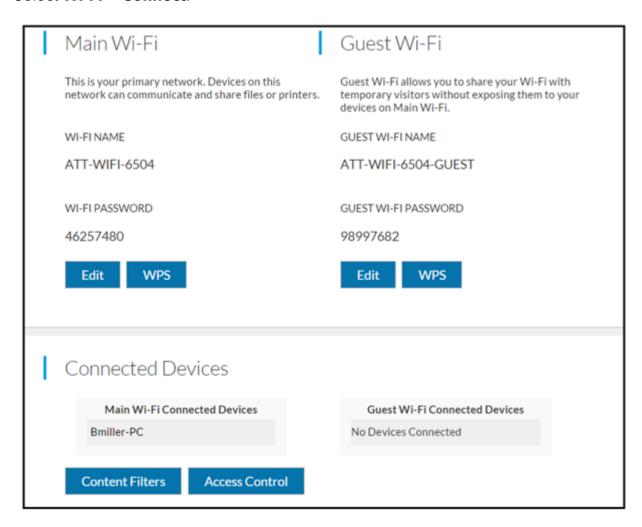

5. Click the Guest Wi-Fi Edit button.

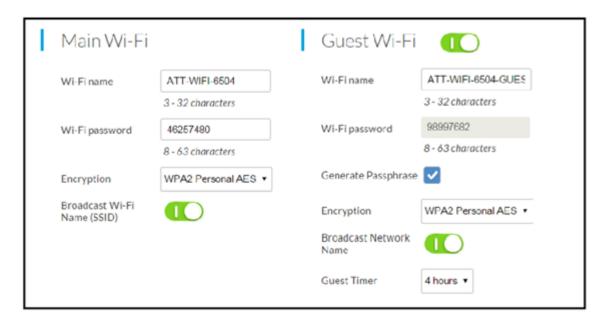

6. Click the Guest Wi-Fi button.

The Save and Cancel buttons display at the bottom of the page.

- 7. To set a timer for the guest network, select the length of time in the **Guest Timer** menu.
- 8. Click the **Save** button.

A message displays telling you that to save this change, your device must restart Wi-Fi connections.

9. Click the **Save** button.

Your settings are saved.

Manage Wi-Fi Security

Note: When you change the Wi-Fi settings, the mobile hotspot resets. Any devices connected to the mobile hotspot are disconnected when the mobile hotspot resets.

Change Wi-Fi Network Names and Passwords From the Mobile Hotspot Web Page

The main and guest Wi-Fi network names identify your Wi-Fi networks and are visible to other Wi-Fi-enabled devices.

The procedure to change the main and guest Wi-Fi network names and passwords is the same. The following settings differ:

- **Main Wi-Fi**. For added security, you can prevent the main Wi-Fi network name and password from displaying on the mobile hotspot's home screen.
- **Guest Wi-Fi**. For added security, you can specify that the guest Wi-Fi password changes each time you enable guest Wi-Fi.

To change network names and passwords from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.


The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Wi-Fi > Connect.

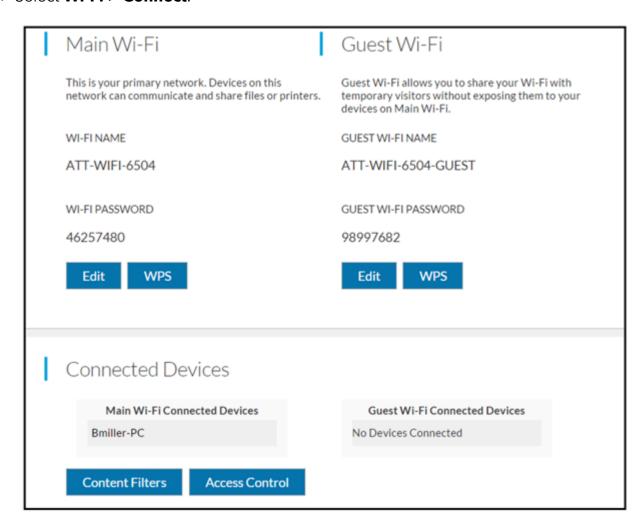

5. Click the **Edit** button for the main Wi-Fi or for the guest Wi-Fi network.

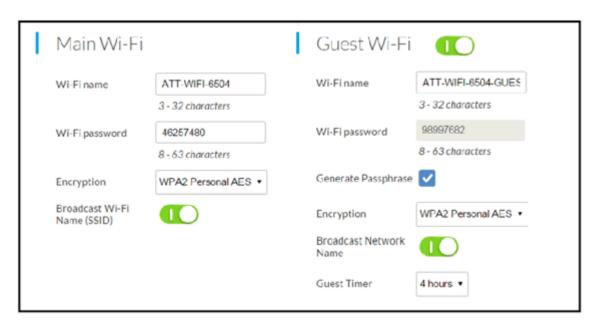

- 6. Change the **Wi-Fi Name** and **Wi-Fi Password** fields as desired.
- 7. To create a new guest password each time you power on the mobile hotspot, select the **Generate Passphrase** check box.

The Save and Cancel buttons display at the bottom of the page.

8. Click the **Save** button.

A message displays telling you that to save this change, your device must restart Wi-Fi connections.

9. Click the **Save** button.

Your settings are saved.

All devices that were connected must reconnect with the new name and password.

Change Wi-Fi Encryption Settings

For information about Wi-Fi security, see Security Credentials on page 14.

To change the type of security used for main and secondary or guest Wi-Fi:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.


The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Wi-Fi > Connect.

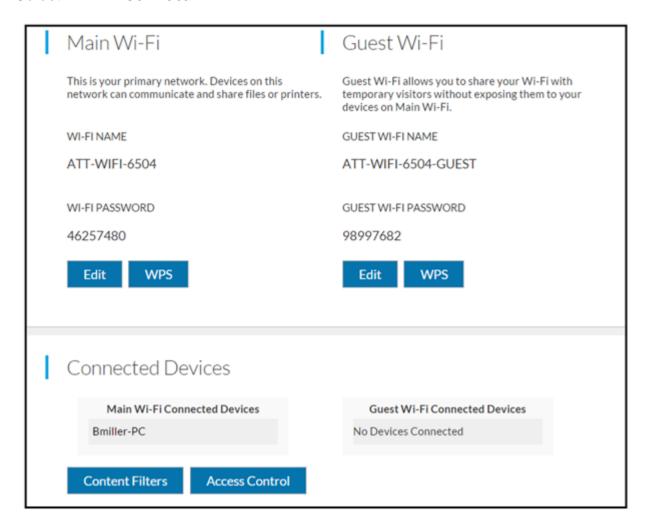

5. Click the **Edit** button for the main Wi-Fi or for the guest Wi-Fi network.

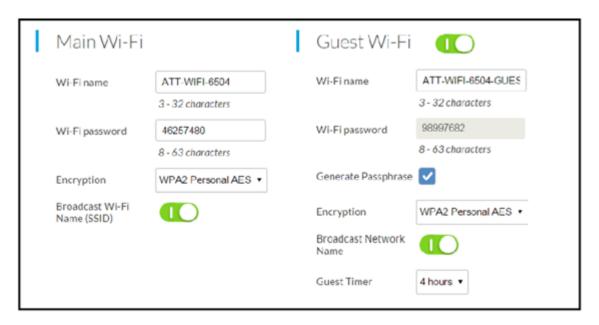

- 6. In the Encryption menu for main Wi-Fi or guest Wi-Fi, select a security option:
 - **WPA2 Personal AES**. Strong security supported by newer Wi-Fi devices, the default.
 - **WPA/WPA2**. Strong security supported by most Wi-Fi devices. Use WPA2 Personal AES whenever possible.
 - **None**. Anyone can access your Wi-Fi network without a password and you are responsible for charges incurred. Best practice is not to select this option.

The Save and Cancel buttons display at the bottom of the page.

7. Click the **Save** button.

A message displays telling you that to save this change, your device must restart Wi-Fi connections.

- 8. Click the **Save** button.
 - Your settings are saved.
- 9. Reconnect your Wi-Fi devices, if necessary, using the new Wi-Fi credentials.

3

Manage Security

For information about Wi-Fi security settings, see Manage Wi-Fi Security on page 33.

The chapter covers the following topics:

- Change the Mobile Hotspot Web Page Login Settings
- Content Filter Levels
- View, Block, or Unblock Connected Devices
- Set Up an Internet Access Schedule
- Activate SIM Security
- Enable Port Forwarding
- Enable Port Filtering

Change the Mobile Hotspot Web Page Login Settings


You can change the host name for the mobile hotspot web page. You can also change the password to access the mobile hotspot web page.

To change the login settings for the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/ .

The mobile hotspot web page displays.

- Enter the administrator login password.
 The default password is attadmin. The password is case-sensitive.
 The home page displays.
- 4. Select Settings > General > Device.

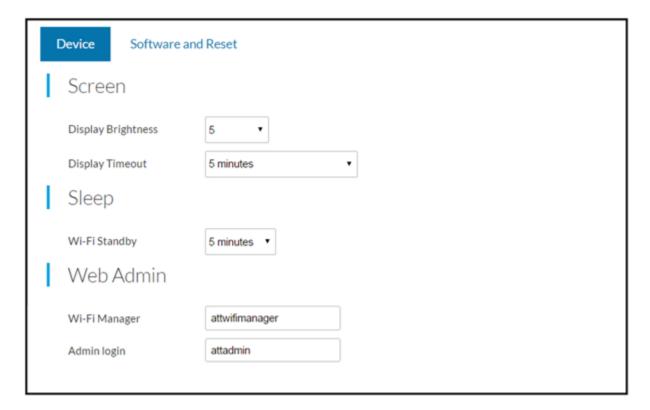

5. In the **Wi-Fi Manager** field, change the URL used to connect to the mobile hotspot. When you change settings, the Save and Cancel buttons display.

6. In the **Admin login** field, change the password used to log in as an administrator. Best practice is to set a more secure password.

Enter a maximum of 31 characters.

7. Click the **Save** button.

Your settings are saved.

Content Filter Levels

You can set up content filtering levels on the mobile hotspot with a free OpenDNS account. Content filters provide parental controls and phishing protection.

Set Up Content Filtering

To enable content filtering, you must log in to the mobile hotspot web page and be connected to the Internet.

To enable content filtering:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.


4. Select Security > Content Filters.

The Content Filters page displays.

5. Select the **Content Filters** button.



- 6. If you do not have an OpenDNS account, do the following:
 - a. Click the **Sign Up** link.

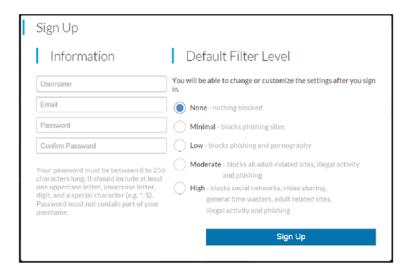

- b. Complete the fields to create your OpenDNS account.
- c. Click the **Sign Up** button.
- 7. If you already have an OpenDNS account, enter the user name and password.
- 8. When prompted, select a **Filter Level** radio button.
- Click the **Save** button. Your settings are saved.

Block Access to Websites

You can use website filters to block access to websites that you specify. You can also allow unrestricted access on specific computers and devices.

To block access to a website:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Security > Content Filters > Website Filters.

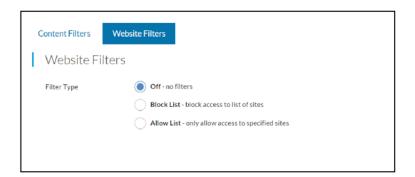

5. Select the **Block List - block access to list of sites** radio button.

The page adjusts.

- 6. Enter the website in the **Site Name** field and click the + button.
- 7. To allow unrestricted access on specific computers or devices, complete the **Name** and **MAC Address** fields and click the + button.
- 8. Click the **Save** button.

Your settings are saved.

Allow Access to Websites

You can use website filters to set up a list of websites that can be accessed through the mobile hotspot broadband Internet connection. You can also allow unrestricted access to specific computers and devices.

To set up website filters:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Security > Content Filters > Website Filters.

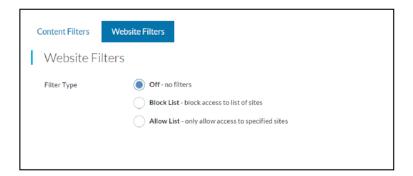

- 5. Select the **Allow List only allow access to specified sites** radio button. The page adjusts.
- 6. Enter the website in the **Site Name** field and click the **+** button.
- 7. To allow unrestricted access on specific computers or devices, complete the **Name** and **MAC Address** fields and click the + button.
- 8. Click the **Save** button.

Your settings arse saved.

View, Block, or Unblock Connected Devices

You can block specific devices from connecting to the mobile hotspot.

View Connected Devices From the Mobile Hotspot Web Page

To view the connected devices from the mobile hotspot web page:


- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

- 3. Enter the administrator login password.
 - The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Wi-Fi > Connect.

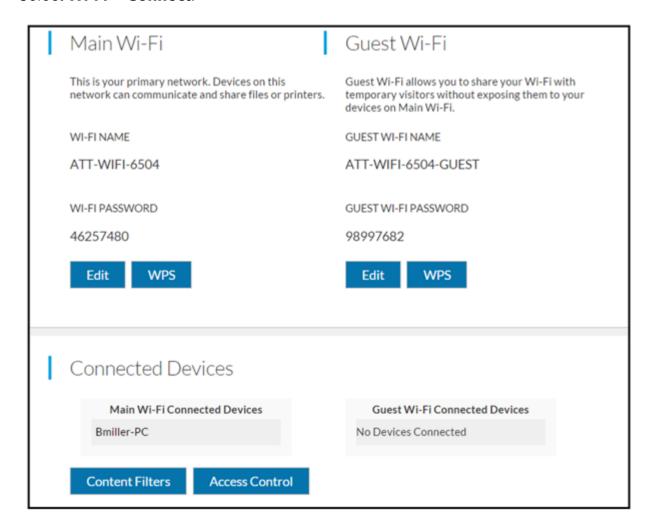

The Connected Devices section of the page displays a list of devices connected to your network. If you notice a Wi-Fi device that you do not recognize, you can block that device from connecting to your Wi-Fi network.

Block a Device From the Mobile Hotspot Web Page

To block device access:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

A list of devices connected to the main Wi-Fi and guest Wi-Fi networks displays on the home page.

4. Click the device name.

The device details display.

- 5. Click the **Block Device** button.
- 6. When prompted, click the **Block Device** button again.

The device is blocked from your network.

Unblock a Device From the Mobile Hotspot Web Page

To unblock a device from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

A list of devices connected to the main Wi-Fi and guest Wi-Fi networks displays in the right column of the page.

4. Select Security > Access Control.

The MAC Filter page displays.

5. From the MAC Filter Mode menu, select Black list - Block all in list.

The list of blocked devices displays.

6. Click the **x** button next to the device.

The device can access your network.

View a List of Blocked Devices From the Mobile Hotspot Web Page

To view a list of blocked devices from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

- 4. To view a list of connected devices, select Wi-Fi > Connect.
- 5. Select Security > Access Controls.

The Access Control page displays.

6. From the **MAC Filter Mode** menu, select **Block list**.

The list of blocked devices displays.

Set Up an Internet Access Schedule

You can restrict which times during the week you allow Internet access. When you set up an access schedule, the Internet access is restricted except for the times you specify in schedule rules. Schedule rules automatically repeat weekly. When the Internet access is blocked according to the schedule, an alert icon displays on the main screen. In this mode, you can still connect to the mobile hotspot over Wi-Fi to view status or configure the mobile hotspot.

To set up an Internet access schedule from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.


The home page displays.

4. Select **Security > Schedule**.

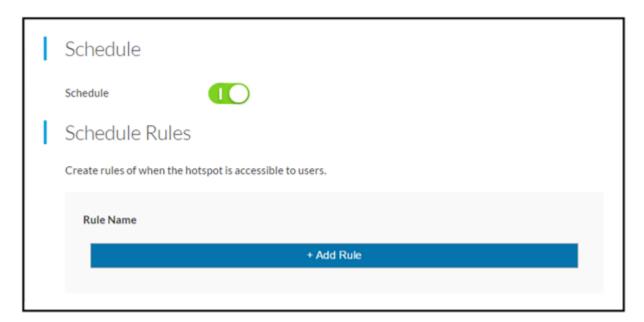

5. Select the **Schedule** button.

6. Click the Add Rule button.

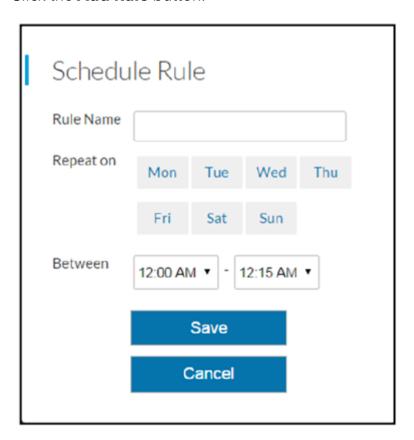

- 7. Enter a name for the rule and select the days and times when you want to allow connections to the mobile hotspot network.
- 8. Click the **Save** button. Your settings are saved.

Activate SIM Security

You can create another level of security by establishing a PIN that you must enter before you can manage the network connection or view SMS messages.

To activate SIM security:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- Enter http://attwifmanager/.
 The mobile hotspot web page displays.
- 3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > Mobile Broadband > SIM Security.

The SIM Security page displays.

- 5. Click the **Activate** button.
- 6. Enter your PIN and click the **Save** button.

If you enter an incorrect PIN three times, the SIM is blocked. If the SIM is blocked, contact your network service provider to receive a PUK number to unblock the SIM.

Enable Port Forwarding

If your computer is hosting a server, you can enable port forwarding so that other users can access the server. With port forwarding, incoming traffic is forwarded to specific ports and devices on your network using their local IP addresses.

Note: Port forwarding creates a security risk. When not required, leave port forwarding disabled.

To enable port forwarding:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.



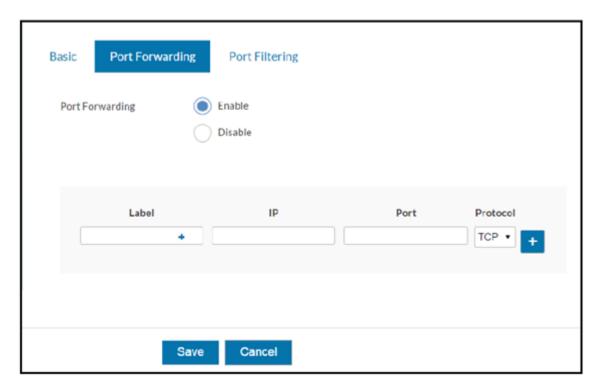

5. Select the **Enable** radio button .

The page adjusts.

- 6. Enter the following port forwarding information:
 - Label. Enter a descriptive name.
 - **IP**. Enter the IP address of a connected device.
 - **Port**. Enter the port number that the application uses.
 - **Protocol**. If you are unsure, select TCP.
- 7. Click the **Save** button.

Your settings are saved.

Enable Port Filtering

You can select which applications (for example, HTTP, FTP, email servers) can access the Internet. Used with other security measures such as a firewall, port filtering can enhance network security.

To enable port filtering:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > Router > Port Filtering.

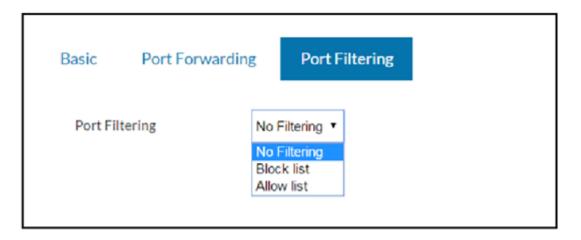

- 5. From the **Port Filtering** list, select one of the following:
 - **Block List**. Specific applications and services are not allowed to access the Internet (block list).
 - **Allow List**. Only specific applications and services are allowed to access the Internet (allow list).

Only one list at a time can be active, either a block list or an allow list.

6. Identify the ports to filter.

Enter a meaningful label that describes the application or service.

- 7. Enter the port being used.
- 8. Enter the communication protocol being used.
- 9. Click the **Save** button.

Your settings are saved.

4

Maintain Your Mobile Hotspot

The chapter covers the following topics:

Extend Battery Life

The mobile hotspot, by default, is configured to optimize battery life. The following factors affect battery life:

- Screen brightness.
- Standby time.
- Data throughput.
- Mobile broadband signal strength (the better the signal, the longer the battery life).
- Wi-Fi range.
- Dual-band Wi-Fi (when all of your devices support 5 GHz Wi-Fi, dual-band Wi-Fi allows faster downloads but uses more power).
- Guest Wi-Fi, when enabled, uses more power.

To extend the battery life, use any of the following methods:

- Adjust Wi-Fi settings.
- Adjust display settings.
- Use tethered USB.

Adjust Wi-Fi Settings to Optimize Battery Life

If the devices that you are connecting to your Wi-Fi network are always close to your mobile hotspot, shorten the Wi-Fi range. Set the standby timer to a shorter period to minimize the wait time when no devices are connected to either Wi-Fi network before going into standby mode (the Wi-Fi radios turn off).

Note: When you change the Wi-Fi settings, any devices connected to the mobile hotspot are disconnected and might need to be reconnected.

You can set the following Wi-Fi options to optimize battery life:

- Adjust the display settings. See <u>Adjust Display Settings to Increase Battery Life</u> on page 55.
- Set the Wi-Fi range to Standard, not Extended, and set the Wi-Fi standby to 5 minutes.

Adjust Display Settings to Increase Battery Life

Dim the screen to reduce the LCD screen's brightness level. Set the screen time-out to a shorter period to reduce the amount of time the mobile hotspot waits without the LCD screen being touched before the screen turns blank.

To adjust display settings to increase battery life from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > General > Device.

The device settings page opens.

- 5. Adjust any of these settings:
 - **Display Brightness** . From the menu, select the display brightness level.
 - **Display Timeout** . From the menu, select a shorter time period.
- 6. Click the **Save** button.

Your settings are saved.

View Details About Your Mobile Hotspot

You can view details about your device such as the model number, software version, and IMEI (International Mobile Station Equipment Identity).

To view details about your device from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select **Settings > About**.



Back Up and Restore Mobile Hotspot Settings

You can back up and restore mobile hotspot settings. Backing up and restoring are useful if you use more than one device and you want the same settings on all of your devices. You can also save your settings before resetting to factory defaults or changing the settings.

Back Up Mobile Hotspot Settings Using the Web Page

To back up mobile hotspot settings using the web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. >Select Settings > General > Software and Reset.

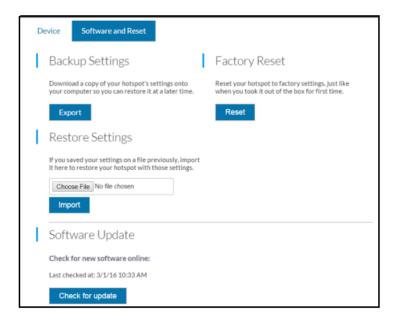

5. Click the **Export** button.

By default, the file (export.cfg) is saved to your Downloads folder.


Restore Mobile Hotspot Settings Using the Web Page

To restore mobile hotspot settings:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

- Enter the administrator login password.
 The default password is **attadmin**. The password is case-sensitive.
 The home page displays.
- 4. Select Settings > General > Software and Reset.

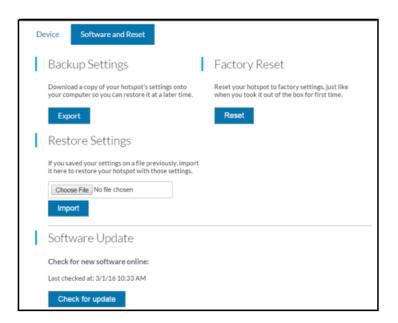

- 5. Click the **Choose File** button.
- 6. Navigate to the location where the export.cfg file is stored and select it. By default, mobile hotspot setting files are saved to your Downloads folder.
- 7. Click the **Import** button.

 Your mobile hotspot is restored with the imported file settings.

Restore Mobile Hotspot Settings Using the LCD Display Start with the mobile hotspot turned on.

To restore mobile hotspot settings directly from the mobile hotspot:

Press and hold the **power** button for at least 15 seconds.
 The mobile hotspot enters factory reset mode and first displays the message,
 "Shutting down," followed by the message "Continue holding Power button to reset all settings to factory default," and then "Resetting Device. Please do not power off."

Note: If you release the **power** button too soon, the mobile hotspot turns off instead of resetting.

Configure Mobile Broadband

You can configure mobile broadband settings to view WAN details such as the active network, connection status, and signal strength. You can also adjust these settings to establish which users and applications can access your network.

Enable IP Pass-Through Mode

To turn off the mobile hotspot router functionality and assign the network IP address directly to the attached device, enable IP pass-through.

If you make this change, the attached device restarts using a different driver configuration.

Warning: If you enable this feature, Wi-Fi is disabled and you must use a USB cable to tether the device.

Note: This feature is available to Windows computer users. If you are a Mac user, do not enable this option because you will be unable to access your device.

To enable IP pass-through mode:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > Router > Basic.

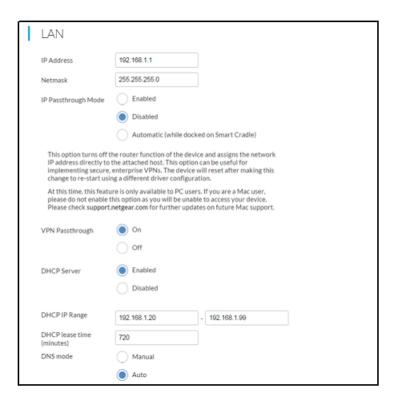

- 5. In the LAN section, select the IP Passthrough Mode **Enabled** radio button.
- 6. Click the **Save** button.

Enable VPN Pass-Through

To connect to a corporate network using VPN, you must first enable VPN connections (pass-through).

To enable VPN pass-through:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > Router > Basic.

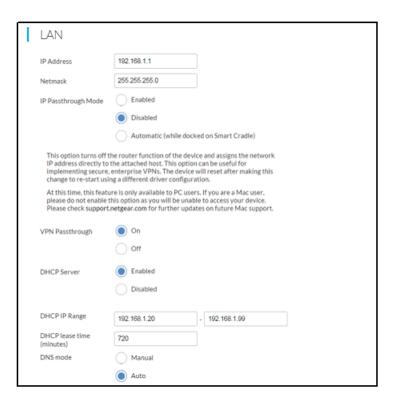

- 5. In the LAN section, select the VPN Passthrough **On** radio button.
- 6. Click the **Save** button.

Your settings are saved.

Configure APN Details

Your mobile hotspot comes preconfigured with the access point name (APN) for your network service provider.

The mobile hotspot checks the APN to determine the type of network connection to establish.

Add an APN for Another Network To add an APN for another network:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.


The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select **Settings > Mobile Broadband > APN**.

The APN screen displays.

5. Click the **Add** button.

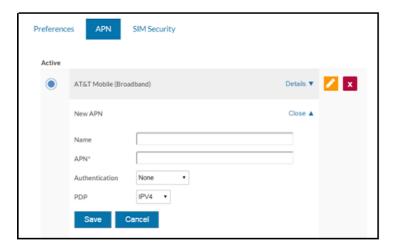

- 6. Enter the name and password, if they are required for the network.
- 7. Select the network authentication mode:
 - None
 - PAP
 - CHAP
 - PAP or CHAP
- 8. Change the PDP (data protocol), if necessary:
 - IPV4
 - IPV6
 - IPV4V6
- 9. Change the PDP roaming protocol, if necessary:
 - None
 - IPV4
 - IPV6
 - IPV4V6

Note: PDP roaming protocol is the IP protocol used while you are roaming (for example when you are traveling and the roaming network does not support IPv6).

10. Click the **Save** button.

The entry is added to the table.

Select an APN to Use To select an APN to use:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > Mobile Broadband > APN.



5. Select the **Active** radio button next to the APN entry.

The APN is selected.

Remove an APN Entry To remove an APN entry:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > Mobile Broadband > APN.



5. Click the **Delete**button.

The APN is removed.

Enable DMZ

In a demilitarized zone (DMZ) network configuration, a computer runs outside the firewall in the DMZ. This computer intercepts incoming Internet traffic, providing an extra layer of protection for the rest of the network, and sending all incoming data to a particular IP address.

To enable the DMZ and designate a computer to screen incoming traffic:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select **Settings > Router > Basic**.

The Router Basic page displays.

5. Scroll down to display the DMZ section.



- 6. Select the DMZ Enabled **On** radio button.
- 7. In the **DMZ Address** field, enter the IP address of the computer to which you want all data sent.

If the mobile hotspot is tethered using a USB cable, this address is 192.168.1.4. If the mobile hotspot is connected using Wi-Fi, the first Wi-Fi client's IP address is usually 192.168.1.74.

8. Click the **Save** button.

Your settings are saved.

Set LAN Options

To set the mobile hotspot's LAN options:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > Router > Basic.

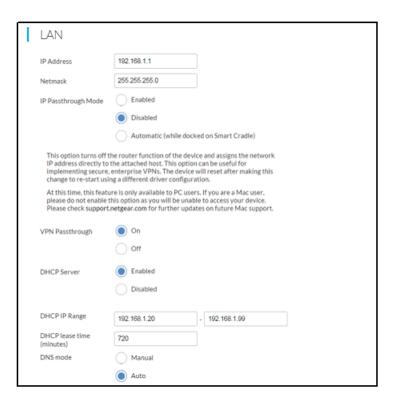

5. In the LAN section, enter the appropriate details.

If the DHCP server is enabled, it automatically assigns an IP address to each device on the network and manages its configuration information.

The DNS mode setting specifies how the DNS servers are obtained. If you select the **Auto** radio button, the servers use the DNS relay specified by the Internet provider.

6. Click the **Save** button.

Your settings are saved.

Update Mobile Hotspot Software and Firmware

The mobile hotspot automatically checks for new software or firmware updates once a week. If an update becomes available, the mobile hotspot displays an alert. You can also check for updates manually without receiving an alert.

Update in Response to an Alert

To update the mobile hotspot software or firmware in response to an alert:

1. To wake the device, press the **Power** button.

The home screen displays.

2. Press the **Power** button again.

The alert message displays.

3. Press and hold the **Power** button.

The update process starts.

After the update install completes, the mobile hotspot reboots.

Update Software From the Mobile Hotspot Web Page

To update software from the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > General > Software and Reset.

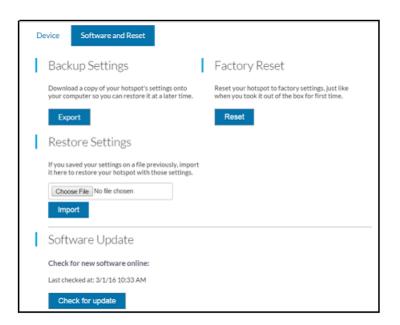

- 5. If the **Check for update** button displays, click it to see if a new update is available.
- 6. If an update is available, click the **Start Download** button. The update downloads.
- 7. Click the **Update now** button to install the update.

 After the update install completes, the mobile hotspot reboots.

5

Frequently Asked Questions

This chapter provides answers to possible questions about your mobile hotspot:

- Questions About Connecting and Disconnecting Devices and Accessing the Internet
- Questions About the Mobile Hotspot Web Page
- General Questions

Questions About Connecting and Disconnecting Devices and Accessing the Internet

Review these topics for answers to questions about connecting and disconnecting devices and accessing the Internet.

What do I do if I can't connect a device to the mobile hotspot?

If you are experiencing problems connecting to the mobile hotspot, try the following suggestions:

- Turn off your mobile hotspot and take the battery out, wait 10 seconds, put the battery back in, and turn your mobile hotspot on.
- Restart your computer.
- Turn off or temporarily disable any security programs or firewalls.
- If possible, try using another computer or Wi-Fi device to connect to your mobile hotspot. If you can, then the problem is with the device that cannot connect, not the mobile hotspot.

What do I do if I can't access the Internet?

If you are connected to the mobile hotspot but cannot connect to the Internet, try the following suggestions:

- Check the display status on the mobile hotspot's LCD screen.
- Make sure that network coverage is available in your area.
- Make sure that your micro SIM card is active and enabled with data services.
- Wait one to two minutes for the mobile hotspot to initialize.
- Confirm that your account is activated and that no other Internet connections are active.
- Switch your mobile hotspot off and on and restart your computer or Wi-Fi device.

How do I disconnect from the mobile broadband network?

Turning off domestic data and international roaming disconnects your mobile hotspot from the mobile broadband network. For more information, see <u>Turn Domestic Data On and Off From the Mobile Hotspot Web Page</u> on page 22.

Why doesn't the Connect or Disconnect button appear on the mobile hotspot web page?

You can use the **Connect** or **Disconnect** button only when you are logged in as an administrator.

To log in as an administrator:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

- Enter the password in the **Sign In** field.
 The default password is **attadmin**. The password is case-sensitive.
- Click the **Sign In** button.
 The home page displays.

How do I find out how many devices are connected to my mobile hotspot's Wi-Fi networks?

The number next to the **Wi-Fi** button on the mobile hotspot's LCD home screen is the number of users (or devices) connected to your Wi-Fi network. When you log in to the mobile hotspot web page, the number of connected devices displays on the home page.

What do I do if the No Signal icon displays?

If the No Signal icon () displays, make sure that you are in your network service provider's coverage area.

Why can't my device access the mobile hotspot web page when connected to a VPN?

If you are using your mobile hotspot while connected to a VPN, you might not be able to access the mobile hotspot web page using http://attwifmanager/.

To directly access the mobile hotspot web page hosted on the device, enter the address **http://192.168.1.1** in your browser.

Why can't my mobile hotspot connect to a computer running Windows Vista?

A known issue exists whereby computers running Microsoft Windows Vista cannot obtain an IP address from certain routers. More information and a fix are available at http://support.microsoft.com/kb/928233, or visit the Microsoft support website and search for knowledge base article 928233.

What do I do if my mobile hotspot doesn't connect to my service provider's network?

If your mobile hotspot does not connect to your service provider's mobile broadband network, try the following suggestions:

- Make sure that your micro SIM account is active. To check micro SIM status, contact your wireless service provider.
- If you use a prepaid micro SIM card, make sure that the account balance is positive.
- If your mobile hotspot still does not connect, you might need to create or update the default connection profile.

To check the default connection profile settings:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the mobile hotspot password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > Mobile Broadband > APN.



5. Review ISP settings.

Questions About the Mobile Hotspot Web Page

Review these topics for answers to questions about the mobile hotspot web page.

How do I go back to the mobile hotspot web page?

To view the mobile hotspot web page:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.

The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The mobile hotspot web page displays.

What do I do if I forget my attadmin login password?

The default attadmin login password is **attadmin**, and the mobile hotspot web page URL is **http://attwifmanager/**.

If you changed the attadmin login password and can't remember the password that you created, you must reset the mobile hotspot back to factory defaults. See <u>Reset the Mobile Hotspot</u> on page 82.

General Questions

Review these topics for answers to general questions about the mobile hotspot.

Why isn't my battery charging?

If you are in a low-coverage area, are transferring a lot of data, or left the mobile hotspot in a hot location, the internal temperature of the mobile hotspot can rise above 45°C. In these conditions, the battery cannot be charged due to safety limits with lithium-ion battery technology.

Check to ensure that the USB cable and the AC wall charger are connected securely and are working correctly.

If the device is left charging for over seven consecutive days, the device automatically enters a battery longevity mode to enhance the life of the battery. During this state, the device stops charging and allows the battery level to drop to and maintain at approximately 75 percent. The next time the device is plugged into a charger, it resumes charging.

Why is the Signal Strength indicator always low?

Your mobile hotspot's reception is poor. Try moving it to a location with a clear view of the sky (for example, near a window).

Why is the download or upload speed slow?

Data transfer speed depends on signal strength and interfering radio sources like electrical generators or other mobile hotspot Wi-Fi devices. Review the following possibilities:

- Check your signal strength and network type (for example, LTE 4G is generally faster than 3G).
- Check Wi-Fi interference by powering the mobile hotspot off and on to find a better Wi-Fi channel.
- Change the Wi-Fi band from 2.4 GHz to 5 GHz.
- If the network signal is low, consider using external antennas or cradle the mobile hotspot with built-in high-gain antennas.

The LCD screen is not lit. How do I know if the mobile hotspot is still powered on?

The LCD screen dims to save energy. The LED continues to blink slowly to indicate that the mobile hotspot is still powered on. To wake the mobile hotspot, press and quickly release the **Power** button.

How do I find my computer's IP address?

The steps for finding your computer's IP address depend on the operating system. If your device runs an operating system not listed here, see the appropriate operating system documentation.

Find the IP address on a Windows 7, Windows Vista, or Windows XP

device To find the IP address on a Windows 7, Windows Vista, or Windows XP device:

- 1. Open the command prompt window:
 - a. Select Start > Run.
 - b. Enter cmd or command and click the OK button.
- 2. At the command prompt, enter **ipconfig** and press **Enter**.
- 3. Write down the IP address for the entry that relates to the Wi-Fi network connection. The IP address might be listed under IPv4 Address or something similar.

Find the IP address on a Windows 8 device To find the IP address on a Windows 8 device:

- 1. In the Charms bar, click the **Search** button.
- 2. Select Command Prompt.
- 3. At the command prompt, enter **ipconfig** and press **Enter**.
- 4. Write down the IP address for the entry that relates to the Wi-Fi network connection. The IP address might be listed under IPv4 Address or something similar.

Find the IP address on a Mac OS X device To find the IP address on a Mac OS X device:

- 1. From the Apple menu, select **System Preferences > Network**.
- Select the Wi-Fi adapter.
 The IP address is displayed in the right pane.

Find the IP address on devices running other operating systems To find

the IP address on devices running other operating systems: Refer to the user documentation for your operating system or computer.

How do I find a device's MAC address?

You must know the MAC address for a device when you are doing the following:

- Assigning an IP address based on a MAC address (when using DHCP)
- Allowing or denying devices access to your Wi-Fi network (MAC filtering)

Tip: To display a list of connected devices, including the MAC address of each device, go to the mobile hotspot web page and log in as an administrator. The connected devices list appears on the left side of the home page. Click the device links to display IP and MAC addresses.

The steps for finding a device's MAC address depend on the operating system. If your device runs an operating system not listed in the following procedures, see the appropriate operating system documentation.

Find the MAC address on a Windows 7, Vista , or XP device To find the MAC address on a Windows 7, Vista , or XP device:

- 1. Open the command prompt window:
 - a. Select Start > Run.
 - b. Enter cmd or command and click the OK button.
- 2. At the command prompt, enter **ipconfig /all** and press **Enter**.
- 3. Write down the physical address for the entry that relates to the Wi-Fi network connection.
 - It appears as a series of numbers and letters. This is the MAC address of your Wi-Fi adapter.

Find the MAC address on a Windows 8 device or newer To find the MAC address on a Windows 8 device or newer:

- 1. In the **Charms** bar, click the **Search** button.
- 2. Select Command Prompt.
- 3. At the command prompt, enter **ipconfig /all** and press the **Enter** button.
- 4. Write down the physical address for the entry that relates to the Wi-Fi network connection.

It appears as a series of numbers and letters. This is the MAC address of your wireless adapter.

Find the MAC address on a Mac OS X device To find the MAC address on a Mac OS X device:

- 1. From the Apple menu, select **System Preferences > Network**.
- 2. Select the Wi-Fi adapter that is connecting to the routing hardware.
- 3. Select Advanced.
- 4. Select **Ethernet**.

The Ethernet ID is displayed. This is the same as the MAC address.

What do I do if the Wi-Fi network name doesn't appear in the list of networks?

If you do not see the mobile hotspot's Wi-Fi networks from your Wi-Fi-enabled device, try these suggestions:

- Refresh the list of networks.
- If the LCD screen is dark, the Wi-Fi radio might be asleep. Press the **Power** button to wake the mobile hotspot.
- Check the Wi-Fi band settings and consider using the 2.4 GHz band for increased compatibility with client devices.

6

Troubleshooting

This chapter provides suggestions for troubleshooting problems that might arise when you are using your mobile hotspot. The chapter covers the following topics:

- <u>View Alerts</u>
- Reset the Mobile Hotspot

View Alerts

Your mobile hotspot displays alerts to advise you of device status changes. See <u>View Messages From the Mobile Hotspot Web Page</u> on page 19.

SIM Not Installed

Ensure that the micro SIM card is installed correctly. The mobile hotspot comes with a preinstalled SIM. For information about replacing a SIM, see <u>Replace a SIM Card</u> on page 11.

SIM Error - Check SIM

Ensure that your network service provider's micro SIM card is inserted in the mobile hotspot. If a problem still exists, contact customer service. The micro SIM card might be damaged and need replacing.

SIM Locked

You can unlock the SIM.

To unlock the micro SIM card from the mobile hotspot web page:

- 1. Contact customer service for the PIN to unlock the micro SIM card.
- 2. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 3. Enter http://attwifmanager/.

The mobile hotspot web page displays.

4. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

- 5. Enter the micro SIM PIN when prompted.
- 6. Click the **Save** button.

Your settings are saved.

Temperature-Related Alerts

The mobile hotspot is designed to work over a wide temperature range. (For more information, see <u>Environmental Specifications</u> on page 87.) The mobile hotspot shuts down automatically if it goes out of the supported temperature range.

Move the device to an area where the temperature is more suitable and, if the mobile hotspot is too warm, make sure that the area is well ventilated and air can circulate around the device.

Note: The battery might not recharge if the mobile hotspot is outside the operating temperature range.

Connection Alerts

Some connection alerts include instructions for resolving them. For other connection alerts, including those in the following table, contact customer service for assistance.

Table 2. Connection alerts

Alert	Description
8	Operator determined barring
25	LLC or SNDCP failure
26	Insufficient resources
27	Missing or unknown APN
28	Unknown PDP address or type
29	User authentication failed
30	Activation rejected by GGSN
32	Service Option not supported
33	Service Option not subscribed
34	Service Option temporarily out of order
36	Regular deactivation
37	QoS not accepted
38	Network failure
39	Reactivation required
40	Feature not supported

Table 2. Connection alerts (Continued)

41	Semantic error in the TFT operation	
42	Syntactical error in the TFT operation	
43	Unknown PDP context	
44	PDP context without TFT already activated	
45	Semantic errors in packet filters	
46	Syntactical errors in packet filters	
67	Connection error	
81	Invalid transaction identifier value	
95	Semantically incorrect message	
96	Invalid mandatory information	
97	Message type nonexistent or not implemented	
98	Message type not compatible with the protocol state	
99	Information element non-existent or not implemented	
100	Conditional IE error	
101	Message not compatible with the protocol state	
111	Protocol error, unspecified	
256	Invalid Connection ID	
258	Invalid PRI NSAPI	
259	Invalid Field	
260	SNDCP Failure	
261	RAB Setup Failure	
262	No GPRS Context	
263	PDP Establish Max Timeout	
264	PDP Activate Max Timeout	
265	PDP Modify Max Timeout	
266	PDP Inactivate Max Timeout	
267	PDP Lower layer Error	

Table 2. Connection alerts (Continued)

268	PDP Duplicate
269	UE RAT Change

Reset the Mobile Hotspot

You can reset the mobile hotspot to the factory settings. This is useful if you forgot your attadmin login password for the mobile hotspot web page.

If you reset the mobile hotspot, all of your customizations are lost. If you want to keep them, save them before doing the reset and restore them afterward. See <u>Back Up and Restore Mobile Hotspot Settings</u> on page 56.

Note: When you reset the mobile hotspot, any currently connected devices lose access and must be reconnected after the mobile hotspot restarts.

Reset the Mobile Hotspot From the Mobile Hotspot

Start with the mobile hotspot turned on.

To reset the mobile hotspot directly from the mobile hotspot:

Press and hold the **power** button for at least 15 seconds.
 The mobile hotspot enters factory reset mode and first displays the message,
 "Shutting down," followed by the message "Continue holding Power button to reset all settings to factory default," and then "Resetting Device. Please do not power off."

Note: If you release the **power** button too soon, the mobile hotspot turns off instead of resetting.

Reset the Mobile Hotspot From the Mobile Hotspot Web Page

To reset the mobile hotspot to its factory settings:

- 1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
- 2. Enter http://attwifmanager/.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default password is **attadmin**. The password is case-sensitive.

The home page displays.

4. Select Settings > General > Software and Reset.

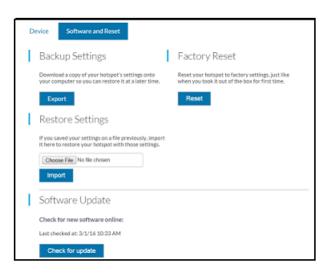

5. Click the **Reset** button.

A message displays telling you that devices currently connected will lose Internet access.

6. Click the **OK** button.

The mobile hotspot returns to its factory settings.



A Specifications

This appendix covers the following topics:

- Battery Specifications
- <u>Display Specifications</u>
- Environmental Specifications
- Mechanical Specifications
- Mobile Band Specifications
- Package Contents
- Port Specifications
- Security Specifications
- WiFi Specifications

Battery Specifications

Battery specifications:

- Removable Li-ion battery
- Up to 11 hours of continuous usage

Note: 11+ hour battery life is achieved by the following heaviest case: stream YouTube for 1 hour, followed by 30 minutes of idle time, and then repeat for over 11 hours.

Display Specifications

The mobile router includes an 1.77 in. LCD display.

Environmental Specifications

Table 3. Recommended operating and storage temperatures

Environment	Temperature
Operating temperature	0°C to 35°C (32 F to 95°F)
Storage temperature	-10°C to +60°C (14°F to 140°F)

Mechanical Specifications

Table 4. Physical dimensions

Parameter	Dimension
Weight	78 g (2.75 oz) without battery, 136 g (4.80 oz) with battery
Length	110 mm (4.33 in.)
Width	68 mm (2.68 in.)
Thickness	15.4 mm (0.61 in.)

Mobile Band Specifications

Table 5. Mobile Bands

Technology	Band
4G/LTE bands	1, 2, 3, 4, 5, 7, 12, 14, 29, 30, 66
3G fallback support (DC-HSPA+)	850, 1900, 2100

Package Contents

Your mobile router package includes the following:

- AT&T Unite Express 2 (AirCard 797S Mobile Hotspot)
- Pre-installed SIM card
- Removable lithium ion battery
- AC charger
- USB cable
- Quick Start Guide

Port Specifications

The mobile router provides one micro-USB 2.0 port.

Security Specifications

Supported security features:

- Content filtering/Parental controls
- Guest WiFi with optional timer
- WiFi security encryption
- WiFi Protected Setup (WPS)
- VPN pass-through
- NAT firewall
- Password protected administration UI

WiFi Specifications

WiFi support:

- WiFi 802.11ac, 2x2 MIMO
- Dual-Band 2.4/5 GHz, standalone or simultaneous

AirCard 797 Mobile Hotspot	
 Multiple SSID/Guest WiFi Support with optional timer WPS (WiFi Protected Setup) 	