



Quick Installation Guide

Gigabit wireless LAN router

MZK-WG300FF14


Thank you for purchasing MZK-WG300FF14. Before using, please check if all accessories are in the package. If not, please contact your dealer directly.

Package Contents:

1. MZK-WG300FF14 Router x1
2. Quick Installation Guide x1
3. Safety and Warranty Sheet x1
4. AC Power Adapter x1
5. LAN Cable x1
6. USB Cable x1

1 Parts


1.1 Front Panel LEDs

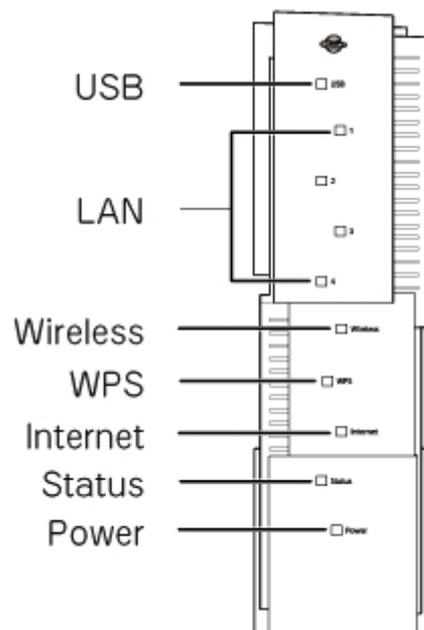

LEDs	Status	Meaning
Power	Solid Green	When MZK-WG300FF14 is powered on, the Power LED will be solid green.
	Off	The Power LED is off when AC power adapter is not connected.
Status	Amber	When MZK-WG300FF14 is powered on, a self-test will be started and the Status LED will be amber for a few minutes, and then will turn off. If there is any error on the router, it will stay amber.

	Green	After self-test and start-up is complete, and the router is working fine, the Status LED will be green.
Internet	On/Blinking	When network connection between MZK-WG300FF14 and a modem is established, the Internet LED will be on. The Internet LED will be blinking when data is being transmitted or received via the Internet (WAN) Port.
	Off	The LED is off when there is no connection between the MZK-WG300FF14 and a modem.
WPS	On	When a host has established wireless connection to MZK-WG300FF14, the LED is on.
	Off	LED is off when there is no wireless connection to MZK-WG300FF14.
Wireless	Blinking	The LED will be blinking when wireless reception works fine.
LAN 1-4	On	When network connection between MZK-WG300FF14 and a host is established, the LED will be on.
	Blinking	The LED will be blinking when data is being transmitted or received between MZK-WG300FF14 and a host via the LAN Port.
USB	On	LED is on when a USB device is connected to USB port.

1.2 Back Panel Ports and Buttons

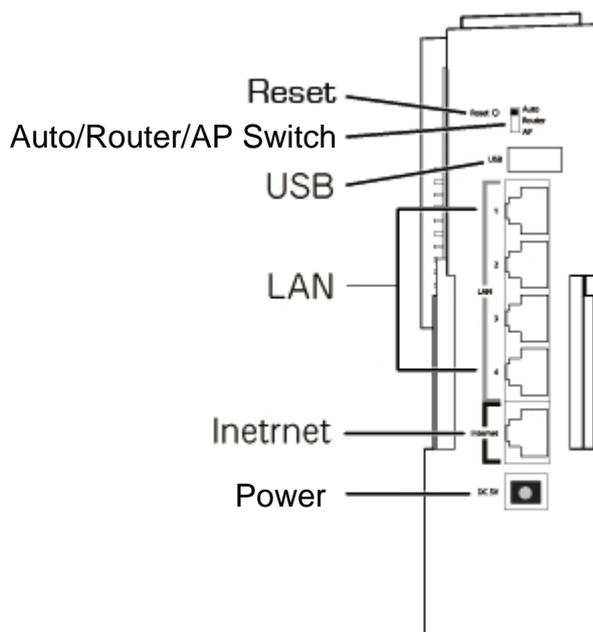


Ports	Function
Power Socket	To power up the MZK-WG300FF14, insert the adapter plug into this socket, and insert the other end of AC adapter into the power source.
Internet	Connect a DSL or Cable Modem into this Internet port in order to link to the Internet (WAN). If your modem came with a cable, use the supplied cable. Otherwise, use a standard LAN cable.
LAN 1-4	Use standard LAN cables (RJ45) connectors to connect your PCs (hosts) to these ports. Any LAN port can be connected with a network switch/hub, if needed.
USB	Use this port to connect a USB device.

Caution: Use the AC adapter that comes with the MZK-WG300FF14. If a different AC adapter is used and caused damage to this device, warranty will not be applicable in this case.

Buttons	Function
Auto/Router/AP	Use this switch to shift between Auto, Router, or AP mode.
Reset	Use this switch to reset to default settings. Press the button for 3 to 5 seconds, and then unplug the power cord, but do not release the Reset button. Wait for 3 seconds before plugging the power cord back. Release the Reset button and MZK-WG300FF14 will automatically restart and back to default settings.

1.3 Bottom Button

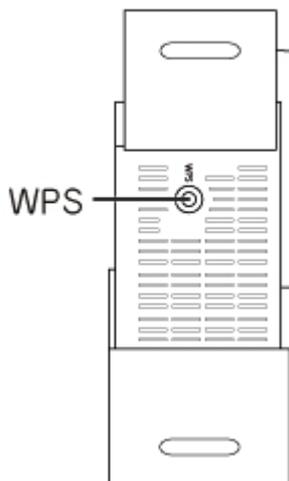

Button	Function
WPS	Press this button to establish a wireless connection between MZK-WG300FF14 and a station (remote device/host).

*Operation temperature is 0~40°C.

2 Installation and Setup

2.1 Installing the Device

Steps:


1. Open the MZK-WG300FF14 package. Check if all items are complete.
2. Choose a preferred installation site, where this router will be installed.
3. To connect PCs using wired connection, connect the LAN cables from PCs to the LAN ports.
4. Connect the DSL or Cable Modem network cable to the Internet port of MZK-WG300FF14.
5. Power on the DSL or Cable Modem. Then power on MZK-WG300FF14, that is, connect the AC power adapter (one end) to power source and then insert the adapter plug (other end) into the power socket of MZK-WG300FF14.

2.2 Network Setup

Please use a web browser to configure MZK-WG300FF14 (wireless router). A computer with wired Ethernet connection to this wireless router is required for first time configuration.


Steps:

1. Set your computer to obtain an IP address from MZK-WG300FF14 router.
 - a. Open Control Panel in Windows OS (i.e., click "Start" -> "Settings" -> "Control Panel").
 - b. Double-click "Network Connections" icon.
 - c. Double-click "Local Area Connection".
 - d. The "Local Area Connection" window will appear. Click "Properties" button.

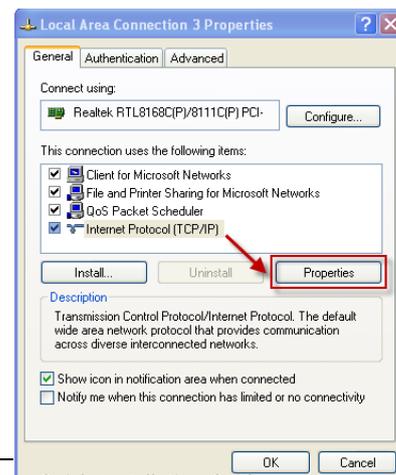


- e. The “Local Area Connection Properties” window will appear. Select “Internet Protocol (TCP/IP)”, and then click “Properties” button.


2. Select “Obtain an IP address automatically” and “Obtain DNS server address automatically”. Click “OK”. Close the “Local Area Connection Properties” window, and then close the “Network Connections” screen.

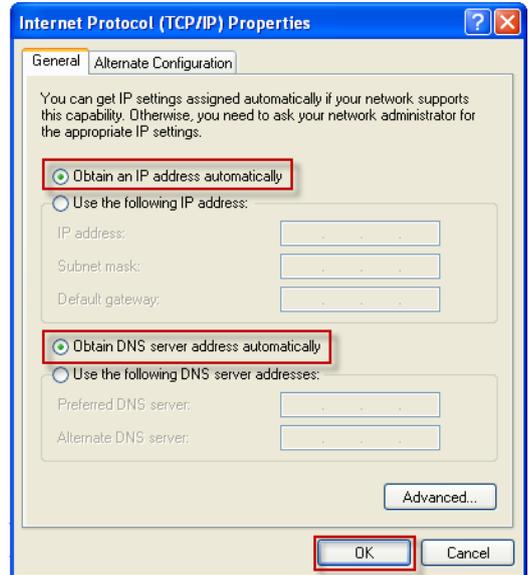

3. After the IP address setup is complete, open command prompt (i.e., click “Start” -> “Run...”), and then type ‘cmd’ and click “OK”.

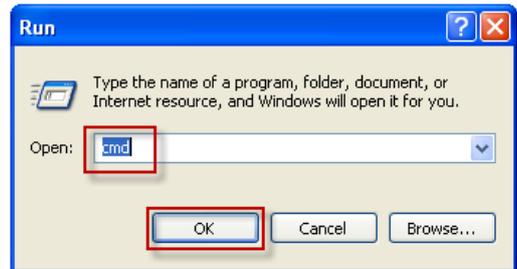

4. Input “ipconfig” command and press Enter key. The value of IP Address is the IP address assigned to this PC. The Default Gateway value is the IP address of MZK-WG300FF14 router. In this example, it is 192.168.111.1.

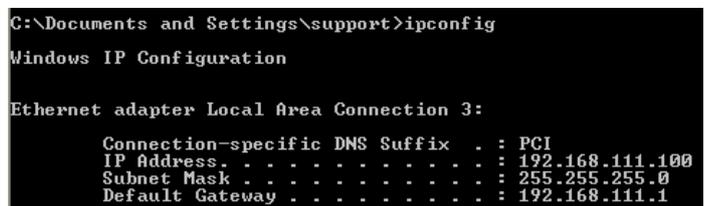

NOTE: The Default Gateway value may be different.

5. Open web browser and enter “mf.setup” in the address bar. A login window will appear. Enter user name and password, and then click “OK”. The web management interface of MZK-WG300FF14 router will be displayed.

Default user name: **admin**
 Default password: **password**

2.3 Web Management Interface

The MZK-WG300FF14 router has a built-in HTTP server. This enables you to connect to the router and configure it using a web browser.

1. To login to the web management interface, open a web browser.
2. Enter "mf.setup" in the address bar.
3. A login window will appear.
4. Enter the user name (default is **admin**) and password (default is **password**). The homepage will be displayed.

NOTE: The password can be changed in Administration -> Password.

2.4 Configuration Using Setup Wizard

The Setup Wizard will guide you to configure the router for the first time.

1. Click "Setup Wizard" on the left pane. In "Detect WAN Connection" page, click "Start Auto Detect" button. The router will start to detect your WAN access type.

2. The WAN Access Type will be shown in Detect Result. Click "Next>>".

NOTE: If the Setup Wizard does not detect a WAN connection type, you must select one WAN Access Type, either Static IP, DHCP Client, or PPPoE, in the WAN Interface Setup page (the next step).

3. The WAN Interface Setup page will be displayed. Configure the necessary settings of WAN Access Type. Click "Next>>" when done.

NOTE: The WAN Interface Setup can also be configured with customized settings in Network -> Internet Service Setup.

The screenshot shows the "Setup Wizard" interface. At the top, it says "Setup Wizard" and provides a brief description: "This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type." Below this is a section titled "WAN Interface Setup" with the following fields:

WAN Access Type	Static IP
IP Address	172.1.1.1
Subnet Mask	255.255.255.0
Default Gateway	172.1.1.254
DNS	172.1.1.123

At the bottom of the form are three buttons: "Cancel", "<<Back", and "Next>>".

Static IP

Enter a WAN IP address, Subnet Mask, Default Gateway, and DNS Server IP address provided by your ISP.

The screenshot shows the "Setup Wizard" interface. At the top, it says "Setup Wizard" and provides a brief description: "This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type." Below this is a section titled "WAN Interface Setup" with the following field:

WAN Access Type	DHCP Client
-----------------	-------------

At the bottom of the form are three buttons: "Cancel", "<<Back", and "Next>>".

DHCP Client

In DHCP Client, the router will automatically get a dynamic IP from your ISP.

PPPoE

Select the PPPoE Type and change the Multi-PPPoE Provider, if necessary.

Type the User Name (Login Name or Login Account), Password, and Service Name (optional) provided by your ISP.

Click "Connect" to enable connection.

- The LAN Interface Setup page will be displayed. If needed, setup the LAN port IP Address and Subnet Mask of the router. Click "Next>>" when done.

NOTE: The LAN Interface Setup can also be configured with customized settings in Network -> LAN Interface Setup.

- The Wireless Basic Settings page will be displayed. Configure the parameters as necessary. Click "Next>>" when done.

NOTE: The Wireless Basic Settings can also be configured with customized settings in Wireless -> Basic.

Setup Wizard

This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point.

Wireless Basic Settings

Band 2.4 GHz (B+G+N) ▼

SSID ap-game-5dd8d2

Channel Width 40MHz ▼

Channel Number Auto ▼

Cancel <<Back Next>>

Band – allows you to select the 802.11 standards that will be allowed to connect to the wireless router

SSID – (service set identifier) allows you to enter a unique name for the wireless LAN. It is recommended to change the default SSID for better security.

- The Wireless Security Setup page will be displayed. Select the encryption type to prevent any unauthorized access to your wireless network. Click “Finish”.

NOTE: The Wireless Security Settings can also be configured with customized settings in Wireless -> Security.

Setup Wizard

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

Wireless Security Setup

Encryption None ▼

Cancel <<Back Finish

Encryption – choose your preferred encryption type

- The Internet access setup is complete. Your router may reboot at this point.

NOTE: If your PC/host system is still cannot get internet access, please reboot your DSL/cable modem. Contact also your ISP for trouble shooting.

If wireless stations will connect to the router, the wireless stations must use the same settings, such as SSID, encryption type, etc.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.