

WIXFMM-109 802.16-2005 2.5GHz Personal Hot Spot

User Guide

Version 1.0

Gemtek Technology Co., Ltd.
www.gemtek.com.tw

No.1 Jen-Ai Road, HsinChu
Industrial Park, HuKou Hsiang,
HsinChu Hsien, Taiwan, R.O.C.

Gemtek
Wireless Broadband Anywhere

Copyright

This DOCUMENT is copyrighted with all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of Gemtek Technology Co. Ltd.

Notice

Gemtek reserves the right to change specifications without prior notice.

While the information in this document has been compiled with great care, it may not be deemed an assurance of product characteristics. Gemtek shall be liable only to the degree specified in the terms of sale and delivery.

The reproduction and distribution of the documentation and software supplied with this product and the use of its contents is subject to written authorization from Gemtek.

Contents

Copyright	2
Notice	2
Contents	3
About this Guide.....	7
Purpose.....	7
Conventions Used in this Document	7
Chapter 1 – Introduction	7
Product Overview	8
Product Package	8
Connector and Buttons	8
LED Indicators.....	9
Chapter 2 – Installation	10
Chapter 3 – Web Interface	12
Chapter 4 – Reference Manual.....	13
Personalize	15
Personalize Password	23
Personalize Device Time	24
Personalize Device Name	25
Personalize Restore To Factory	26
Internet.....	15
Internet WiMAX Security.....	15
Internet Internet Protocol	16
Internet Firewall	17
Internet Dynamic DNS	19
Internet WiFi.....	20

Local Address.....	27
Local Address DHCP Server.....	27
Local Address Lease Status.....	28
Local Address Lease Reservation.....	29
Port Forwarding.....	30
Port Forwarding Basic.....	30
Port Forwarding Forwarding.....	31
Control Panel.....	32
Control Panel Software.....	32
Control Panel System.....	33
Control Panel Power manage.....	34
Control Panel About.....	35
Status.....	36
Status WiMAX Status.....	36
Status Device Status.....	37
Status Syslog.....	38
Reboot /Log out/ Reconnect.....	39
關於這份使用手冊.....	39
目的:.....	40
如何閱讀這份文件.....	40
第一章 – 簡介.....	40
產品介紹:.....	41
Product Package.....	41
連結孔/按鈕介紹.....	41
燈號定義.....	43
第二章 – 安裝.....	44
第三章 – 網頁介面.....	46

第四章 – 使用者介面說明	46
個人化	48
個人化 密碼	54
個人化 設備時間	55
個人化 當前設備名稱	56
個人化 恢復原廠設定	57
網際網路設定 WiMAX 設定	48
網際網路設定 網際網路	49
網際網路設定 防火牆	50
網際網路設定 動態 DNS	51
網際網路設定 WiFi	52
區域網路設定	58
區域網路設定 DHCP 伺服器	58
區域網路設定 租約狀態	59
區域網路設定 租約保留	60
虛擬伺服器設定	61
虛擬伺服器設定 基本	61
虛擬伺服器設定 轉發	62
系統管理	63
系統管理 軟	63
系統管理 語言切換	64
系統管理 電源管理	65
系統管理 關於	66
狀態	67
狀態 WiMAX 狀態	67
狀態 設備狀態	68
狀態 系統紀錄	69

重新啓動/登出/重新連結..... 70




About this Guide

Purpose

This document provides information and procedures on installation and configuration of WIXFMM-109 802.16-2005 2.5GHz Personal Hotspot. You could utilize the theoretical information in this guide to setup your device

Conventions Used in this Document

The following typographic conventions and symbols are used throughout this document:

	Very important information. Failure to observe this may result in damage.
	Important information that should be observed.
	Additional information that may be helpful but which is not required.
bold	Menu commands, buttons and input fields are displayed in bold


Chapter 1 – Introduction

Product Overview

 
Thank you for choosing GlobalMobile 802.16-2005 2.5GHz Personal Hotspot. Compliant with 802.16-2005 WiMAX standard, WIXFMM-109 is a comprehensive device which can connect to WiMAX network and also provides Wi-Fi connectivity for multiple users.

Product Package

	Item	Qty
1	WIXFMM-109 802.16-2005 2.5GHz Personal Hotspot	1
2	User Manual	1
3	Power Adapter	1
4	USB cable	1
5	Battery	1


 If any of the items mentioned above are missing or damaged, please contact our customer support immediately.

Connector and Buttons

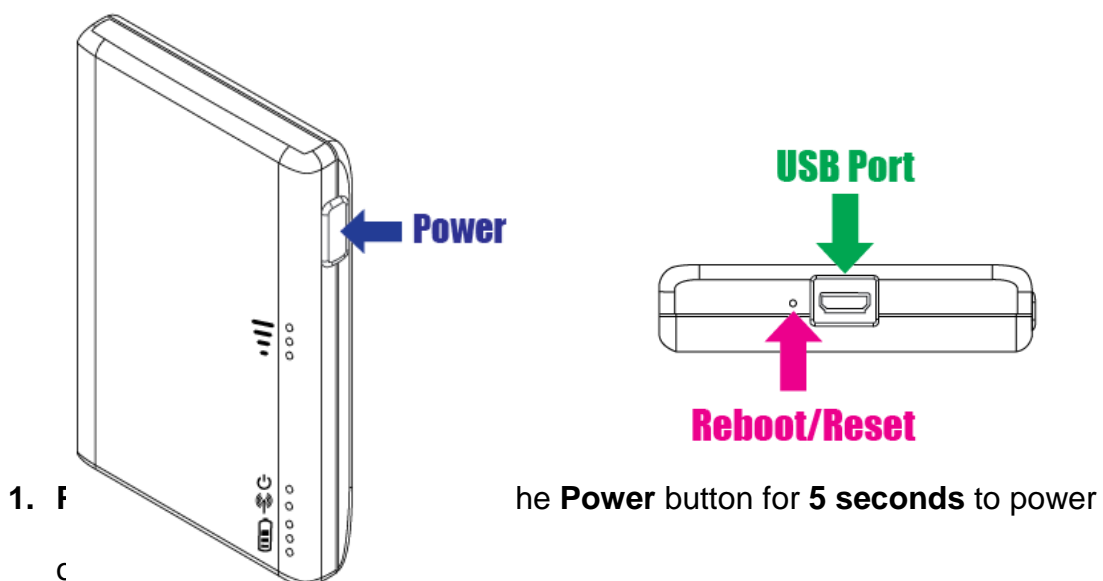

2. **Reboot/Reset Button:** Press and hold the **Reboot/Reset** button for **less than 5 seconds** to reboot the device. Or press and hold the **Reboot/Reset** button for **more than 5 seconds** to reset the device to factory default.
3. **USB Port:** This port is to connect your WIXFMM-109 with a PC or charge the built-in battery.

 LED Indicators

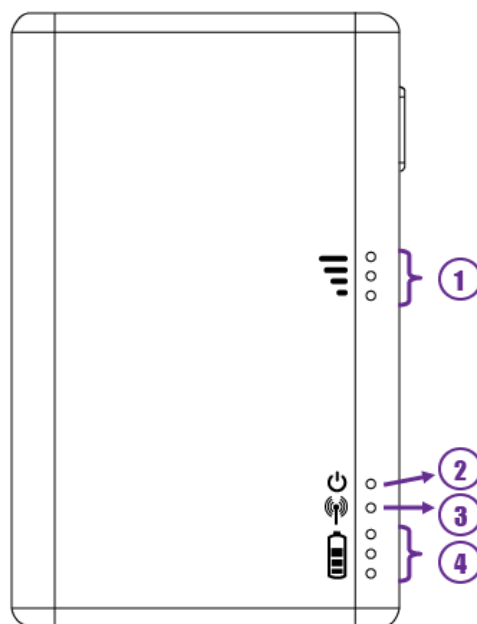


WIXFMM-109 LED Indicators

1.	WiMAX Signal Strength	Blue	Steady ON	CINR < 14dB
		Blue	Steady ON	14dB < CINR < 23dB
		Blue	Steady ON	23dB < CINR
2	Power		ON	Power ON
		Blue	OFF	Power OFF
			Flashing	Booting
3	Wi-Fi	Blue	ON	Wi-Fi ON

			OFF	Wi-Fi OFF
			Flashing	Wi-Fi Traffic
4.	Battery	Green	Steady ON	Battery > 66%
		Amber	Steady ON	33% < Battery < 66%
		Red	Steady ON	Battery < 33%
			Flashing	Charging

Chapter 2 – Installation

 Please follow the steps below to install the device:

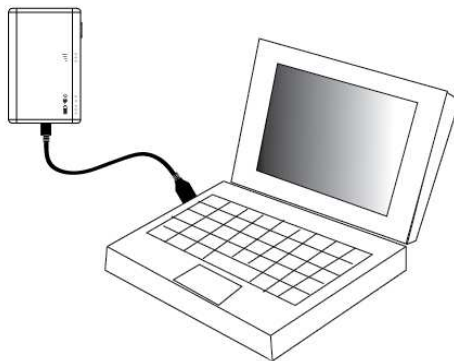

WIXFMM-109 Installation

 
- Step1:** Connect the device to your PC with a USB cable provided.
- Step2:** The device will start the boot process. Please wait for about 60 seconds to let the boot process complete.
- Step3:** New Hardware Wizard will pop-up.



Found New Hardware Wizard – 1

Step4: Select **Cancel** and not use Wizard for install.

Step5: Select the **connected drive** and click.

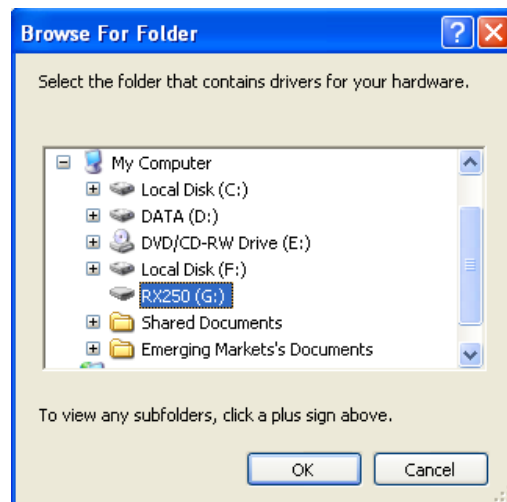

Select driver path

Step6: You will see the “Setup.exe” file, click it and proceed set up process.

Step7: Now you can start browsing the Internet or configure your device using web interface

Chapter 3 – Web Interface

How can you configure your device through the web interface?

Step1: Open the Web browser and enter the default IP address of the WIXFMM-109, which is : <http://192.168.15.1/>

Step2: Your default password is : gmadmin

Step3: The page shown here will be displayed on your browser. You can now configure the device settings.



WIFMM-109 User Interface

Chapter 4 – Reference Manual

The main menu is located at the left side of the screen and each main menu item contains sub-items on the top right of the screen. You can refer to the menu structure is given below:

Menu Items	Sub Items	Menu Items	Sub Items
Personalize	Password Device Time Device Name Restore To Factory	Status	WiMAX Status Device Status Syslog
Internet	WiMAX Security Internet Protocol Firewall Dynamic DNS	Reboot	-

	WiFi		
Local Address	DHCP Server Lease Status Lease Reservation	Reconnect	-
Port forwarding	Basic Forwarding		
Control Panel	Software System Power Management About		

Menu Structure Table

	<p>Please click Apply button every time whenever the settings are changed.</p>
---	---

Internet

Internet | WiMAX Security

The screenshot shows the 'WiMAX Security' configuration interface. The left sidebar contains a navigation menu with the following items: Personalize, Internet (selected), Local Address, Port Forwarding, Control Panel, and Status. Below the menu are three buttons: REBOOT, LOGOUT, and RECONNECT. The main content area has a header with 'WiMAX Security' and sub-tabs for Internet Protocol, Firewall, Dynamic DNS, and WiFi. The configuration fields are as follows:

Authentication Method	EAP-TTLS-MSCHAPV2
User Name	activate@g1.com.tw
Password
Password Confirmation

At the bottom of the configuration area, there are two buttons: Undo and Apply.

WiMAX Security - EAP-TTLS-MACHAPV2

Select **Internet > WiMAX Security** to setup the security method.

- ◆ **Authentication Method:** You should always fix EAP-TTLS-MACHAPV2 selection when you connecting Global Mobile network.
- ◆ **User Name:** Enter the username provided by Global Mobile (It allows 64 bytes ASCII code)
- ◆ **Password:** Enter the password provided by your Global Mobile. (It allows 64 bytes ASCII code)
- ◆ **Password Confirmation:** Re-enter the password again for confirmation.
- ◆ **Undo:** Click Undo to clear the changes you have made on this window.
- ◆ **Apply button:** The changes that you have made on this window can be saved in the device by clicking the **Apply** button.

Internet | Internet Protocol

The screenshot displays the 'Internet Protocol' configuration page. On the left, a blue sidebar contains a navigation menu with the following items: Personalize, Internet (highlighted), Local Address, Port Forwarding, Control Panel, and Status. Below the menu are three buttons: REBOOT, LOGOUT, and RECONNECT. The main content area has a dark blue header with the Gemtek logo and the text 'GLOBAL MOBILE CORP.' on the left. The right side of the header contains navigation links: WiMAX Security, Internet Protocol (active), Firewall, Dynamic DNS, and WiFi. The main content area is white and contains the following fields: 'Connection Mode' with a dropdown menu showing 'DHCP', and 'Host Name' with an empty text input field. At the bottom of the main content area are two buttons: 'Undo' and 'Apply'.

Internet Protocol

Select **Internet > Internet Protocol** to configure the internet protocol.

- ◆ **Connection Mode:** Display the current connection mode of device with the WiMAX network.
- ◆ **Host Name:** Enter the host name for DHCP server to identify your device.
- ◆ **Undo:** Click the **Undo** button to clear the changes that you have made on this window.
- ◆ **Apply:** The changes that you have made on this window can be saved in the device by clicking the **Apply** button.

Internet | Firewall

Global Mobile Corp. (GLOBAL MOBILE CORP.)

WiMAX Security | Internet Protocol | **Firewall** | Dynamic DNS | WiFi

Personalize

Internet

Local Address

Port Forwarding

Control Panel

Status

REBOOT

LOGOUT

RECONNECT

Operation Mode: Gateway Mode

Enable Firewall:

Enable Web Login from Internet:

Web Login Port from Internet: 8080

Enable ping from Internet:

Undo Apply

Firewall

Select **Internet > Firewall** to configure the firewall feature that is built-in to the device. The firewall feature can be used to block unauthorized access while allowing only the authorized communications from the Internet. This feature also allows the device to be managed over the Internet by authorized personnel.

- ◆ **Operation Mode:** Display the operation mode of firewall.
- ◆ **Enable Firewall:** Click the checkbox to enable device firewall.
- ◆ **Enable Web Login from Internet:** Enabling this option will allow you to access the device from other networks.(You can access this device via WAN side <https://192.168.15.1>)
- ◆ **Web Login Port from Internet:** Define a specific port number for security access control (Matches numbers in range of 0 through 65536).

- ◆ **Enable ping from internet:** The device will respond to a ping request from the internet if this option is enabled.
- ◆ **Undo:** Click the **Undo** button to clear the changes that you have made on this window.
- ◆ **Apply:** The changes that you have made on this window can be saved in the device by clicking the **Apply** button.

Internet | Dynamic DNS


Name	User	Password	Host	Enable
regfish	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
dyndns	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
hn	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
zo	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
changeip	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
noip	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
ods	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
ovh	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
eurodyndns	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>

Dynamic DNS

Select **Internet > Dynamic DNS** to configure the DDNS settings. (The device only provides the listed DNS service providers.)

- ◆ **User:** Enter the username provided by your DNS service provider.
- ◆ **Password:** Enter the password provided by your DNS service provider.
- ◆ **Host:** Enter the host provided by your DNS service provider.
- ◆ **Enable:** Enable the DNS service provider by checking this checkbox.
- ◆ **Undo:** Click the **Undo** button to clear the changes that you have made on this window.
- ◆ **Apply:** The changes that you have made on this window can be saved in the device by pressing the **Apply** button.

Internet | WiFi

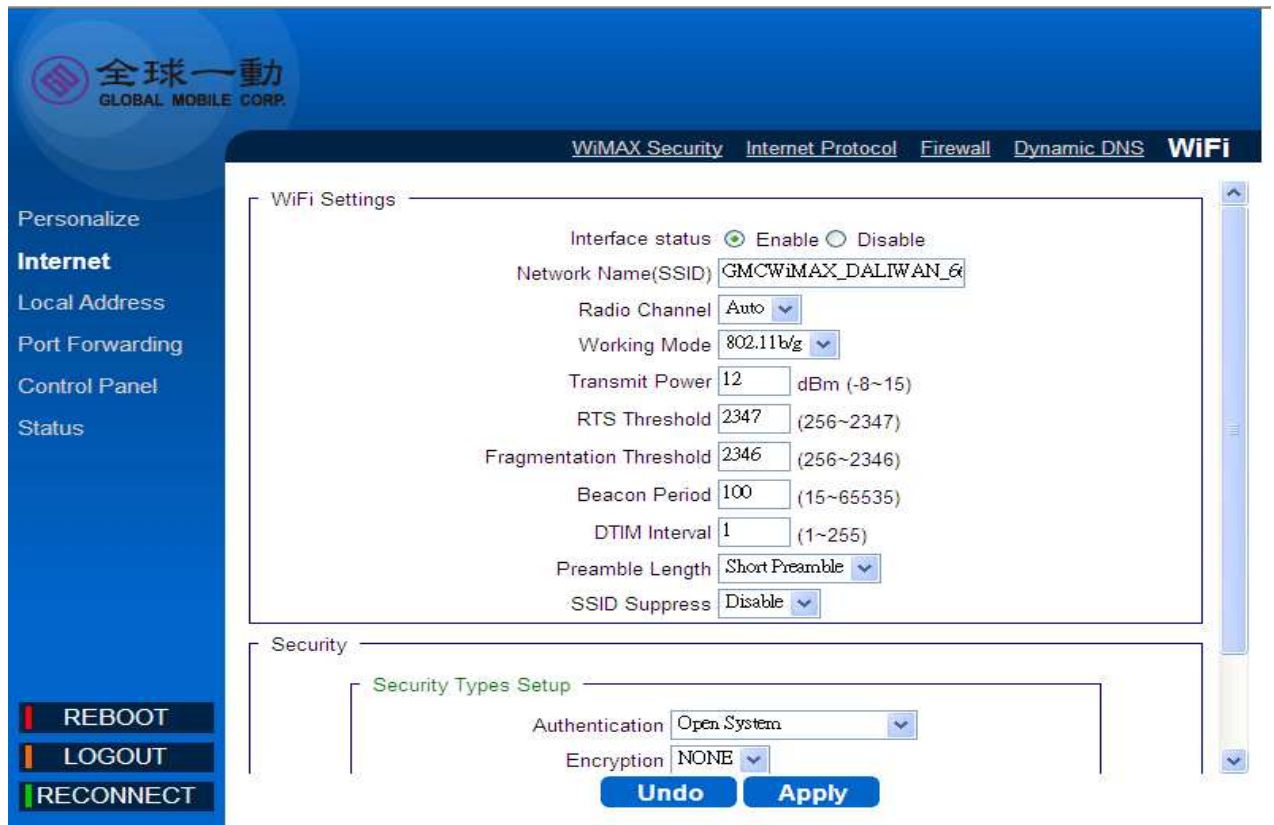 

WiFi

Select **Internet** > **WiFi** to enable/disable and configure the Wi-Fi interface.

WiFi Settings:

- ◆ **Interface status:** Enable or disable the Wi-Fi interface by clicking this radio button.
- ◆ **Network Name (SSID):** Define the service set identifier for your Wi-Fi network access. (Maximum 32 bytes string)
- ◆ **Radio Channel:** Select the appropriate channel for your Wi-Fi network.

- ◆ **Working Mode:** Select the wireless operation mode for your Wi-Fi network. (The selection contains 802.11b/g, 802.11b only and 802.11g only)
- ◆ **RTS Threshold:** Specify the packet size threshold of the device by changing the request-to-send (RTS) value. (Range : 256 to 2432)
- ◆ **Fragmentation Threshold:** Specify the size of the fragmented packets. (The default maximum value 2346 is recommended.)
- ◆ **Beacon Period:** Enter the amount of time between beacons in kilomicroseconds.
- ◆ **DTIM Interval:** Specify the time interval between each DTIM (Delivery Traffic Indication Message) contained in Beacon.
- ◆ **Preamble Length:** Define the length of preamble, either short or long.
- ◆ **SSID Suppress:** Enable or disabling suppression of SSID broadcasting.

Security:

- ◆ **Authentication:** Select the Wi-Fi security method.
- ◆ **Encryption:** Select the Wi-Fi encryption algorithm.

ACL Setting:

- ◆ **System Default:** Select the filter action for the device access control.

1. **Disable:** Select disable to disable access control (ACL) feature.



2. **Allow:** To create a MAC filter list that allows the specific clients to have access to the wireless network.

- **Insert:** Click Insert to add MAC address (up to 10) to the list.
- **Del:** Click Del to remove MAC address from the list.

ACL Settings

System Default Allow ▼

Insert

No.	MAC	Delete
1	<input type="text"/>	Del
2	<input type="text"/>	Del
3	<input type="text"/>	Del
4	<input type="text"/>	Del
5	<input type="text"/>	Del

3. **Deny:** To create a MAC filter list that will block the specific clients to have access to the wireless network.

- **Insert:** Click Insert to add MAC address (up to 10) to the list.
- **Del:** Click Del to remove MAC address from the list.

ACL Settings

System Default Deny ▼

Insert

No.	MAC	Delete
1	<input type="text"/>	Del
2	<input type="text"/>	Del
3	<input type="text"/>	Del
4	<input type="text"/>	Del
5	<input type="text"/>	Del

- ◆ **Undo:** Click the **Undo** button to clear the changes that you have made on this window.
- ◆ **Apply:** The changes that you have made on this window can be saved in the device by clicking the **Apply** button.

Personalize

Personalize | Password

The screenshot displays the 'Personalize > Password' configuration page. The header includes the Gemtek logo and navigation links: **Password**, Device Time, Device Name, and Restore To Factory. The left sidebar lists menu items: Personalize, Internet, Local Address, Port Forwarding, Control Panel, and Status. At the bottom of the sidebar are buttons for REBOOT, LOGOUT, and RECONNECT. The main content area shows the following settings:

- Enable Login Password Protection:
- New Login Password:
- Confirm New Login Password:

At the bottom of the main content area are buttons for **Undo** and **Apply**.

Password

Select **Personalize > Password** to enable or disable the password protection for the device. You can also change the existing password on this sub-menu.

- ◆ **Enable Login Password Protection:** If this option is enabled, then you have to enter the password whenever you try to connect the device.

- ◆ **New Login Password:** Enter a new password. (The new password can contain 64 bytes ASCII code and it is case sensitive.)
- ◆ **Confirm New Login Password:** Re-enter the new password to confirm.
- ◆ **Undo button:** Click the **Undo** button to clear the data on this window.
- ◆ **Apply button:** The changes that you have made to this window can be saved in the device by clicking the **Apply** button.

Personalize | Device Time

The screenshot shows the 'Device Time' configuration page in the Gemtek management interface. The page has a blue header with the Gemtek logo and navigation links: Password, Device Time (selected), Device Name, and Restore To Factory. A left sidebar contains a 'Personalize' menu with options: Internet, Local Address, Port Forwarding, Control Panel, and Status. At the bottom of the sidebar are buttons for REBOOT, LOGOUT, and RECONNECT. The main content area displays 'Current Local Time' as 0:25:54, 'Time Zone' as (GMT+08:00) Taipei, and an unchecked checkbox for 'Auto Adjust for Daylight Saving Time'. At the bottom of the main area are 'Undo' and 'Apply' buttons.


Device Time

Select **Personalize > Device Time** to set the time zone.

- ◆ **Current Local Time:** Display current local time.
- ◆ **Time Zone:** Select the proper time zone for your location on the drop down menu.
- ◆ **Auto Adjust for Daylight Saving Time:** Please enable this option if your location observes Daylight Savings Time.

- ◆ **Undo button:** Click the **Undo** button to clear the data on this window.
- ◆ **Apply button:** The changes that you have made to this window can be saved in the device by clicking the **Apply** button.

Personalize | Device Name

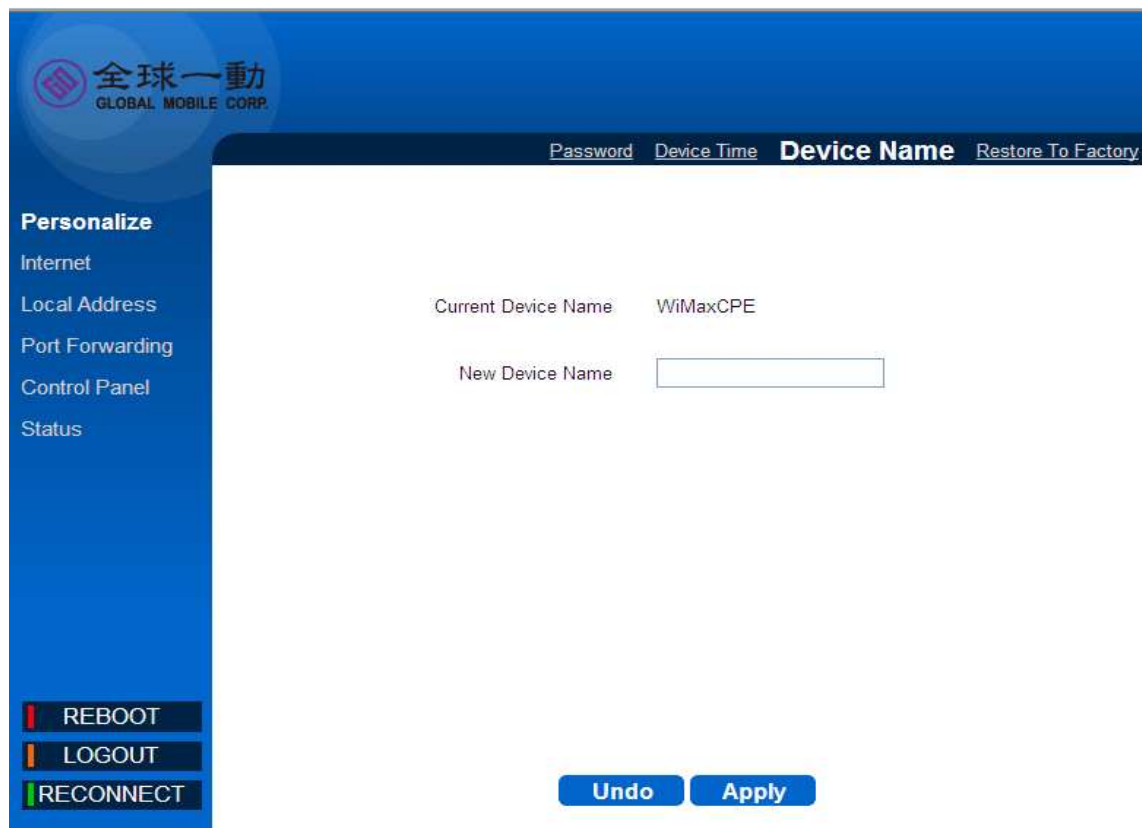 

Device Name


Select **Personalize > Device Name** to define a specific name for your device, so that you can login to this device from any PC on your internal network by entering the device name on the address bar. The default, the device name is **WiMaxCPE**.

- ◆ **Device Name:** Display the current device name.
- ◆ **New Device Name:** Enter a new name for your device (Maximum 20

ASCII Printable Characters allowed).

- ◆ **Undo button:** Click the **Undo** button to clear the changes that you have made on this window.
- ◆ **Apply button:** The changes that you have made on this window can be saved in the device by clicking the **Apply** button.

Personalize | Restore To Factory

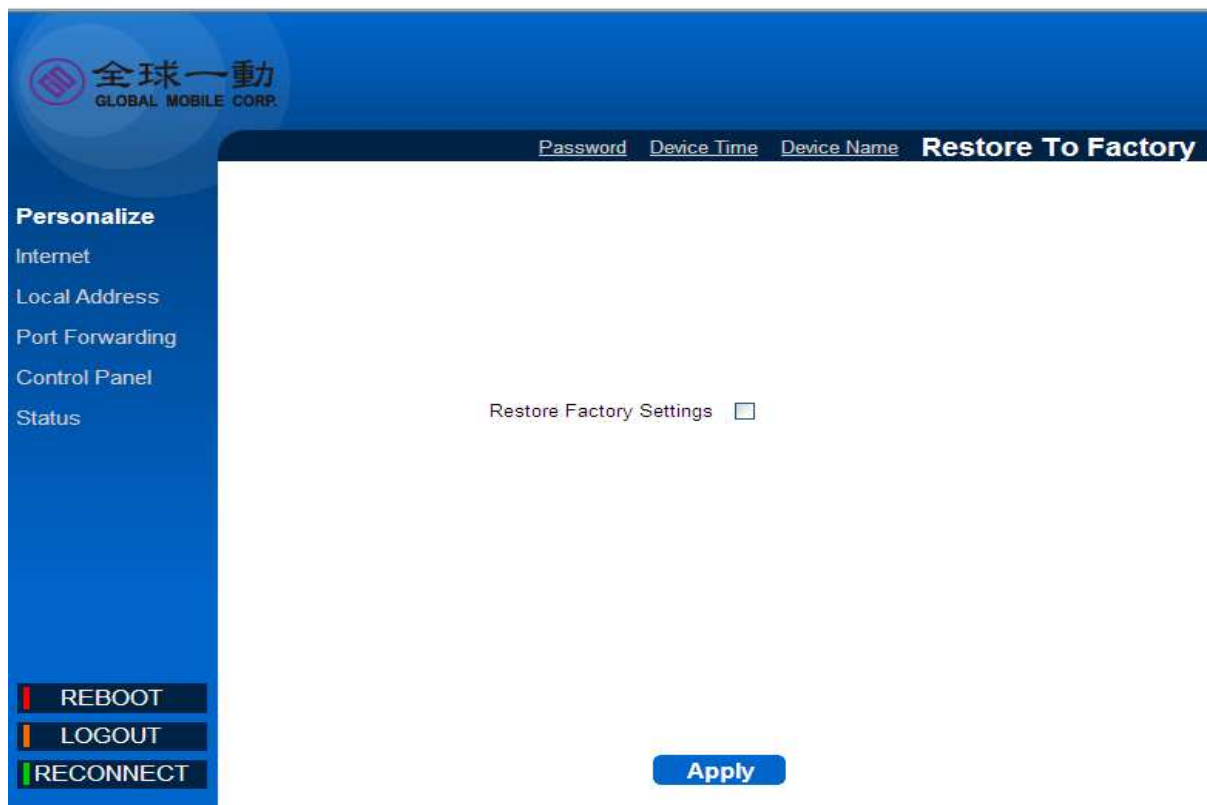 

Restore To Factory

Select **Personalize > Restore To Factory** to clear all users' configuration and restore to factory default settings.

- ◆ **Apply:** Click the **Apply** button to reset the device settings to factory default.

Local Address

Local Address | DHCP Server

Global Mobile Corp. logo and navigation menu (Personalize, Internet, **Local Address**, Port Forwarding, Control Panel, Status). Buttons: REBOOT, LOGOUT, RECONNECT.

DHCP Server | Lease Status | Lease Reservation

Enable DHCP Server

DHCP Server IP Address: 192 . 168 . 15 . 1

DHCP Starting IP Address: 192 . 168 . 15 . 2

DHCP Ending IP Address: 192 . 168 . 15 . 254

DHCP Lease Time: 1 hour 0 minute 0 second

Undo Apply

DHCP Server

Select **Local Address > DHCP Server** to configure the internal DHCP server settings. This device has a built-in DHCP server that can be used for managing the allotment of IP address for the devices connected to the **LAN** Port of the device.

- ◆ **Enable DHCP Server:** Enable DHCP Server by clicking on the checkbox.
- ◆ **DHCP Server IP address:** Enter the DHCP server IP address.
- ◆ **DHCP Starting IP address/ DHCP Ending IP address:** Define the IP address range shall be supported by the DHCP server.
- ◆ **DHCP Lease Time:** Specify the IP address renewal time.
- ◆ **Undo:** Click the **Undo** button to clear the changes that you have made on this window.
- ◆ **Apply:** The changes that you have made on this window can be saved in the device by clicking the **Apply** button.

Local Address | Lease Status

Global Mobile Corp. DHCP Server **Lease Status** Lease Reservation

Client Host Name	MAC Address	IP Address	Remaining Lease Duration
Kristy_Chen-NB01	00:21:5D:57:AF:2A	192.168.15.6	2007 second

REBOOT
LOGOUT
RECONNECT

Refresh Auto

Lease Status

Select **Local Address > Lease Status** to view the current status of client host PC such as host name, host PC's MAC address, IP address, and remaining lease time

- ◆ **Refresh:** Click the **Refresh** button to display the updated information of the client host PC.
- ◆ **Auto:** Click the **Auto** button to refresh the information automatically.

Local Address | Lease Reservation

Global Mobile Corp. (全球一動)

DHCP Server Lease Status **Lease Reservation**

Select	Host Name	MAC Address	IP Address	Enabled
<input type="checkbox"/>				<input type="checkbox"/>

REBOOT
LOGOUT
RECONNECT

Add Del Undo Apply

Lease Reservation

Select **Local Address** > **Lease Reservation** to assign the specific IP addresses to the specific client device connected to the **LAN** port.

- ◆ **Add button:** Click the **Add** button to insert lease reservation information.
- ◆ **Del button:** Click the **Del** button to delete the selected lease reservation information. Before clicking **Del**, one or more of information items must be selected by enabling the checkbox on the **Select** column of the table.
- ◆ **Undo:** Click the **Undo** button to clear the changes that you have made on this window.
- ◆ **Apply:** The changes that you have made on this window can be saved in the device by clicking the **Apply** button.

Port Forwarding

Port Forwarding | Basic



Basic

Select **Port Forwarding > Basic** to forward the network traffic to specific hosts based on the protocol and port number. It is used to play Internet games or provide local services (such as web hosting) for a LAN group.

- ◆ **Enable UPnP IGD:** When this option is enabled, certain Windows applications would setup the port forwarding rule dynamically.
- ◆ **DMZ IP Address:** The IP address of DMZ should be entered here.
- ◆ **Undo:** Click the **Undo** button to clear the changes that you have made on this window.
- ◆ **Apply:** The changes that you have made on this window can be saved in the device by clicking the **Apply** button.

Port Forwarding | Forwarding

Select	Protocol	WAN Port		LAN IP	Enabled
		Begin	End		

Add Del Undo Apply


Forwarding

Select **Port Forwarding > Forwarding** to manage the additional port forwarding rules.

- ◆ **Add:** Click the **Add** button to insert new port forwarding rule. When adding a new port forwarding rule, please select TCP or UDP, and then enter port and IP information such as WAN port range, LAN IP address, and LAN port range.
- ◆ **Del:** Click the **Del** button to delete the selected port forwarding rule.
- ◆ **Undo:** Click the **Undo** button to clear the changes that you have made on this window.
- ◆ **Apply:** The changes that you have made on this window can be saved in the device by clicking the **Apply** button.

Control Panel


Control Panel | Software

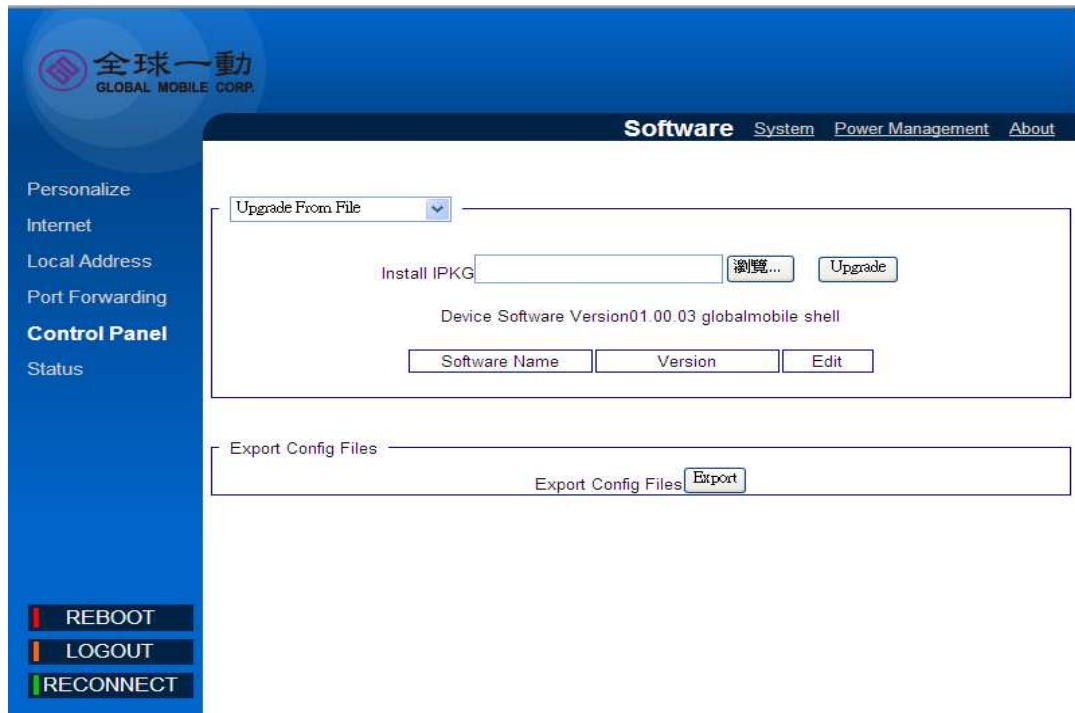 

Software

Select **Control Panel > Software** to manage the software of your device. Click **Browse** to select the IPKG file, and then click **Upgrade** to install the selected IPKG. Or click the **Remove** button to delete the IPKG file.


Control Panel | System

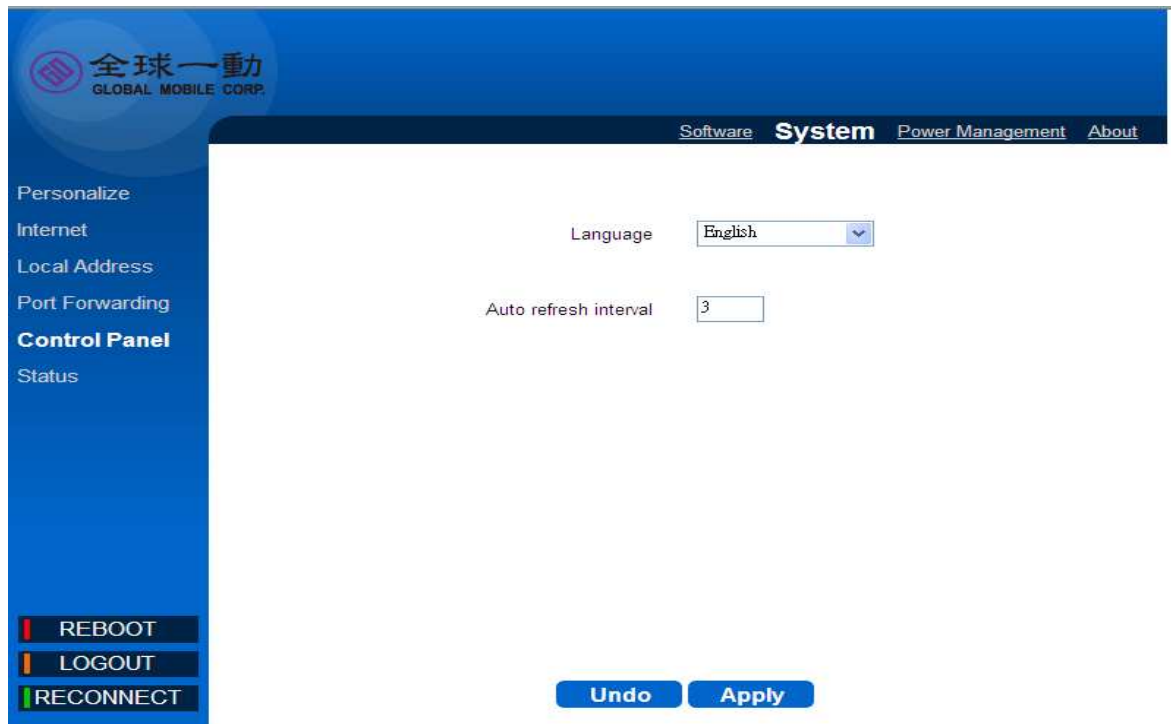 

System

Select **Control Panel >System** to select your GUI language.(You can choose English or Chinese.)

Control Panel | Power manage

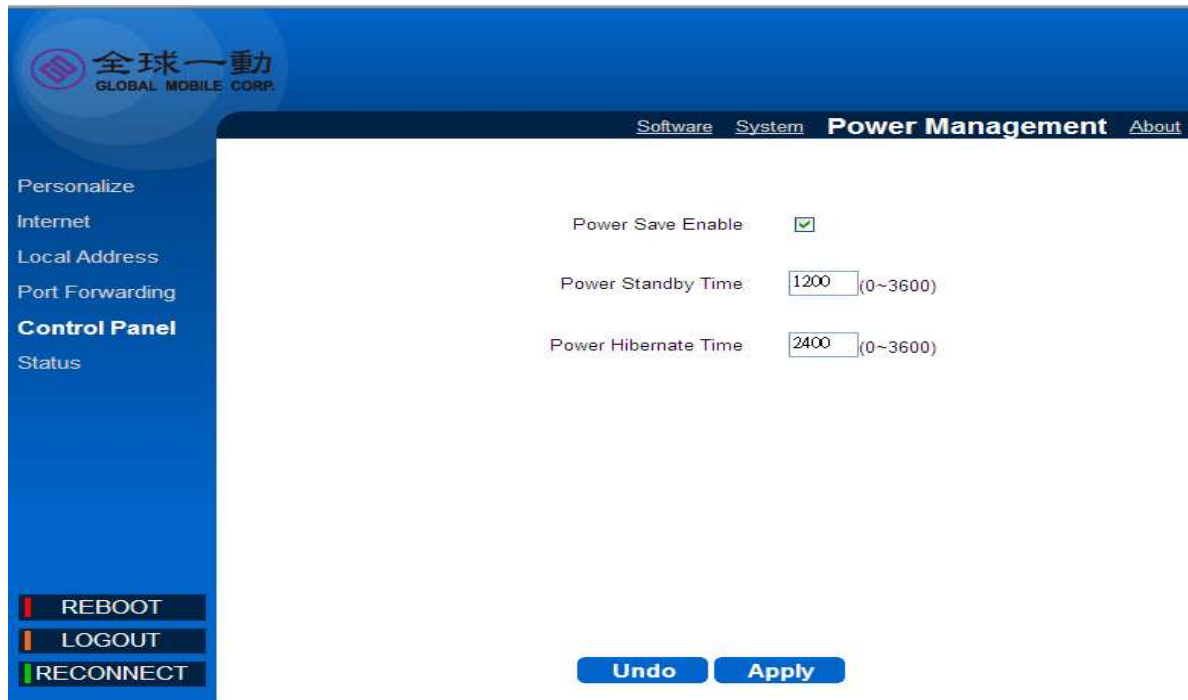 


Power Management

Select **Control Panel >Power management** to manage your power saving table.

- ◆ **Power saving enable:** Enable power saving mode can help you save your device power.
- ◆ **Standby mode:** When you disconnect usb port and no WiFi traffic and connection after setting period, your device will enter standby mode. In stand by mode ,WiMAX interface will be disable and WiFi remain on.
- ◆ **Stand by mode Wake up:** You can wake up device via below method:
 1. re-connect usb port ,
 2. connect device via WiFi interface
 3. push power button 1sec

- ◆ **Hibernate mode:** When you in standby mode after the setting period, your device will enter Hibernate mode. In Hibernate mode, both WiMAX/WiFi interface will be disable.
- ◆ **Hibernate mode Wake up:** You can wake up device via push power button 1sec.

 You can charge your device on Hibernate mode that will make the charging much more efficient

Control Panel | About



About

Select **Control Panel > About** to display the basic information about the device: Service Provider, Product Name, WAN port MAC address, LAN Port MAC address, Model ID, Device hardware version and Serial ID.

Status

Status | WiMAX Status

The screenshot displays the 'WiMAX Status' page. The left sidebar contains a navigation menu with 'Status' selected. The main content area is divided into three sections: 'WiMAX SYSTEM', 'WiMAX TX', and 'WiMAX RX'. Each section contains a list of parameters and their current values. The 'WiMAX SYSTEM' section includes parameters like State (SCAN), BSID (N/A), CINR (N/A), Security (N/A), Bandwidth (N/A), Max Tx Power (N/A), Max RSSI (N/A), Max CINR (N/A), Connection Time (0 secs), Disconnect Reason (N/A), Scan Type (HISTORY), RSSI (N/A), Temperature (32 °C / 89 °F), Overheat (none), TxPwr (N/A), Min Tx Power (N/A), Min RSSI (N/A), Min CINR (N/A), and Center Frequency (N/A). The 'WiMAX TX' and 'WiMAX RX' sections list various data rates and byte counts, all of which are currently 'N/A'. At the bottom of the main content area, there are 'Refresh' and 'Auto' buttons. On the left side of the main content area, there are three buttons: 'REBOOT', 'LOGOUT', and 'RECONNECT'.

WiMAX Status

Select **Status > WiMAX Status** to display the WiMAX connection status.

- ◆ **Refresh:** Click the **Refresh** button to refresh the current WiMAX connection status.
- ◆ **Auto:** Click the **Auto** button to update the status information periodically.

Status | Device Status

The screenshot shows the 'Device Status' page in the Gemtek web interface. The page has a blue header with the Gemtek logo and navigation links for 'WiMAX Status', 'Device Status', and 'Syslog'. A left sidebar contains menu items: 'Personalize', 'Internet', 'Local Address', 'Port Forwarding', 'Control Panel', and 'Status'. The main content area displays system information in a table:

SYSTEM	
IP Address	N/A
MAC	00:26:82:af:94:20
IP Subnet Mask	N/A
IP Default Gateway	N/A
IP Connection	OFF
Firewall	ON
Lease Obtained	N/A
Lease Expires	N/A
DNS Server	N/A
Time Server	N/A
Device Up Time	0days 0hours 33minutes
Device Restart Reason	Software Upgrade

At the bottom of the sidebar are buttons for 'REBOOT', 'LOGOUT', and 'RECONNECT'. Below the table are 'Refresh' and 'Auto' buttons.

Device Status

Select **Status** > **Device Status** to display the status of device system uptime and WAN information.

- ◆ **Refresh:** Click the **Refresh** button to update the current device status.
- ◆ **Auto:** Click the **Auto** button to update the status information periodically.

Status | Syslog

Select **Status > Syslog** to let your GlobalMobile customer service engineers understand your device current status that is help solve your problem.

全球一動
GLOBAL MOBILE CORP.

WIMAX Status Device Status Syslog

Personalize
Internet
Local Address
Port Forwarding
Control Panel
Status

REBOOT
LOGOUT
RECONNECT

 
Display Level

```

freq from good pool
Jan 1 08:33:11 user.info syslog: [WMX_LOG](74/wmx_notify.c): Doesn't find
any BS..
Jan 1 08:33:11 user.info syslog: [WMX_LOG](75/wmx_notify.c): Change scan
type and try again..
Jan 1 08:33:11 user.info syslog: [WMX_LOG](577/wmx_subcore.c): SCAN TYPE =
HISTORY (retry=1,index=1) <<<<<<<<<<<<<
Jan 1 08:33:11 user.info syslog: [WMX_LOG](1244/wmx_subcore.c): Choose 1
freq from good pool
Jan 1 08:33:13 user.info syslog: [WMX_LOG](74/wmx_notify.c): Doesn't find
any BS..
Jan 1 08:33:13 user.info syslog: [WMX_LOG](75/wmx_notify.c): Change scan
type and try again..
Jan 1 08:33:13 user.info syslog: [WMX_LOG](577/wmx_subcore.c): SCAN TYPE =
HISTORY (retry=2,index=1) <<<<<<<<<<<<<
Jan 1 08:33:13 user.info syslog: [WMX_LOG](1244/wmx_subcore.c): Choose 1
freq from good pool
Jan 1 08:33:17 user.info syslog: [WMX_LOG](74/wmx_notify.c): Doesn't find
any BS..
Jan 1 08:33:17 user.info syslog: [WMX_LOG](75/wmx_notify.c): Change scan
type and try again..
Jan 1 08:33:17 user.info syslog: [WMX_LOG](580/wmx_subcore.c): SCAN TYPE =
NEIGHBOR (index=1) <<<<<<<<<<<<<

```

Reboot /Log out/ Reconnect

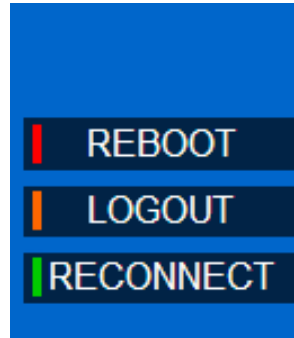

Reboot / Reconnect

There are 3 function buttons on the lower left corner

- ◆ **Reboot:** Clicking **Reboot** button will restart your device
- ◆ **Log out:** Clicking **Log out** button device will log out from current UI and back to log in page
- ◆ **Reconnect:** Clicking **Reconnect** button the device will attempt reconnection to the Base Station




關於這份使用手冊

目的:

這份文件將提供你使用這台 WIXFMM-109 802.16-2005 2.5GHz Personal Hotspot 所需要的資訊跟設定程序,並幫助你設定本機。

如何閱讀這份文件

以下圖案跟說明可以幫助你閱讀這份文件:

	非常重要的資訊，需要詳細遵守否則會導致機器損害。
	重要資訊。
	附加的有用資訊。
粗體	選單指令,按鈕,重要文字等將會以粗體顯示。

第一章 - 簡介

產品介紹:



WIXFMM-109 產品示意圖


感謝你購買全球一動 WIXFMM-109 802.16-2005 2.5GHz Personal Hotspot,此產品符合 802.16-2005 WiMAX 標準規範,也是一台提供 WiMAX 4G 暢網和 Wi-Fi 分享的多工產品.


Product Package

	項目	數量
1	WIXFMM-109 802.16-2005 2.5GHz Personal Hotspot	1 台
2	快速安裝手冊	1 本
3	充電器	1 個
4	連接線	1 條
5	電池	1 個

	購買時，請確認以上內容物。
--	---------------

  
連結孔/按鈕介紹

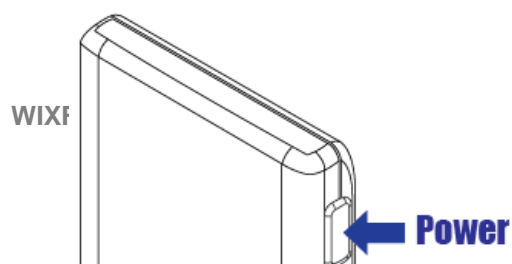

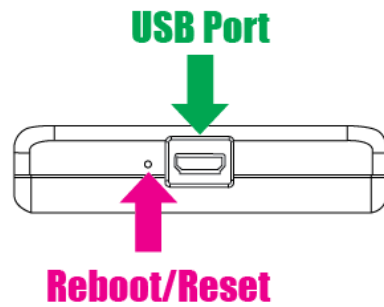

- 1. 開機:** 請長按約 5 秒左右開啓電源(燈號全部亮起後熄滅表示本機進入開機流程,開機流程需要大約 1 分鐘請耐心等待),當電源燈恆亮即代表開機完成.
- 2. 重新啓動/重置 按鈕:** **重新啓動:**開機後如欲重新啓動本機請按壓重新啓動/重置按鈕 1~5 秒.**重置(恢復出廠設定值):**開機後如欲恢復出廠設定值請長壓重新啓動/重置按鈕 5~10 秒.
- 3. Micro USB 連接孔:** USB 連接孔用於連結 PC 與本機或是暫時充電。

 燈號定義

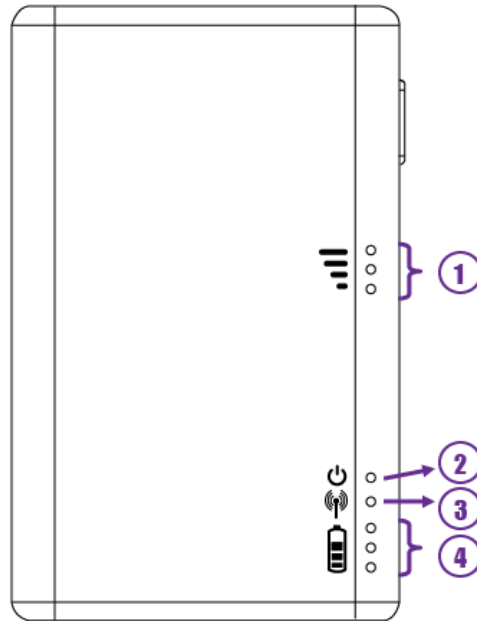


WIXFMM-109 燈號定義

1.	WiMAX 訊號強度顯示	藍	恆亮	CINR < 14dB
		藍	恆亮	14dB < CINR < 23dB
		藍	恆亮	23dB < CINR
2	電源	藍	ON	開機
			OFF	關機
			閃爍	正在執行開機程序
3	Wi-Fi 無線網路	藍	ON	Wi-Fi ON
			OFF	Wi-Fi OFF
			閃爍	Wi-Fi 資料傳輸中
4.	電池電量	綠	恆亮	電池容量 > 66%
		橘	恆亮	33% < 電池容量 < 66%
		紅	恆亮	電池容量 < 33%
			閃爍	充電中

第二章 - 安裝

 請遵照以下步驟安裝這台機器的驅動程式：

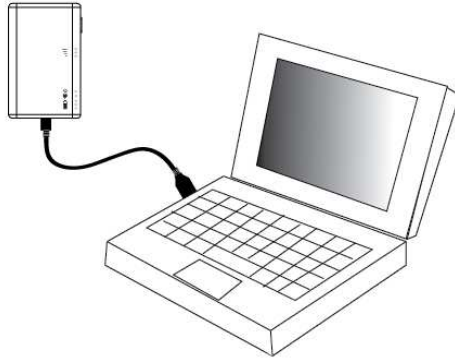

WIXFMM-109 安裝示意圖

- 步驟1:** 請使用附件之 USB 連接線連結 PC.
- 步驟2:** 連結完成後產品會自動開機，開機時間約為 60 秒請耐心等待。
- 步驟3:** 此時會跳出新增硬體安裝精靈如下圖所示：



新增安裝精靈 - 1

- 步驟4:** 請先選擇“取消”，不要選擇新增安裝精靈安裝。

步驟5: 請直接進入“我的電腦”,選擇本機的磁碟機並點選進入。



選擇本機磁碟

步驟6: 你將會看到“Setup.exe”點選並執行安裝此檔案。

步驟7: 恭喜你!現在你可以使用 **usb** 介面,連結並使用本機。

第三章 – 網頁介面

如何利用網頁介面設定你的機器？

步驟1: 開啓網頁介面,在你的 IE 或是瀏覽器輸入以下路徑:

<http://192.168.15.1/>

步驟2: 進入網頁後,輸入你的預設密碼: gmadmin

步驟3: 進入設定網頁,開始設定:

全球一動
GLOBAL MOBILE CORP.

WiMAX設定 網際網路協定 防火牆 動態DNS WiFi

個人化
網際網路設定
區域網路設定
虛擬伺服器設定
系統管理
狀態

重新啓動
登出
重新連接

認證方法 EAP-TTLS-MSCHAPV2
使用者名稱 activate@g1.com.tw
密碼
密碼確認

取消 套用

WIXFMM-109 使用者介面

第四章 – 使用者介面說明

以下為你可以設定的清單,主要的設定項目未於使用者介面左側；而子目錄位於畫面的上側順序由左至右。詳細目錄清單為以下:

主項目	子目錄	主項目	子目錄
個人化	密碼 設備時間 設備名稱 恢復原廠設定	狀態	WiMAX 狀態 設備狀態 系統紀錄
網際網路設定	WiMAX 設定 網際網路協定 防火牆 動態 DNS WiFi	重新啓動	-
區域網路設定	DHCP 伺服器 租約狀態 租約保留	重新連接	-
虛擬伺服器設定	基本 轉換		
系統管理	軟體更新 認證 電源管理 關於		

Menu Structure Table



每次當你完成設定修改時請務必點選**套用**按鍵,以確認修改成功。

網際網路設定| WiMAX 設定

全球一動
GLOBAL MOBILE CORP.

WiMAX設定 網際網路設定 防火牆 動態DNS WiFi

個人化
網際網路設定
區域網路設定
虛擬伺服器設定
系統管理
狀態

重新啟動
登出
重新連接

認證方法: EAP-TTLS-MSCHAPV2
使用者名稱: activate@gl.com.tw
密碼:
密碼確認:

取消 套用

WiMAX 設定- EAP-TTLS-MACHAPV2

選擇網際網路設定> WiMAX 設定 來設定你的連線。

- ◆ **認證方法:**全球一動提供 EAP-TTLS-MACHAPV2 認證方式，請不要更動。
- ◆ **使用者名稱:** 請輸入你開通的全球一動帳號
- ◆ **密碼:** 請輸入你開通的全球一動密碼
- ◆ **密碼確認:** 再次輸入你開通的全球一動密碼
- ◆ **取消:** 點選取消可清除畫面中輸入的資料。
- ◆ **套用:** 套用並儲存更改的設定。

網際網路設定|網際網路協定

The screenshot shows the 'Global Mobile Corp.' (全球一動) network settings page. The main navigation bar includes 'WiMAX設定', '網際網路協定' (selected), '防火牆', '動態DNS', and 'WiFi'. A left sidebar contains menu items: '個人化', '網際網路設定' (selected), '區域網路設定', '虛擬伺服器設定', '系統管理', and '狀態'. At the bottom of the sidebar are buttons for '重新啟動', '登出', and '重新連接'. The main content area is titled '網際網路協定' and contains two settings: '連接模式' (Connection Mode) set to 'DHCP' and '主機名' (Host Name) with an empty text input field. At the bottom right of the main area are '取消' (Cancel) and '套用' (Apply) buttons.

網際網路協定

選擇**網際網路設定>網際網路協定** 來設定你的網路設定

- ◆ **連接模式:** 顯示目前 WiMAX 網路的連接模式
- ◆ **主機名:** 輸入你的主機名，讓 DHCP 伺服器辨別的的設備。
- ◆ **取消:** 點選取消可清除畫面中輸入的資料
- ◆ **套用:** 套用並儲存更改的設定

網際網路設定|防火牆

The screenshot shows the 'Global Mobile Corp.' settings menu. The 'Internet Settings' section is active, and the 'Firewall' option is selected. The configuration options are as follows:

- 操作模式: Gateway Mode (dropdown menu)
- 啟用防火牆: (checked)
- 允許網際網路登入此設備: (unchecked)
- 從網際網路web頁面登入埠口: 8080 (text input field)
- 允許網際網路ping此設備: (unchecked)

At the bottom, there are '取消' (Cancel) and '套用' (Apply) buttons. On the left sidebar, there are buttons for '重新啓動' (Restart), '登出' (Logout), and '重新連接' (Reconnect).

防火牆

選擇網際網路設定|防火牆 來設定本機的防火牆設定，防火牆功能可以防止未經認證過的遠端連線需求。

- ◆ **操作模式:** 顯示當前的防火牆操作模式
- ◆ **啟用防火牆:** 勾選此欄位來啟用本機的防火牆。
- ◆ **允許網際網路登入此設備:** 勾選此欄位來允許遠端連連線（遠端連線請用 <https://192.168.15.1> 位址來登入此設備)
- ◆ **網際網路 web 頁面登入埠口:** 建立特定的埠口來建立安全的連線（設定埠口範圍為: 0 ~ 65536）。
- ◆ **允許網際網路 ping 此設備:** 勾選此欄位將會允許遠端網際網路連結的要求。
- ◆ **取消:** 點選取消可清除畫面中輸入的資料
- ◆ **套用:** 套用並儲存更改的設定

網際網路設定|動態 DNS

The screenshot shows the 'Global Mobile Corp.' settings menu. The 'Dynamic DNS' option is selected in the top navigation bar. The left sidebar contains menu items: 個人化, 網際網路設定 (selected), 區域網路設定, 虛擬伺服器設定, 系統管理, and 狀態. At the bottom of the sidebar are buttons for 重新啓動, 登出, and 重新連接. The main content area shows the following settings:

- 操作模式: Gateway Mode (dropdown menu)
- 啟用防火牆:
- 允許網際網路登入此設備:
- 從網際網路web頁面登入埠口: 8080 (text input)
- 允許網際網路ping此設備:

At the bottom of the settings area are two buttons: 取消 and 套用.

動態 DNS

選擇**網際網路設定>動態 DNS** 來設定你的 DNS 設定 (注意!本機只支援所列的 DNS 伺服器清單)

- ◆ **使用者:**輸入 DNS 伺服器的使用者名稱
- ◆ **密碼:** 輸入 DNS 使用者密碼
- ◆ **主機:** 輸入 DNS 註冊主機名稱
- ◆ **啟用:** 請勾選你想要指定的 DNS 名稱
- ◆ **取消:** 點選取消可清除畫面中輸入的資料。
- ◆ **套用:** 套用並儲存更改的設定。

網際網路設定|WiFi

全球一動
GLOBAL MOBILE CORP.

WiMAX設定 網際網路協定 防火牆 動態DNS WiFi

個人化
網際網路設定
區域網路設定
虛擬伺服器設定
系統管理
狀態

重新啓動
登出
重新連接

操作模式 Gateway Mode

啟用防火牆

允許網際網路登入此設備

從網際網路web頁面登入埠口 8080

允許網際網路ping此設備

取消 套用

WiFi

選擇網際網路設定>WiFi 來設定無線網路..

無線網路設定:

- ◆ 介面狀態: 啟用或停用你的 WiFi 無線網路
- ◆ 網路名稱(SSID): 設定你的網路名稱 (最多 32 字元)
- ◆ 無線電頻道: 選擇你欲使用的無線網路頻道
- ◆ 工作模式: 選擇你欲使用的無線網路工作模式 (802.11b/g, 802.11 或是 802.11g)
- ◆ 傳輸功率: 設定你無限網路的傳輸功率(-8~15dBm)
- ◆ RTS 門檻值: 修改 RTS 門檻值的定義來指定設備封包傳送機制 (範圍 : 256 to 2432)
- ◆ 分裂門檻值: 定義封包分割的大小(建議維持原廠設定值: 2346)

- ◆ **訊標期:**設定 Beacon 傳輸的時間間距(單位為千分秒)
- ◆ **睡眠模式封包間隔:** 設定 DTIM (Delivery Traffic Indication Message) 時間間隔.
- ◆ **前置碼長度:**設定前置碼長度短前置碼或是長前置碼
- ◆ **網路名稱(SSID)隱藏:** 隱藏或是顯示網路名稱(SSID).

安全類型設定:

- ◆ **認證:**選擇你欲採用的無線網路認證方法
- ◆ **加密:** 選擇你欲採用的無線網路加密演算法

ACL 設定:

- ◆ **系統預設值:** 用下拉選單選擇設備網路連線控制
- ◆ **關閉:** 關閉 ACL 設定

ACL設定

系統預設值 關閉 ▾

4. **允許:** 請建立 MAC 位址篩選清單來允許特定的用戶端可連線至無線網路

- **插入:** 點選插入來新增一個 MAC 位址(最多建立 10 組)
- **刪除:** 點選移除移除你編輯清單中的 MAC 位址

ACL設定

系統預設值 允許 ▾

插入

表	MAC	刪除
----------	-----	-----------

5. **拒絕:** 請建立 MAC 位址篩選清單拒絕特定的用戶端可連線至無線網路
6. **插入:** 點選插入來新增一個 MAC 位址(最多建立 10 組)
7. **刪除:** 點選移除移除你編輯清單中的 MAC 位址

ACL設定

系統預設值 ▾

- ◆ **取消:** 點選取消可清除畫面中輸入的資料。
- ◆ **套用:** 套用並儲存更改的設定。

個人化

個人化| 密碼

The screenshot shows the 'Global Mobile Corp' (全球一動) settings menu. The 'Personalization' (個人化) section is expanded, showing 'Password' (密碼) as the selected option. The 'Password' screen includes a checkbox for 'Enable Password Protection' (啟用登入密碼保護) which is checked. Below it are two text input fields for 'New Password' (新登入密碼) and 'Confirm New Password' (確認新登入密碼). At the bottom, there are 'Cancel' (取消) and 'Apply' (套用) buttons. A sidebar on the left contains navigation options like 'Restart' (重新啓動), 'Logout' (登出), and 'Reconnect' (重新連接).

密碼

選擇**個人化>密碼** 在這個頁面你可以設定開啓或是關閉密碼保護.另外,你也可以在此頁面更新密碼。

- ◆ **啟用登入密碼保護:** 勾選這個選項時,進入設定頁面時將會要求你輸入密碼.
- ◆ **新登入密碼:** 輸入一個新的密碼(64 位元為限)
- ◆ **確認新登入密碼:** 再次輸入你的新密碼
- ◆ **取消:** 點選取消可清除畫面中輸入的資料

- ◆ **套用:** 套用並儲存更改的設定

個人化| 設備時間

The screenshot shows the '設備時間' (Device Time) settings page. At the top, there is a navigation bar with '密碼', '設備時間', '設備名稱', and '恢復原廠設定'. On the left, there is a sidebar menu with '個人化' (Personalization) selected, and sub-items: '網際網路設定', '區域網路設定', '虛擬伺服器設定', '系統管理', and '狀態'. At the bottom of the sidebar are buttons for '重新啟動', '登出', and '重新連接'. The main content area displays '當前本地時間' (Current Local Time) as 0:46:28, a '時區' (Time Zone) dropdown menu set to '(GMT+08:00) Taipei', and an unchecked checkbox for '自動調整為夏令時間' (Automatically adjust for Daylight Saving Time). At the bottom right of the main area are '取消' (Cancel) and '套用' (Apply) buttons.

設備時間

選擇個人化>設備時間設定時區

- ◆ **當前本地時間:** 顯示目前的時間。
- ◆ **時區:** 請在下拉選單選擇你所在地區之時區
- ◆ **自動調整為夏令時間:** 如果你所在地區有日光節約時間,請點選以利正確設定。
- ◆ **取消:** 點選取消可清除畫面中輸入的資料
- ◆ **套用:** 套用並儲存更改的設定

個人化|當前設備名稱

全球一動
GLOBAL MOBILE CORP.

密碼 設備時間 設備名稱 恢復原廠設定

個人化
網際網路設定
區域網路設定
虛擬伺服器設定
系統管理
狀態

重新啟動
登出
重新連接

當前設備名稱 WiMaxCPE

新設備名稱

取消 套用

當前設備名稱

選擇個人化>當前設備名稱修改設備名稱(你可以在網路芳鄰裡面看到這台設備的名稱,出廠值為: **WiMaxCPE**)

- ◆ **當前設備名稱:** 顯示目前本機的設備名稱.
- ◆ **新設備名稱:** 輸入你想更改的設備名稱(最高支援 20 ASCII 位元).
- ◆ **取消:** 點選取消可清除畫面中輸入的資料
- ◆ **套用:** 套用並儲存更改的設定

個人化|恢復原廠設定



恢復原廠設定

選擇**個人化>恢復原廠設定**可清除你做的所有設定,恢復到原廠出廠狀態。

◆ **恢復原廠設定:** 勾選恢復原廠設定,然後點選**套用**即可恢復到出場狀態。

區域網路設定

區域網路設定 | DHCP 伺服器

The screenshot shows the 'DHCP 伺服器' (DHCP Server) configuration page. The left sidebar contains navigation options: 個人化, 網際網路設定, 區域網路設定 (selected), 虛擬伺服器設定, 系統管理, and 狀態. At the bottom of the sidebar are buttons for 重新啟動, 登出, and 重新連接. The main content area has a title bar with 'DHCP 伺服器', '租約狀態', and '租約保留'. The configuration fields are as follows:

- 啟用DHCP伺服器:
- DHCP 伺服器IP位址: 192 . 168 . 15 . 1
- DHCP 起始IP位址: 192 . 168 . 15 . 2
- DHCP 結束IP位址: 192 . 168 . 15 . 254
- DHCP 租約時間: 1 小時 0 分 0 秒

At the bottom of the configuration area are buttons for 取消 and 套用.

DHCP 伺服器

選擇**區域網路設定>DHCP 伺服器** 來設定內建的 DHCP 伺服器(DHCP 伺服器管理與本設備連結之區域網路端機器的 IP 位址)

- ◆ **啟用 DHCP 伺服器:**勾選欄位來啟用 DHCP 伺服器
- ◆ **DHCP 伺服器 IP 位址:** 你可以在此修改 DHCP 伺服器的 IP 位址
- ◆ **DHCP 起始 IP 位址/ DHCP 結束 IP 位址:** 定義 DHCP 伺服器所支援的 IP 位址範圍.
- ◆ **DHCP 租約時間:** 定義 DHCP server IP 位址更新時間
- ◆ **取消:** 點選取消可清除畫面中輸入的資料。
- ◆ **套用:** 套用並儲存更改的設定。

區域網路設定 | 租約狀態

全球一動
GLOBAL MOBILE CORP.

DHCP伺服器 租約狀態 租約保留

客戶端主機名	MAC位址	IP位址	剩餘租約時間
Kristy_Chen-NB01	00:21:5D:57:AF:2A	192.168.15.6	2487 second

個人化
網際網路設定
區域網路設定
虛擬伺服器設定
系統管理
狀態

重新啟動
登出
重新連接

更新 自動

租約狀態

選擇區域網路設定>租約狀態來檢視目前狀態用戶端主機的狀態

- ◆ **更新:** 點選更新可顯示最新的用戶端主機的狀態
- ◆ **自動:** 點選自動可讓頁面自動更新用戶端主機的狀態

區域網路設定|租約保留



租約保留

選擇**區域網路設定>租約保留** 來指定某用戶端取得指定的 IP 位址而不會更改

- ◆ **增加:** 點選增加來插入一個新的租約保留資料
- ◆ **刪除:** 選擇你欲刪除的租約保留資料然後點選刪除鍵來執行刪除
- ◆ **取消:** 點選取消可清除畫面中輸入的資料。
- ◆ **套用:** 套用並儲存更改的設定。

虛擬伺服器設定

虛擬伺服器設定 | 基本




基本

選擇 **虛擬伺服器設定 > 基本** 來建立網路封包傳送規則

- ◆ **啟用 UPnP:** 當此功能啟用時可以自動建立任何 UPnP 設備通訊埠 (port) 的連結
- ◆ **DMZ IP 位置:** 設備會將所有的埠口 (port), 皆會對應到內部您所設定的 IP 位址。
- ◆ **取消:** 點選取消可清除畫面中輸入的資料。
- ◆ **套用:** 套用並儲存更改的設定。

虛擬伺服器設定 | 轉發

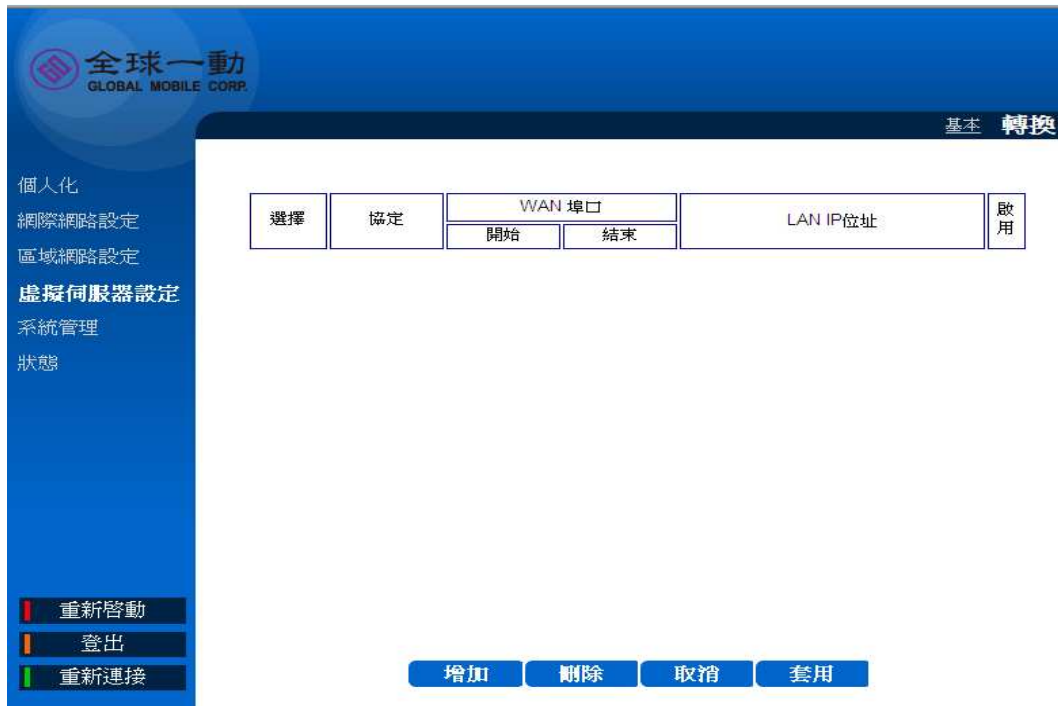 

轉發

選擇 **虛擬伺服器設定 > 基本** 來建立更新的網路封包傳送規則

- ◆ **新增:** 點選新增來插入一個新的埠口 (port)轉發規則,當增加一個新個規則你必須先選擇 TCP or UDP 協定以及其他資訊.
- ◆ **刪除:** 點選刪除鍵來移除你選定的埠口 (port)轉發規則
- ◆ **取消:** 點選取消可清除畫面中輸入的資料。
- ◆ **套用:** 套用並儲存更改的設定。

系統管理

系統管理 | 軟體



軟體

選擇**系統管理** > **軟體** 來確認你的軟體版本以及更新軟體。

點選**瀏覽**並選擇愈更新的軟體檔案(必須是.IPKG 的格式)，接著點選**升級** 來安裝此更新的軟體。

系統管理 | 語言切換



語言切換

選擇**系統管理** > **語言切換**來切換擬使用者介面的語言(英文以及繁體中文)

系統管理 | 電源管理



電源管理

選擇系統管理 > 電源管理 來設定以及管理你的省電模式

- ◆ **開啓省電模式:**點選開啓省電模式可節省你設備的耗電,你可以接續設定待機模式以及休眠模式機制
- ◆ **(幾秒後) 進入待機模式:** 當你移除 USB 端口連結以及沒有無線網路連結的狀態下，設備會進入待機模式，你可以設定幾秒之後進入待機模式。
(在待機模式下,4G WiMAX 網路連結會被關閉,你仍然可以看到本機的網路名稱 (S S I D))
- ◆ **從待機模式甦醒:**當你做以下之一的動作時設備將會從待機模式中甦醒回到正常模式：
 1. 重新連結 U S B 端口

- 2 · 重新連結無線網路
 - 3 · 短按電源開關 1 秒
- ◆ **(幾秒後) 進入休眠模式**：你可以在這裡設定在進入待機模式幾秒後進入休眠模式（在休眠模式下 4G WiMAX 網路以及無線網路都會被關閉）
 - ◆ **從休眠模式甦醒**：當你短按電源開關 1 秒時設備將會從休眠模式中甦醒回到正常模式



你可以利用待機模式來充電，將會使充電更有效率

系統管理 | 關於

GLOBAL MOBILE CORP.

軟體更新 語言切換 電源管理 **關於**

個人化
網際網路設定
區域網路設定
虛擬伺服器設定
系統管理
狀態

重新啓動
登出
重新連接

服務供應商	Gemtek
產品名稱	WIXFMM-109
WAN MAC位址	00:11:22:33:44:55
LAN MAC位址	00:22:33:44:55:66
型號	WIXFMM-109
硬體版本	001
序號	000000000000001

關於

選擇**系統管理** > **關於**可以幫助你讀取到本設備的一些基本資訊：服務供應商、產品名稱、WAN MAC 位址等等

狀態

狀態 | WiMAX 狀態

The screenshot displays the 'WiMAX 狀態' (WiMAX Status) page. The header includes the '全球一動 GLOBAL MOBILE CORP.' logo and navigation tabs for 'WiMAX 狀態', '設備狀態', and '系統記錄'. A left sidebar contains menu items: '個人化', '網際網路設定', '區域網路設定', '虛擬伺服器設定', '系統管理', and '狀態'. The main content area is divided into three sections:

- WiMAX SYSTEM:**
 - 狀態: [SCAN](#)
 - 掃描類型: [HISTORY](#)
 - BSID (基站ID): [N/A](#)
 - RSSI: [N/A](#)
 - CINR: [N/A](#)
 - 溫度: [32 °C / 89 °F](#)
 - 安全: [N/A](#)
 - 過熱: [none](#)
 - 頻寬: [N/A](#)
 - 發射功率: [N/A](#)
 - 最大發射功率: [N/A](#)
 - 最小發射功率: [N/A](#)
 - 最大RSSI值: [N/A](#)
 - 最小RSSI值: [N/A](#)
 - 最大CINR值: [N/A](#)
 - 最小CINR值: [N/A](#)
 - 連接時間: [0 secs](#)
 - 中心頻率: [N/A](#)
 - 連接中斷原因: [N/A](#)
- WiMAX 傳送:**
 - 數據速率: [N/A](#)
 - 封包: [N/A](#)
 - BE 位元組: [N/A](#)
 - UGS 位元組: [N/A](#)
 - RTPS 位元組: [N/A](#)
 - ERTPS 位元組: [N/A](#)
 - NRTPS 位元組: [N/A](#)
- WiMAX 接收:**
 - 數據速率: [N/A](#)
 - 封包: [N/A](#)
 - BE 位元組: [N/A](#)
 - UGS 位元組: [N/A](#)
 - RTPS 位元組: [N/A](#)
 - ERTPS 位元組: [N/A](#)
 - NRTPS 位元組: [N/A](#)

At the bottom of the main content area, there are two buttons: '更新' (Update) and '自動' (Auto). The sidebar also contains three buttons: '重新啟動' (Restart), '登出' (Logout), and '重新連接' (Reconnect).

WiMAX 狀態

選擇狀態 | WiMAX 狀態 顯示 WiMAX 連線狀態

- ◆ **更新:** 點選更新可顯示最新的 WiMAX 連線狀態
- ◆ **自動:** 點選自動可讓頁面自動更新 WiMAX 連線狀態

狀態 | 設備狀態

The screenshot shows the '設備狀態' (Device Status) page in the Gemtek Wimax management interface. The page header includes the Gemtek logo and navigation tabs for 'WIMAX狀態', '設備狀態', and '系統記錄'. A left sidebar contains menu items like '個人化', '網際網路設定', '區域網路設定', '虛擬伺服器設定', '系統管理', and '狀態'. The main content area displays system information under the heading '系統'.

系統	
IP位址	N/A
MAC	00:26:82:af:94:20
子網遮罩	N/A
預設閘道	N/A
IP連接	OFF
防火牆	ON
租約起始時間	N/A
租約期滿	N/A
DNS 伺服器	N/A
時間伺服器	N/A
設備運作時間	0days 0hours 57minutes
設備重新啟動原因	Software Upgrade

At the bottom of the main content area, there are two buttons: '更新' (Refresh) and '自動' (Auto).

設備狀態

選擇狀態>設備狀態 顯示設備狀態

- ◆ **更新:** 點選更新可顯示最新的設備狀態狀態
- ◆ **自動:** 點選自動可讓頁面自動更新設備狀態

狀態 | 系統紀錄

The screenshot shows the 'System Log' (系統紀錄) page in the Gemtek Wimax user interface. The page features a blue header with the Gemtek logo and navigation tabs for 'Wimax Status' (Wimax狀態), 'Device Status' (設備狀態), and 'System Log' (系統紀錄). A left sidebar contains various settings and management options, including 'Personalization' (個人化), 'Internet Network Settings' (網際網路設定), 'Local Network Settings' (區域網路設定), 'Virtual Server Settings' (虛擬伺服器設定), 'System Management' (系統管理), and 'Status' (狀態). Below the sidebar are buttons for 'Restart' (重新啓動), 'Logout' (登出), and 'Reconnect' (重新連接). The main content area displays a list of system logs, with a search bar and a 'Show Level' (顯示級別) dropdown menu set to 'All' (全部). The log entries include timestamps, user info, and syslog messages.

```
HISTORY (retry=1,index=1) <<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<
Jan 1 08:46:06 user.info syslog: [WMX_LOG](1244/wmx_subcore.c): Choose 1
freq from good pool
Jan 1 08:46:09 user.info syslog: [WMX_LOG](74/wmx_notify.c): Doesn't find
any BS..
Jan 1 08:46:09 user.info syslog: [WMX_LOG](75/wmx_notify.c): Change scan
type and try again..
Jan 1 08:46:09 user.info syslog: [WMX_LOG](577/wmx_subcore.c): SCAN TYPE =
HISTORY (retry=2,index=1) <<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<
Jan 1 08:46:09 user.info syslog: [WMX_LOG](1244/wmx_subcore.c): Choose 1
freq from good pool
Jan 1 08:46:11 user.info syslog: [WMX_LOG](74/wmx_notify.c): Doesn't find
any BS..
Jan 1 08:46:11 user.info syslog: [WMX_LOG](75/wmx_notify.c): Change scan
type and try again..
Jan 1 08:46:11 user.info syslog: [WMX_LOG](580/wmx_subcore.c): SCAN TYPE =
NEIGHBOR (index=1) <<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<<
Jan 1 08:46:11 user.info syslog: [WMX_LOG](1271/wmx_subcore.c): Choose 3
freq from neighbor pool
Jan 1 08:46:14 user.info syslog: [MC_DBG](1443/fun_event.c): do_wmx_rm_bsid
()...
Jan 1 08:46:15 user.info syslog: [WMX_LOG](74/wmx_notify.c): Doesn't find
any BS..
Jan 1 08:46:15 user.info syslog: [WMX_LOG](75/wmx_notify.c): Change scan
type and try again..
```

系統紀錄

選擇狀態>系統紀錄 可以让你以及全球一動的客服人員了解你的系統狀態,以解決你的連線問題

重新啓動/登出/重新連結



重新連結/重新啓動

使用者介面左下方有 3 個功能鍵:

- ◆ **重新啓動:** 點選後設備會重新開機
- ◆ **登出:** 點選後設備會登出當前的使用者介面
- ◆ **重新連結:** 點選後設備會重新連結 4G WIMAX 網路