



USER MANUAL

V4.02

CoreDy AC1200 High-Power Router

Model RT1200

Table of Contents

| | |
|---------------------------------------------|----|
| WELCOME..... | 1 |
| LED descriptions..... | 2 |
| Rear Panel..... | 3 |
| Position Your Router..... | 4 |
| Cable Your Router..... | 5 |
| Connect to the Network..... | 6 |
| Wi-Fi Connection..... | 6 |
| Wired Connection..... | 7 |
| Use a web browser to Access the Router..... | 8 |
| Change the Router setting..... | 10 |
| To change the admin password..... | 10 |
| To set up the time of router..... | 10 |
| Schedule Settings..... | 11 |
| Specify WPS Settings..... | 12 |
| Filtering Setup..... | 13 |
| Save/Reload your Router setting | 17 |
| Update the Router Firmware..... | 18 |
| Hide router' s wireless network..... | 18 |
| Change the wireless channel..... | 20 |
| Troubleshooting..... | 21 |
| Sequence to Restart Your Network..... | 21 |
| Check Ethernet Cable Connections..... | 21 |
| Network Settings | 21 |
| Cannot Log In to the Router..... | 22 |
| Wireless Connectivity | 23 |

| | |
|-------------------------------------|----|
| Troubleshoot with the LEDs | 23 |
| Power LED Is Off or Blinking..... | 23 |
| LEDs Never Turn Off | 23 |
| WLAN LED is Off..... | 23 |
| Cannot Access the Internet..... | 24 |
| Troubleshoot PPPoE..... | 24 |
| Troubleshoot Internet Browsing..... | 25 |
| Factory Settings | 26 |
| Technical Specifications | 28 |

WELCOME

The Coreddy RT1200 Dual Band WiFi Router support the next generation WiFi 802.11ac standard. Backward compatible with 802.11 a/n/g/b devices. Supports up to 1167Mbps bandwidth: 2.4 GHz (up to 300Mbps)and 5GHz (up to 867Mbps).

Four High-Power external Antennas providing better performance, wider coverage, higher transmission rates and stability.

Package Contents:

Coreddy RT1200 Dual Band WiFi Router x 1

RJ-45 Networking Cable x 1


Power Adapter x 1

Quick Installation Guide x 1

User Manual x 1

Top and Front Panels

The router has status LEDs on top

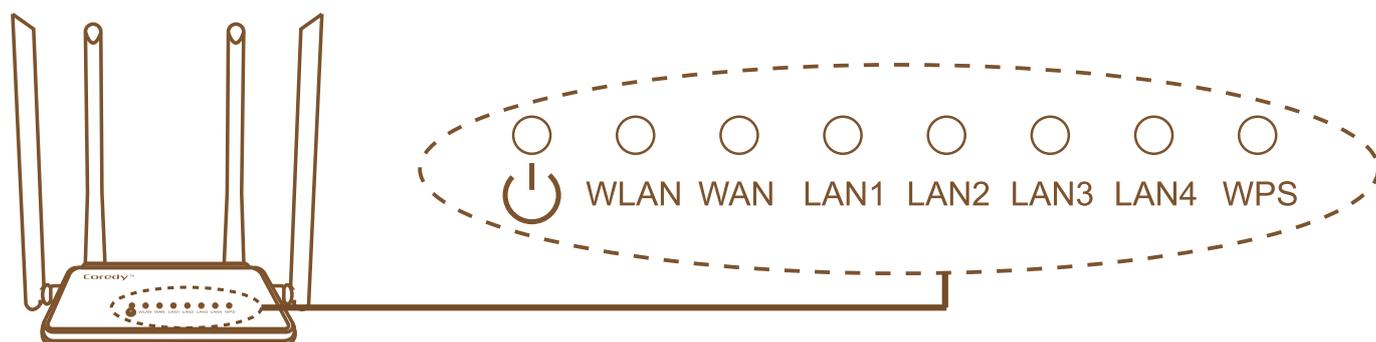


LED descriptions

| LED | Description |
|-------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  (Power) | <p>Lit green. The router is starting.</p> <p>Off. Power is not supplied to the router.</p> |
| WLAN (Wi-Fi) | <p>Blinking fast. Wi-Fi radio is operating.</p> <p>Off. Wi-Fi radio is turn off.</p> |
| WAN (Internet) | <p>Lit green. The router has detected an Ethernet cable connection to the modem.</p> <p>Blinking fast. The Internet connection is successful.</p> <p>Off. No Ethernet cable is connected between the router and the modem.</p> |
| LAN1-LAN4 (Ethernet ports 1-4) | <p>Lit green. A powered-on device is connected to the Ethernet port.</p> <p>Blinking. The port is sending or receiving traffic.</p> <p>Off. No device is connected to this Ethernet port.</p> |
| WPS | <p>Blinking. Press and hold the WPS 3 seconds on the Rear Panel lets you use WPS to join the WiFi network without typing the WiFi password. The WPS LED blinks white during this process.</p> |

Rear Panel

The rear panel has the connections and buttons shown in the following figure.

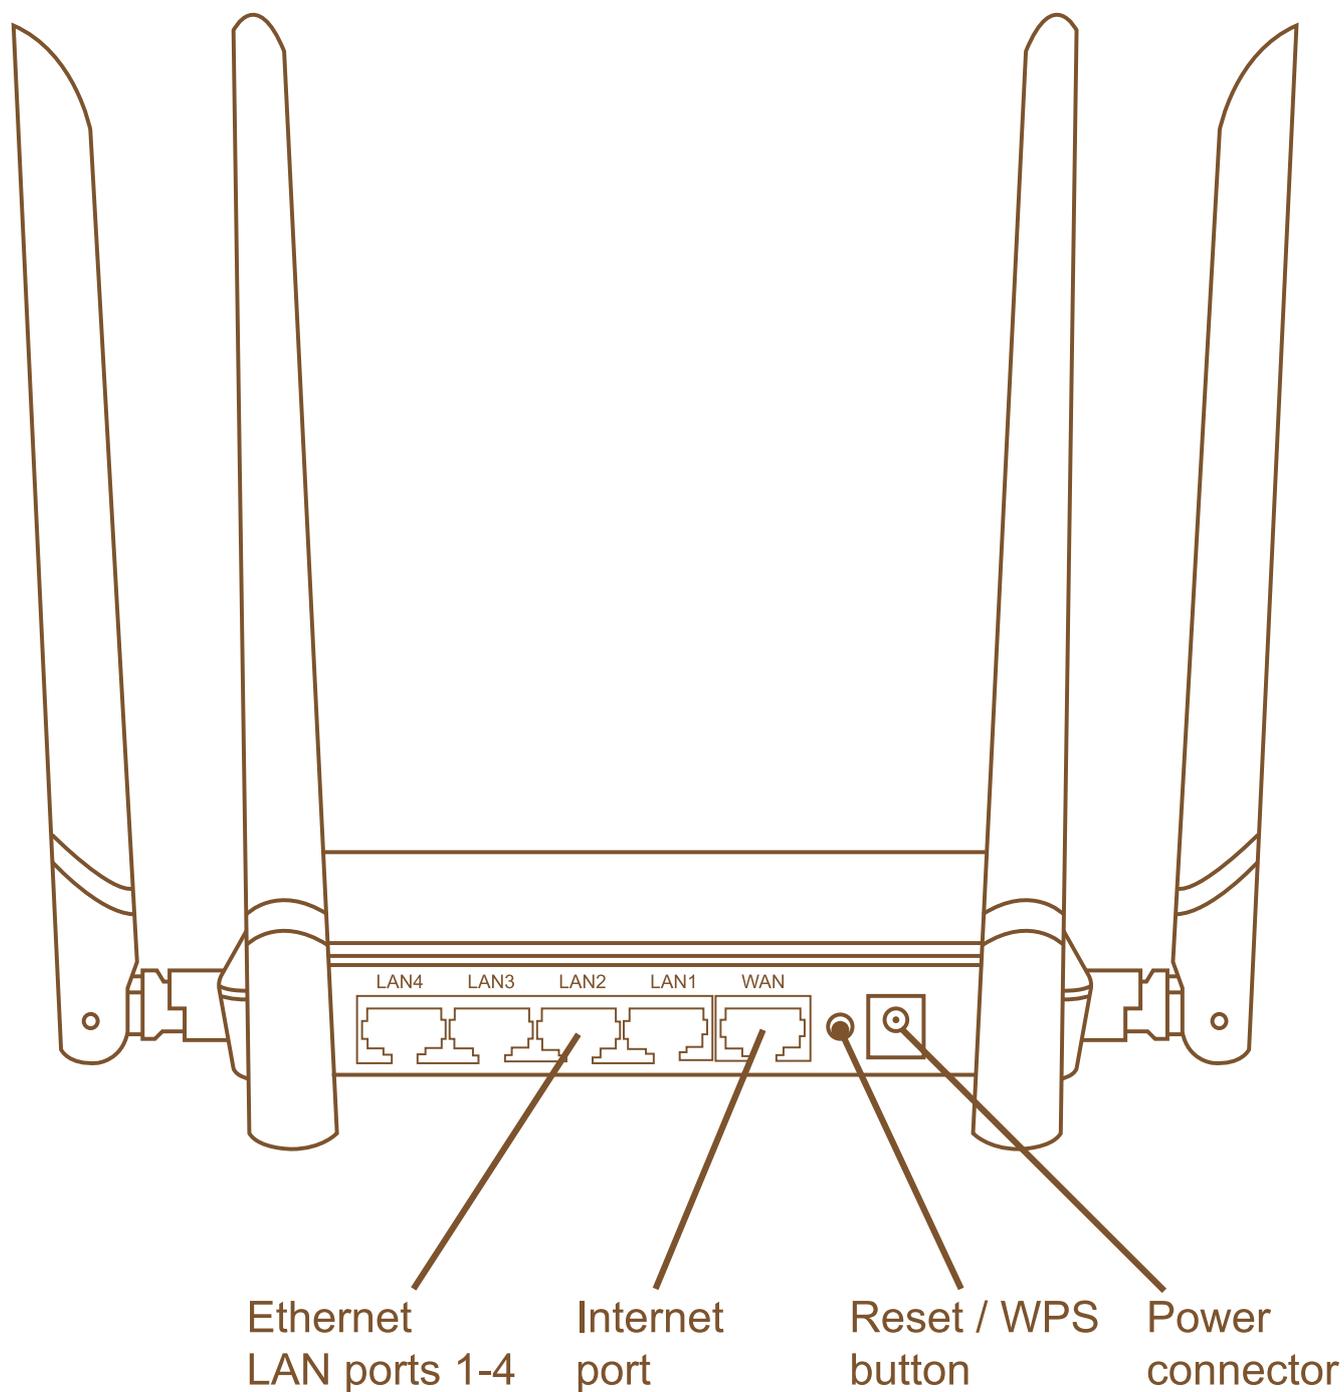

Position Your Router


The router lets you access your network anywhere within the operating range of your wireless network. However, the operating distance or range of your wireless connection can vary significantly depending on the physical placement of your router.

1. Place your router near the center of the area where your computers and other devices operate, and within line of sight to your wireless devices.
2. Make sure that the router is within reach of an AC power outlet and near Ethernet cables for wired computers.
3. Place the router in an elevated location, minimizing the number walls and ceilings between the router and your other devices.
4. Place the router away from electrical devices such as these:
 - Ceiling fans
 - Home security systems
 - Microwaves
 - Computers
 - Base of a cordless phone
 - 2.4 GHz cordless phone
5. Place the router away from large metal surfaces, large glass surfaces, and insulated walls such as these:
 - Solid metal door
 - Aluminum studs
 - Fish tanks
 - Mirrors
 - Brick
 - Concrete

6. (Optional) If you have adjacent access points, use different radio frequency channels to reduce interference.

Cable Your Router

The following image shows how to cable your router:

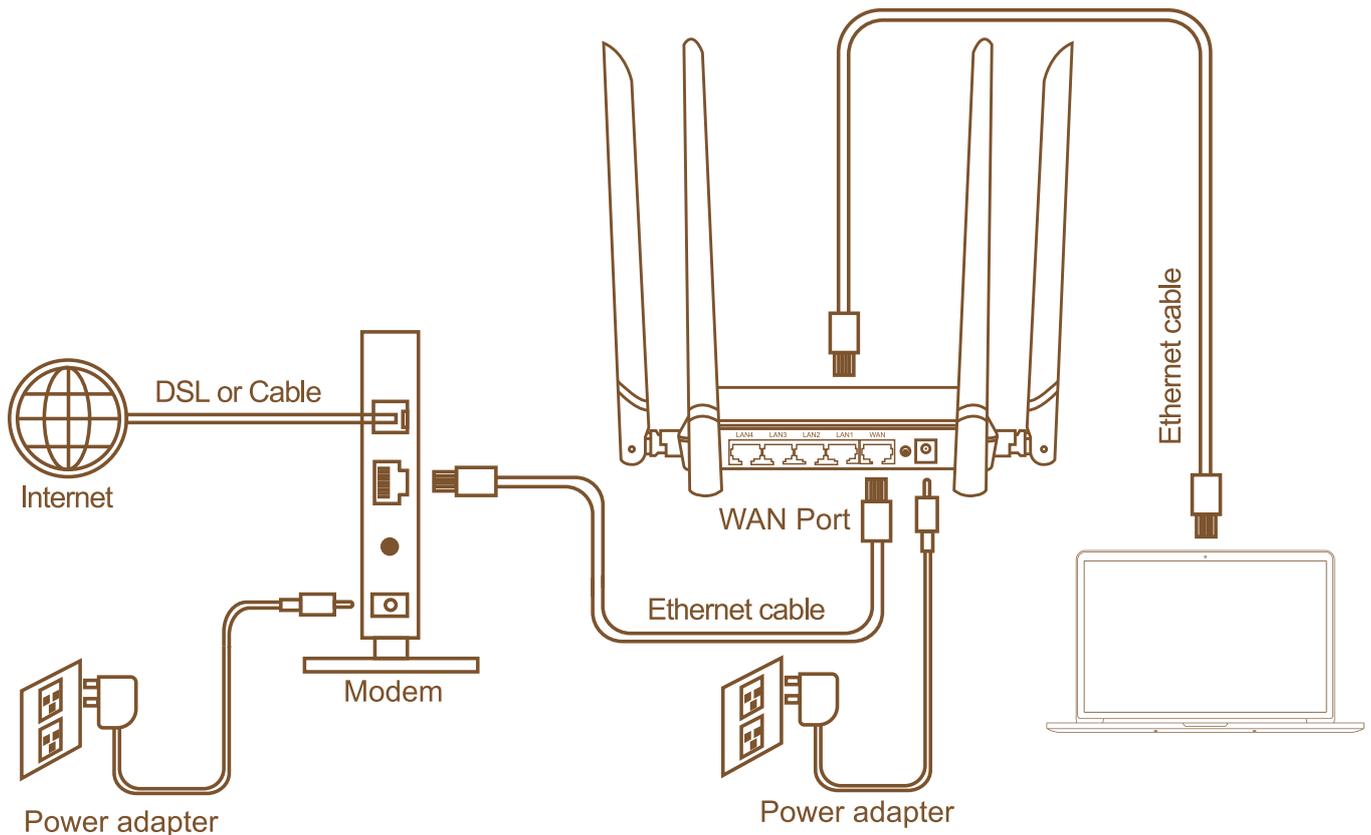

To cable your router:

1. Unplug your modem's power, leaving the modem connected to the wall jack for your Internet service. If your modem has a battery backup, remove the battery.
2. Plug in and turn on your modem. If your modem has a battery backup, replace the battery.
3. Connect your modem to the Internet port of your router with the Ethernet cable that came with your router.

4. Connect the power adapter to your router and plug the power adapter into an outlet.
5. The power LED lights green and then WLAN LED starts blinking when the router is ready.

Connect to the Network

WiFi Connection


You can connect to the router's WiFi network with the smart phone or wireless device.

Connect with the smart phone :

1. Make sure that the router has power (its Power LED is lit).
2. On your smart phone or wireless device, find and select the WiFi network of "Coreddy RT1200_2.4G" .
3. Join the WiFi network.

Your wireless device connects to the WiFi network.

INTERNET

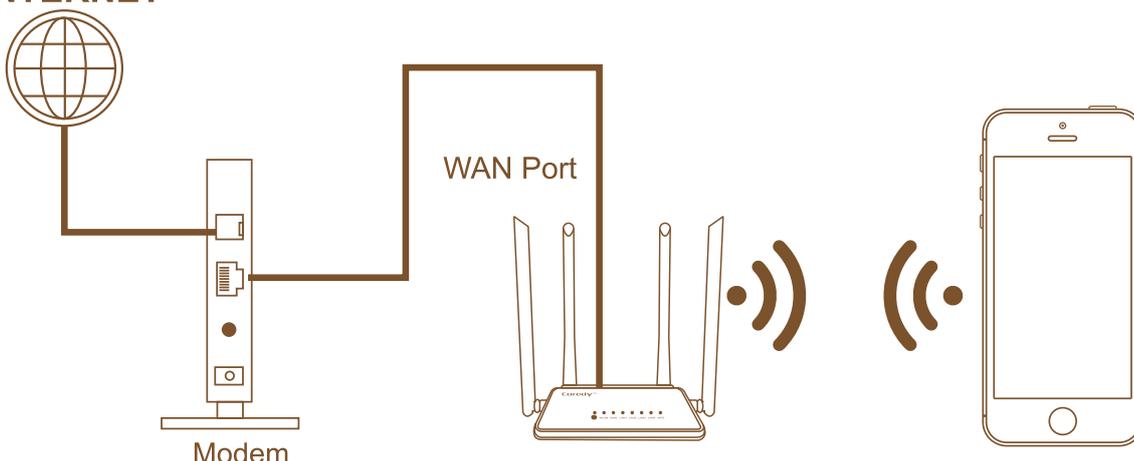


Wired Connection

You can connect to the router's network through a wired or WiFi connection. If you set up your computer to use a static IP address, change the settings so that it uses Dynamic Host Configuration Protocol (DHCP).

To connect your computer to the router with an Ethernet cable

1. Make sure that the router has power (its Power LED is lit).
2. Connect an Ethernet cable to an Ethernet port on your computer.
3. Connect the other end of the Ethernet cable to one of the numbered Ethernet ports.


Your computer connects to the local area network (LAN). A message might display on your computer page to notify you that an Ethernet cable is connected.

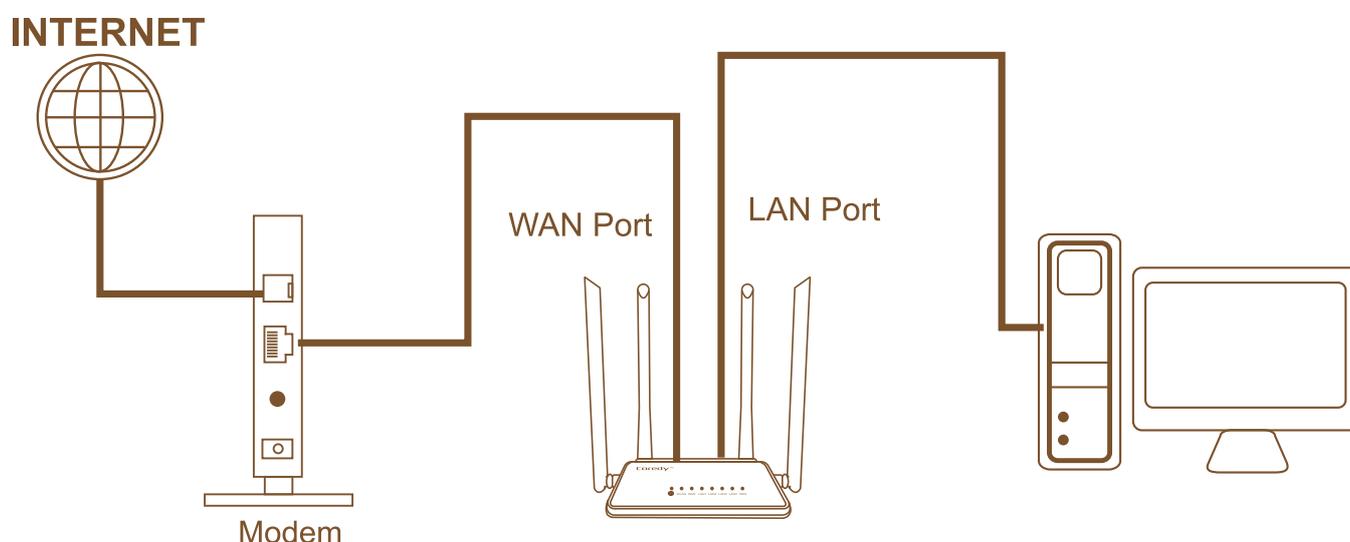

Use a web browser to Access the Router

When you connect to the network (either with WiFi or with an Ethernet cable), you can use a web browser to access the router to view or change its settings.

1. Launch a web browser, enter `http://192.168.0.1/` or `http://rt.setup/` in the address field of the web browser. When prompted, enter `admin` for the user name and `admin` for the password.

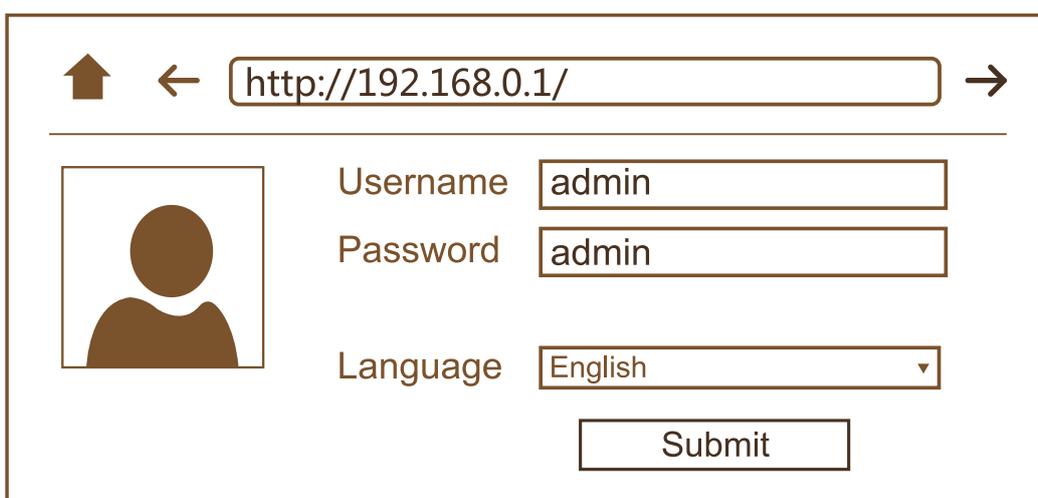


The screenshot shows a web browser interface. The address bar contains the URL `http://192.168.0.1/`. Below the address bar, there is a login form with the following fields:

- Username:** `admin`
- Password:** `admin`
- Language:** `English` (with a dropdown arrow)

A **Submit** button is located at the bottom of the form.

2. Click the Router in the Mode Wizard field.

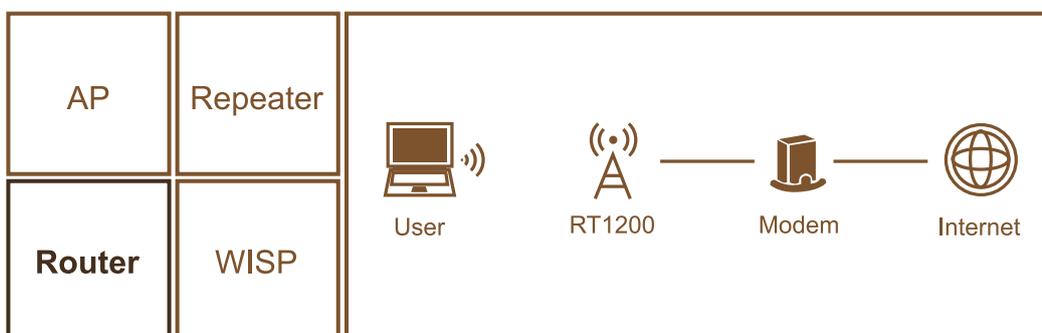

3. Before starting connect to the internet, you might need the following information to set up your router, if you cannot locate this information, contact your internet service provider (ISP) to provide it.

- The ISP configuration information for your DSL account
- DSL login name and password
- Dynamic IP or static IP address settings (special deployment by ISP; this setting is rare)

If your ISP provides you the DSL details, Select PPPoE (DSL/Cable Modem Dial-UP), enter the DSL user name and password, select the Security Type as “WPA/WPA2 Mixed” (recommended) and set the Wi-Fi Network password in “Wi-Fi Key” field, click apply.



Router Wizard

Static IP (Internet Service providers offer a fixed IP address)

Dynamic IP (Automatically obtain an IP address)

PPPoE(DSL/Cable Modem Dial-UP)

User Name

Password

2.4G SSID

AC SSID

Security Type

Wi-Fi Key 24

Hide Characters

Apply

Cancel

Change the router setting

1 To change the admin password.

1. Launch a web browser.
2. Enter `http://192.168.0.1/` or `http://rt.setup/` in the address field of the browser, a login screen displays.
3. Enter admin for the user name and admin for the password.
The BASIC Home screen displays.
4. Select “Password Settings” The BASIC Home screen displays.
5. Type your new password twice.
6. Click the Apply button, Your changes are saved.

If you forget your password, Hold the Reset button on the back of the router for 10 seconds.

2 To set up the time of router.

Set up the time and time zone of the router

1. Launch a web browser from a computer or WiFi device that is connected to the network.
2. Enter `http://192.168.0.1/` or `http://rt.setup/` , a login window displays.
3. Enter the router user name and password.
The BASIC Home page displays.
4. Select the Time Zone Settings.

5. Enter the Current Date and Current Time in field, click Apply.

3 Schedule Settings

You can use this feature to turn off the internet connection from your router at times when you do not need a internet connection. For example, you might turn it off for the weekend if you leave town.

1. Launch a web browser from a computer or WiFi device that is connected to the network.
2. Enter `http://192.168.0.1/` or `http://rt.setup/` , a login window displays.
3. Enter the router user name and password. The BASIC Home page displays.
4. Select Wireless Settings > Schedule Settings.
5. Click Enable, use the lists, radio buttons, and check boxes to set up a period during which you want to turn off the internet connection, Click Apply.
6. Delete or Disable the Schedule settings to turn off the schedule feature, click apply.


| Wireless Settings | Schedule Settings | | | | | | | | | | | | |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|----------|--------|-----------------|----------------------|----------------------------------|--|--|--|--|--|--|
| Basic Settings | Enable Schedule <input checked="" type="radio"/> Enable <input type="radio"/> Disable | | | | | | | | | | | | |
| 2.4G Advanced Settings | Choose computer <input type="text" value="Select One Device"/> | | | | | | | | | | | | |
| AC Advanced Settings | Select day <input type="radio"/> Sun <input type="radio"/> Mon <input type="radio"/> Tue <input type="radio"/> Wed <input type="radio"/> Thu <input type="radio"/> Fri <input type="radio"/> Sat | | | | | | | | | | | | |
| WPS Settings | Select online time From: <input type="text" value="00"/> : <input type="text" value="00"/> To: <input type="text" value="00"/> : <input type="text" value="00"/> | | | | | | | | | | | | |
| Schedule Settings | <input type="button" value="Apply"/> | | | | | | | | | | | | |
| | <table border="1"> <thead> <tr> <th>Computer</th> <th>Schedule</th> <th>Delete</th> </tr> </thead> <tbody> <tr> <td>Computer-xxxxxx</td> <td>Tue, Thu 09:00–18:00</td> <td><input type="button" value="X"/></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </tbody> </table> | Computer | Schedule | Delete | Computer-xxxxxx | Tue, Thu 09:00–18:00 | <input type="button" value="X"/> | | | | | | |
| Computer | Schedule | Delete | | | | | | | | | | | |
| Computer-xxxxxx | Tue, Thu 09:00–18:00 | <input type="button" value="X"/> | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |

4 Specify WPS Settings

Wi-Fi Protected Setup (WPS) lets you join the WiFi network without typing the WiFi password.

Method 1 to specify WPS Settings:

1. press and hold the WPS button 3 seconds.
2. the WPS LED on the top of router will start blinking.
3. Start your device's WPS function to join the WiFi network.

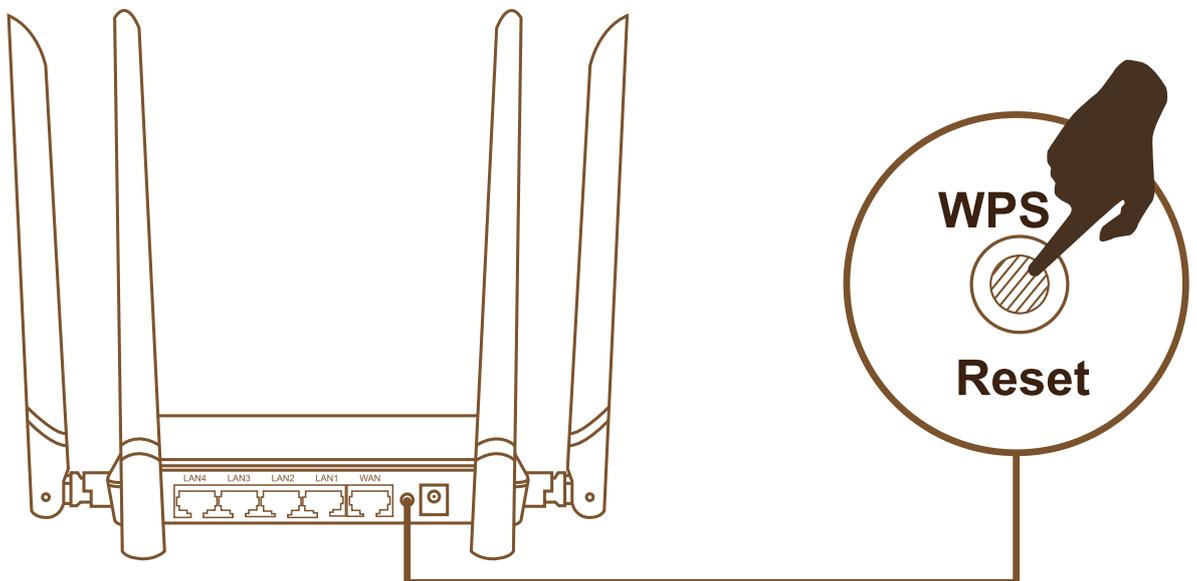

Method 2 to specify WPS Settings:

1. Launch a web browser.
2. Enter <http://192.168.0.1/> or <http://rt.setup/> in the address field of the browser, a login screen displays.
3. Enter admin for the user name and admin for the password.
4. Select “WPS Settings”, by default the WPS function is enable.

The Router's PIN field displays the PIN that you use on a registrar (for example, from the Network Explorer on a Vista Windows computer) to configure the router's wireless settings through WPS.

5. Click the Start button to start WPS, the WPS LED on the top of router will start blinking.
6. Start your device's WPS function to join the WiFi network.

5 Filtering Setup

Allow or Block Access to Your Network

You can use Filtering Setup to block access to your network.

To set up Filtering Setup:

1. Launch a web browser from a computer or WiFi device that is connected to the network.
2. Enter `http://192.168.0.1/` or `http://rt.setup/` , a login window displays.
3. Enter the router user name and password.
The BASIC Home page displays.
4. Select **Advance Settings > Filtering Setup > Mac Filter**.
The Filtering Setup page displays.
5. Select the Mac Filter Enable check box
6. Select the Device ComboBox, then select the "Action" ComboBox for an access rule, "Comment" is Optional.

Drop: This rule is block the device you selected to access your network.

Accept: This rule is accept the device you selected to access your network.

- Click the Apply button.
Your changes take effect.

Filtering Setup

Mac Filter
Keyword Filter
URL filter

Max Filter Enable Enable Disable

Select Device

Action

Comment

Current Mac filtering rules in system:

| No. | Device Name | Mac Address | Action | Comment | |
|-----|-----------------|-------------------|--------|---------|----------------------------------|
| 1 | android-c43ce13 | D4:97:0B:BB:6B:46 | Drop | | <input type="button" value="—"/> |

Use Keywords to Block Internet Sites

- Launch a web browser from a computer or WiFi device that is connected to the network.
- Enter `http://192.168.0.1/` or `http://rt.setup/` , a login window displays.
- Enter the router user name and password.
The BASIC Home page displays.
- Select Advance Settings > Filtering Setup > Keyword Filter.

5. In the Keyword field, enter a keyword or domain that you want to block.

For example:

- Specify “sports” to block http://sports.yahoo.com
- Specify “.com” if you want to allow only sites with domain suffixes such as .edu or .gov.
- Enter a period (.) to block all Internet browsing access.

6. Click the Add button.

Keyword blocking takes effect after few seconds.

7. Select the Keyword you added, then click “Delete” button to remove it from list.

Filtering Setup

Mac Filter
Keyword Filter
URL filter

filter Proxy java ActiveX

Current Host(Keyword) filtering rules in system:

| | | |
|--------|------|--|
| sports | .com | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Keyword:

Block Internet Sites

1. Launch a web browser from a computer or WiFi device that is connected to the network.
2. Enter `http://192.168.0.1/` or `http://rt.setup/` , a login window displays.
3. Enter the router user name and password.
The BASIC Home page displays.
4. Select Advance Settings > Filtering Setup > URL Filter.
5. In the URL field, enter a website address that you want to block.
For example:
 - Specify `www.yahoo.com` to block `http://www.yahoo.com`
6. Click the Add button.
Internet sites blocking takes effect after few seconds.
7. Select the website address you added, then click “Delete” button to remove it from list.

Filtering Setup

Mac Filter
Keyword Filter
URL filter

filter Proxy java ActiveX


Current URL filtering rules in system:

| | | |
|-------------------------------------------------|------------------------------------|---------------------------------------|
| www.yahoo.com | | |
| | | |
| | | |
| | | |
| | | |
| URL: <input style="width: 150px;" type="text"/> | <input type="button" value="Add"/> | <input type="button" value="Delete"/> |

6 Save/Reload your Router setting

You can use this feature to save your router's setting and reload it easy when you reset the router to factory setting or update the router firmware.

1. Launch a web browser.
2. Enter `http://192.168.0.1/` or `http://rt.setup/` in the address field of the browser, a login screen displays.
3. Enter admin for the user name and admin for the password.
The BASIC Home screen displays.
4. Select Save/Reload Setting.
5. Click the Save button to save the current setting and click browse and upload to reload the saved setting.

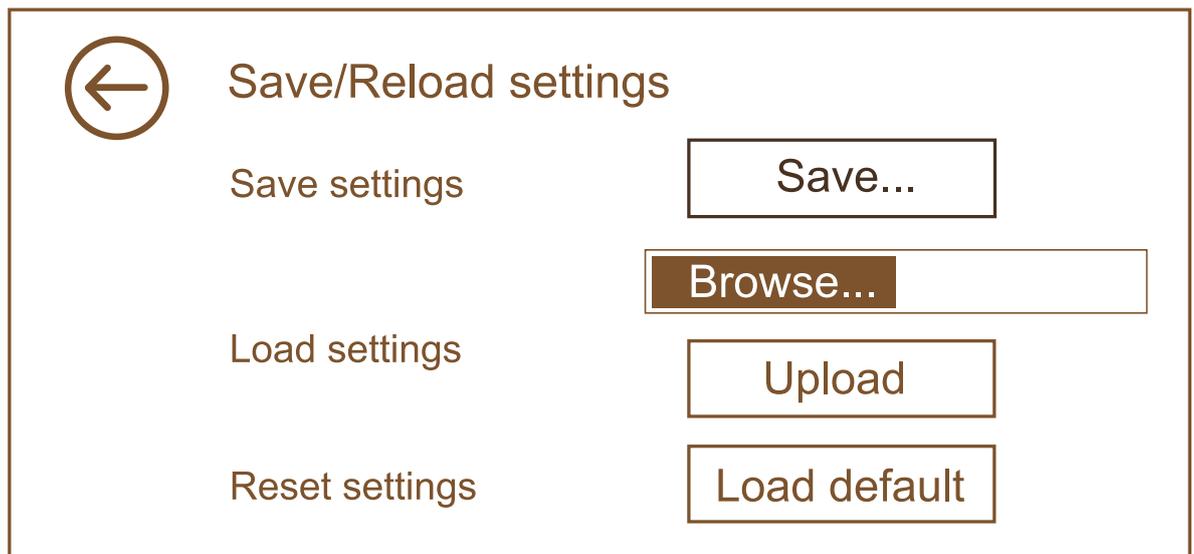

7 Update the Router Firmware

The router firmware (routing software) is stored in flash memory. You might check if new firmware is available at www.coredytech.com and to update your product.

1. Launch a web browser.
2. Enter `http://192.168.0.1/` or `http://rt.setup/` in the address field of the browser, a login screen displays.
3. Enter admin for the user name and admin for the password.
The BASIC Home screen displays.
4. Select Upgrade Firmware.
5. Select a firmware file and click upload.

WARNING:

To avoid the risk of corrupting the firmware, do not interrupt the upgrade. For example, do not close the browser, click a link, or load a new page. Do not turn off the router.

8 Hide router's wireless network

You can hide the wireless network that which is hidden and does not display in your wireless client's scanning list, other people cannot join the wireless network if they don't know your wireless network SSID name exactly. for example, the Wi-Fi thief could not using your wireless network even they know your Wi-Fi Password.

1. Launch a web browser.
2. Enter `http://192.168.0.1/` or `http://rt.setup/` in the address field of the browser, a login screen displays.
3. Enter admin for the user name and admin for the password.
The BASIC Home screen displays.
4. Select Wireless Settings > Broadcast SSID.
5. Select the Disable check box to hide the wireless network.
6. Change the SSID name easy to remember, click Apply.
7. Google how to join a hidden network + “your device name”,
For example: google “how to join a hidden network on iPhone”

Wireless Settings

| | Wi-Fi 2.4G | Wi-Fi 5G / AC |
|--------------------------------------|----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| Broadcast SSID | <input type="radio"/> Enable <input checked="" type="radio"/> Disable | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| SSID | <input type="text" value="easytoremember2.4g"/> | <input type="text" value="easytoremember5g"/> |
| Security Type | <input type="text" value="WPA/WPA2 Mix (Strongly Recommend)"/> | |
| Wi-Fi Key | <input type="text" value="••••••••"/> | <input type="text" value="••••••••"/> |
| Wi-Fi Channel | <input type="text" value="6"/> | <input type="text" value="36"/> |
| Wi-Fi Power | <input checked="" type="radio"/> High <input type="radio"/> Medium <input type="radio"/> Low | |
| <input type="button" value="Apply"/> | | |

9 Change the wireless channel

If you have adjacent access points, use different radio frequency channels to reduce interference.

In some regions, not all channels are available. Do not change the channel number unless you experience interference (shown by lost connections or slow data transfers). If this happens, experiment with different channels to see which is the best, or Google “How to choosing the right channel”.

1. Launch a web browser.
2. Enter `http://192.168.0.1/` or `http://rt.setup/` in the address field of the browser, a login screen displays.
3. Enter admin for the user name and admin for the password.
The BASIC Home screen displays.
4. Select Wireless Settings > Wi-Fi Channel
5. Select the drop-down box to change the WiFi channel, click the Apply.

Wireless Settings

| | Wi-Fi 2.4G | Wi-Fi 5G / AC |
|--------------------------------------|----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| Broadcast SSID | <input type="radio"/> Enable <input checked="" type="radio"/> Disable | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| SSID | <input type="text" value="easytoremember2.4g"/> | <input type="text" value="easytoremember5g"/> |
| Security Type | <input type="text" value="WPA/WPA2 Mix (Strongly Recommend)"/> | |
| Wi-Fi Key | <input type="password" value="....."/> | <input type="password" value="....."/> |
| Wi-Fi Channel | <input type="text" value="6"/> | <input type="text" value="36"/> |
| Wi-Fi Power | <input checked="" type="radio"/> High <input type="radio"/> Medium <input type="radio"/> Low | |
| <input type="button" value="Apply"/> | | |

Troubleshooting

Sequence to Restart Your Network

When you need to restart your network, follow this sequence:

1. Turn off and unplug the modem.
2. Turn off the router.
3. Plug in the modem and turn it on. Wait two minutes.
4. Turn on the router and wait two minutes.

Check Ethernet Cable Connections

If your device does not power on, make sure that the Ethernet cables are securely plugged in:

The Internet LED on the router is on if the Ethernet cable connecting the router and the modem is plugged in securely and the modem and router are turned on.

If one or more powered-on computers are connected to the router by an Ethernet cable, the corresponding numbered router LAN port LED lights.

Network Settings

Make sure that the network settings of the computer are correct. Wired and wirelessly connected computers must use network (IP) addresses on the same network as the router. The simplest way to do this is to configure each computer to obtain an IP address automatically using DHCP.

Some cable modem service providers require you to use the MAC address of the computer initially registered on the account. You can view the MAC address in the Attached Devices page.

Cannot Log In to the Router

If you are unable to log in to the router from a computer or smart phone on your local network, Unplug the router's power to reboot the router and try to log in again.

- If you are using an Ethernet-connected computer, check the Ethernet connection between the computer and the router.

- Make sure that the IP address of your computer is on the same subnet as the router. If you are using the recommended addressing scheme, your computer's address is in the range of 192.168.0.2 to 192.168.0.254.

- If your computer's IP address is shown as 169.254.x.x, recent versions of Windows and Mac OS generate and assign an IP address if the computer cannot reach a DHCP server. These autogenerated addresses are in the range of 169.254.x.x. If your IP address is in this range, check the connection from the computer to the router, and reboot your computer.

- If your router's IP address was changed and you do not know the current IP address, clear the router's configuration to factory defaults. This sets the router's IP address to 192.168.0.1. For more information, see [Factory Settings on Troubleshooting > Page 25](#).

- Make sure that your browser has Java, JavaScript, or ActiveX enabled. If you are using Internet Explorer, click the Refresh button to be sure that the Java applet is loaded.

- Try quitting the browser and launching it again.

- Make sure that you are using the correct login information. The user name is admin, and the default password is admin. Make sure that Caps Lock is off when you enter this information.

- If you are attempting to set up your CoreDy behind an existing router in your network, use bridge mode or set up the router as an access point.

- If you are attempting to set up your Coredy router as a replacement for an ADSL gateway in your network, the router cannot perform many gateway services. For example, the router cannot convert ADSL or cable data into Ethernet networking information. Coredy does not support such a configuration.

Wireless Connectivity

If you are having trouble connecting wirelessly to the router, try to isolate the problem:

- Does the wireless device or computer that you are using find your wireless network?

If not, check the WiFi LED on the front of the router. If it is off, you can press the WiFi On/Off button on the router to turn the router wireless radios back on.

If you disabled the router's SSID broadcast, then your wireless network is hidden and does not display in your wireless client's scanning list. (By default, SSID broadcast is enabled.)

- Does your wireless device support the security that you are using for your wireless network (WPA or WPA2)?

- If you want to view the wireless settings for the router, use an Ethernet cable to connect a computer to a LAN port on the router. Then log in to the router, and select BASIC > Wireless.

Note:Be sure to click the Apply button if you change settings.

If your wireless device finds your network, but the signal strength is weak, check these conditions:

- Is your router too far from your computer, or too close? Place your computer near the router, but at least 6 feet (1.8 meters) away, and see whether the signal strength improves.

- Are objects between the router and your computer blocking the wireless signal?

Troubleshoot with the LEDs

Power LED Is Off or Blinking

- Make sure that the power adapter is securely connected to your router and securely connected to a working power outlet.
- Check that you are using the power adapter that CoreDy supplied for this product.
- If the Power LED blinks slowly and continuously, you might have a hardware problem. For recovery instructions, or help with a hardware problem, contact technical support at www.coredytech.com/support

LEDs Never Turn Off

When the router is turned on, If all the LEDs stay on, this indicates a fault within the router.

If all LEDs are still lit one minute after power-up, do the following:

- Cycle the power to see if the router recovers.
- Press and hold the Reset button at least 10 seconds to return the router to its factory settings.

If the error persists, you might have a hardware problem. Contact technical support at www.coredytech.com/support

WLAN LED is Off

If the WLAN LED stays off, check to see if the Wireless radios is turn off in Wireless Settings.

1. Launch a web browser from a computer cable connect with the router.
2. Enter <http://192.168.0.1/> or <http://rt.setup/> , a login window displays.

3. Enter the router user name and password.
The BASIC Home page displays.
4. Select Wireless Settings > 2.4G Advanced Settings > Wireless ON/OFF > Select ON
Select Wireless Settings > 5G Advanced Settings > Wireless ON/OFF > Select ON
The WLAN LED is lit when the wireless radio is turned on.

Cannot Access the Internet

If you can access your router but not the Internet, check to see if the router can obtain an IP address from your Internet service provider (ISP). Unless your ISP provides a fixed IP address, your router requests an IP address from the ISP. You can determine whether the request was successful using the Router Status page.


Troubleshoot PPPoE

If you are using PPPoE, try troubleshooting your Internet connection.

To troubleshoot a PPPoE connection:

1. Log in to the router.
2. Check the Connection Status display in Green background to see if your PPPoE connection is up and working.
3. If you don't have a connection, you can attempt to reconnect by clicking the WAN Settings. Select the PPPoE (DSL/Cable Modem Dial-UP), type the PPPoE user name and password, the router continues to attempt to connect indefinitely.

4. If you cannot connect after several minutes, you might be using an incorrect service name, user name, or password. There might also be a provisioning problem with your ISP. Unless you connect manually, the router does not authenticate using PPPoE until data is transmitted to the network.

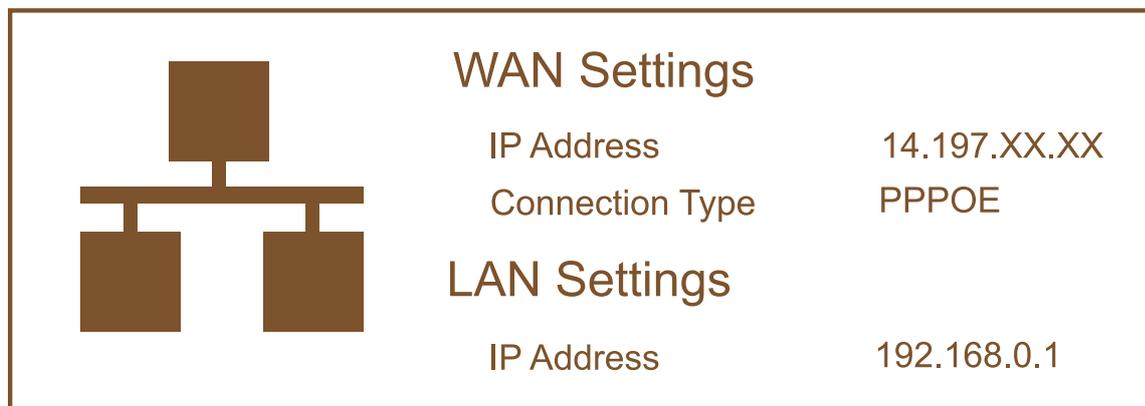

Troubleshoot Internet Browsing

If your router can obtain an IP address but your computer is unable to load any web pages from the Internet, check the following:


- Your computer might not recognize any DNS server addresses. A DNS server is a host on the Internet that translates Internet names (such as www addresses) to numeric IP addresses.

ask your Internet Service Provider (ISP) to provides the correct DNS address, configure your computer manually with a DNS address, as explained in the documentation for your computer, if you don't know how to manually the DNS, Contact technical support at www.coredytech.com/support

- You might be running login software that is no longer needed. If your ISP provided a program to log you in to the Internet (such as WinPoET), you no longer need to run that software after installing your router. You might need to go to Internet Explorer and select Tools > Internet Options, click the Connections tab, and select the Never dial a connection.

Factory Settings

You can return the router to its factory settings. press and hold the Reset button on the back of the router for at least 10 seconds, then all the LEDs will stay on for few seconds. The router resets, and returns to the factory configuration settings shown in the following table.

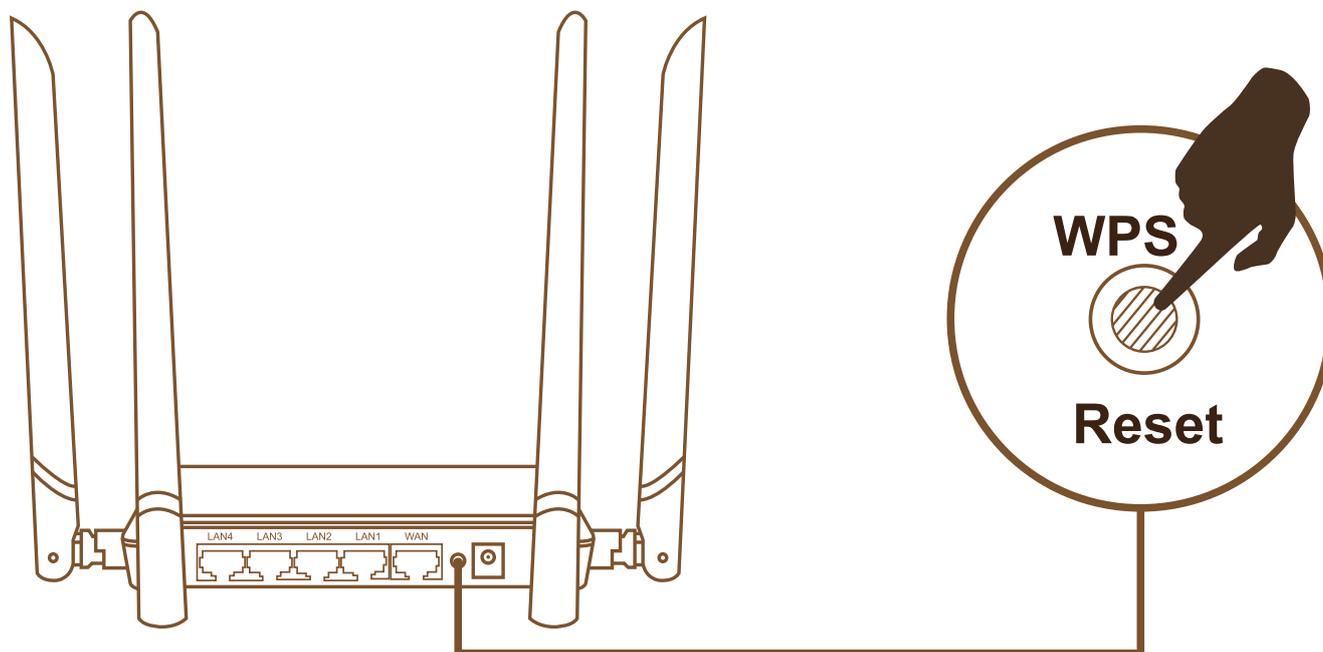

| Feature | | Default behavior |
|---------------------|------------------------------------|-------------------------------------------------|
| Router Login | User login URL | http://192.168.0.1 or http://rt.setup/ |
| | User name (case-sensitive) | admin |
| | Login password (case-sensitive) | admin |
| Internet connection | WAN MAC address | Use default hardware address |
| | RTS Threshold | 2347 |
| | Port speed | AutoSensing |
| Local network (LAN) | LAN IP | 192.168.0.1 |
| | Subnet mask | 255.255.255.0 |
| | DHCP server | Enable |
| | DHCP range | 192.168.0.2 to 192.168.0.254 |
| | DHCP starting IP address | 192.168.0.2 |
| | DHCP ending IP address | 192.168.0.254 |
| | DMZ | Disable |
| Wireless | Wireless communication | Enabled |
| | SSID name of 2.4G | CoreDY RT1200_2.4G |
| | SSID name of 5G | CoreDY RT1200_5G |
| | Security Type | WAP/WPA2 Mix, WPA2-PSK, WPA-PSK, WEP |
| | Broadcast SSID | Enabled |
| | Transmission speed | Auto |
| | Operating mode | Up to 300 Mbps at 2.4 GHz, 877 Mbps at 5 GHz |

Technical Specifications

| Feature | Description |
|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Data and routing protocols | TCP/IP, RIP-1, RIP-2, DHCP, PPPoE, PPTP, Bigpond, Dynamic DNS, UPnP |
| Power adapter | <ul style="list-style-type: none"> • North America: 120V, 60 Hz, input • UK, Australia: 240V, 50 Hz, input • Europe: 230V, 50 Hz, input • All regions (output): 5.0V/2.0A DC output |
| Operating temperature | 0° to 40° C (32° to 104° F) |
| Operating humidity | 90% maximum relative humidity, noncondensing |
| Electromagnetic emissions | FCC Part 15 Class B VCCI Class B EN 55 022 (CISPR 22), Class B C-Tick N10947 |
| LAN | 10BASE-T or 100BASE-TX RJ-45 |
| WAN | 10BASE-T or 100BASE-TX RJ-45 |
| Wireless | Maximum wireless signal rate complies with the IEEE 802.11 standard. |
| Data encoding standards | IEEE 802.11ac 2.0 IEEE 802.11n version 2.0 IEEE 802.11n 256QAM IEEE 802.11g, IEEE 802.11b 2.4 GHz IEEE 802.11n, IEEE 802.11a 5.0 GHz |
| Maximum computers per wireless network | Limited by the amount of wireless network traffic generated by each node (typically 50–70 nodes). |
| Operating frequency range | 2.4 GHz 2.412–2.462 GHz (US) 2.412–2.472 GHz (Japan) 2.412–2.472 GHz (Europe ETSI) 5 GHz 5.18–5.24 + 5.745–5.825 GHz (US) 5.18–5.24 GHz (Europe ETSI) |
| 802.11 security | WPA-PSK, WPA2-PSK, and WPA/WPA2 |

Coreedy™

+1-800-999-8470 (US) Mon-Fri 9:00-19:00 (CST)
+44-808-134-9909 (UK) Mon-Fri 14:00-01:00 (GMT)
support@coredytech.com
www.coredytech.com