

D-Link Quick Installation Guide

This product can be set up using any current Web browser, i.e., Internet Explorer 6 or Netscape Navigator 6.2.3.



DWL-G800AP
AirPlus Xtreme G™
Wireless Range Extender

Before You Begin

It is best to use a computer (with an Ethernet adapter) that is connected to a switch for configuring the DWL-G800AP. The default IP address for the DWL-G800AP is **192.168.0.30** with a Subnet Mask of **255.255.255.0**. You will need to assign your computer a static IP address within the same range as the DWL-G800AP's IP address for the purpose of configuring the DWL-G800AP. **See the Manual on the CD-ROM if you need assistance in assigning a static IP address for your network adapter.**

Check Your Package Contents



DWL-G800AP Wireless Range Extender



CD-ROM (containing Manual and Warranty)



Ethernet (CAT5 UTP) Cable



5V DC, 2.5A Power Adapter




Using a power supply with a different voltage rating will damage and void the warranty of this product.


If any of the above items are missing, please contact your reseller.

1

Connecting The DWL-G800AP Wireless Range Extender To Your Network

- A.** First, connect the power adapter to the **receptor** at the back panel of the DWL-G800AP and then plug the other end of the power adapter to a wall outlet or power strip. The **Power LED** will turn **ON** to indicate proper operation.
- B.** Using a Ethernet cable, insert one end of the cable to the **LAN port** on the back panel of the DWL-G800AP and the other end of the cable to a switch/router. **Note:** You also have the option of connecting the DWL-G800AP directly to the computer that will be used for configuration. The Link LED light will illuminate to indicate a proper Ethernet connection. (Note: The LAN Port on the DWL-G800AP is Auto MDI/MDI-X meaning you can use a straight-through or crossover cable to the LAN Port.)
- C.** Computers with 802.11g wireless adapters such as the DWL-G650 *AirPlus Xtreme G™* Wireless Cardbus Adapter and the DWL-G520 *AirPlus Xtreme G™* Wireless PCI Adapter can connect to the DWL-G800AP. By default, the DWL-G800AP is set in repeater mode and will extend the wireless signal from a wireless gateway or access point.

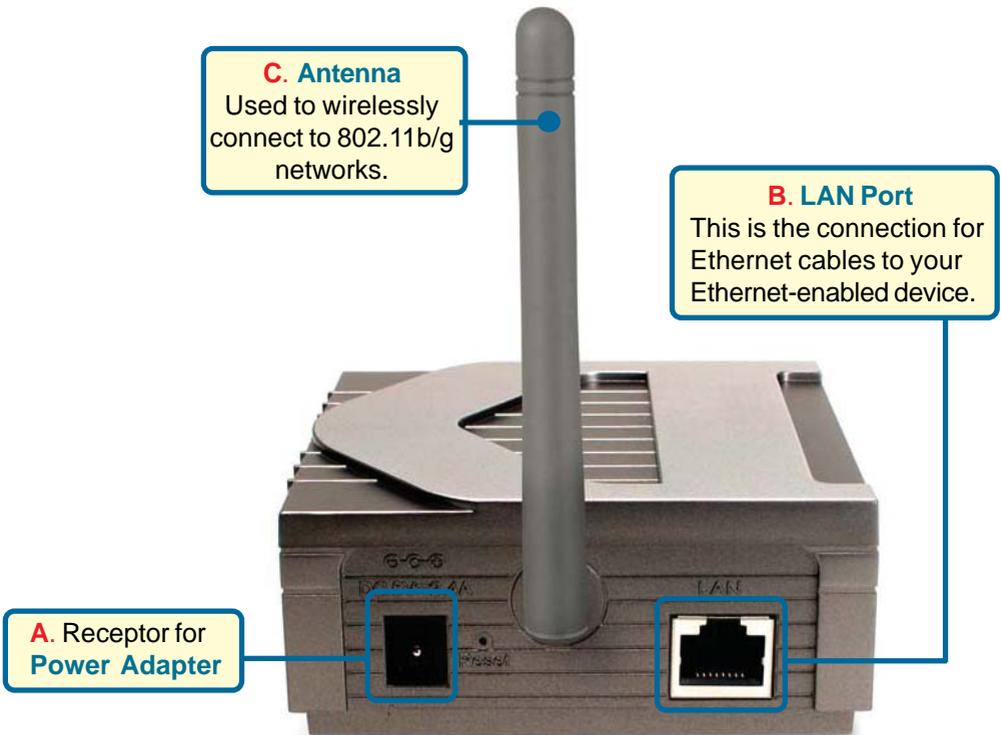


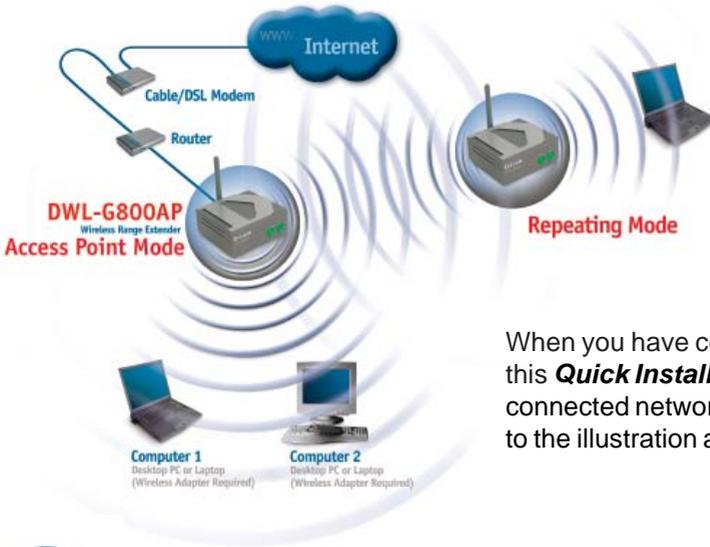

When you have completed the steps in this **Quick Installation Guide**, your connected network should look similar to the illustration above.

2 Using The Setup Wizard

Open your **Web browser** and type **"http://192.168.0.30"** into the URL address box. Then press the **Enter** or **Return** key.

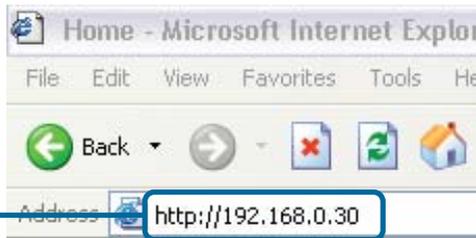

The logon pop-up screen will appear.

Type **"admin"** for the username and leave the password field blank.



Click **OK**

2 Using The Setup Wizard (continued)

Once you have logged in, the **Home** screen will appear.

Click **Run Wizard**




The screenshot shows the D-Link DWL-G800AP Home screen. The top navigation bar includes 'Home', 'Network', 'Wireless', 'Admin', and 'Help'. The 'Home' tab is selected. Below the navigation bar, there is a 'Setup Wizard' section with a 'Run Wizard' button. A callout box points to this button with the text 'Click Run Wizard'. Below the 'Run Wizard' button, there is a 'Device Information' section with a table of statistics for Ethernet and Wireless.

Device Information			
Firmware Version 1.0 b2, Tue, 25 Nov 2003			
Ethernet			
■ MAC Address	001234567890	■ Send	Good Packets 13
■ IP Address	192.168.0.30		Dropped Packets 0
■ Subnet Mask	255.255.255.0	■ Receive	Good Packets 246
■ Gateway	0.0.0.0		Dropped Packets 0
Wireless			
■ SSID	default	■ Send	Good Packets 210
■ Encryption Function	Disabled		Dropped Packets 7
■ Channel	6	■ Receive	Good Packets 0
■ AP mode	Repeater		Dropped Packets 0

You will see the following screens.

Click **Next**

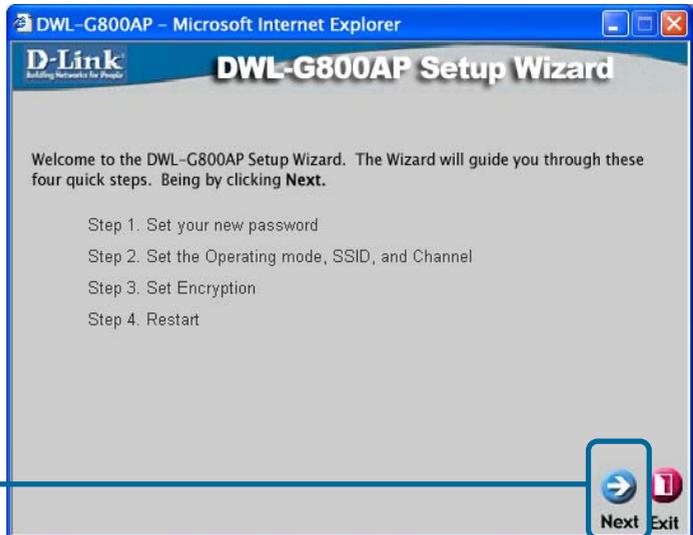

The screenshot shows the D-Link DWL-G800AP Setup Wizard screen. The title bar reads 'DWL-G800AP - Microsoft Internet Explorer'. The main heading is 'DWL-G800AP Setup Wizard'. Below the heading, there is a welcome message: 'Welcome to the DWL-G800AP Setup Wizard. The Wizard will guide you through these four quick steps. Being by clicking **Next**.' Below the welcome message, there is a list of four steps: Step 1. Set your new password; Step 2. Set the Operating mode, SSID, and Channel; Step 3. Set Encryption; Step 4. Restart. At the bottom right, there is a 'Next' button with a right arrow and an 'Exit' button with a red 'X'.

- Step 1. Set your new password
- Step 2. Set the Operating mode, SSID, and Channel
- Step 3. Set Encryption
- Step 4. Restart

Step 1 - Set up your new password. You have the option to establish a password.

Click **Next**

D-Link Building Networks for People

DWL-G800AP Setup Wizard

Set Password

You may change the **admin** account password by entering in a new password. Click **Next** to continue.

New Password:

Confirm Password:

Back Next Exit

Step 2 - Wireless Setup
By default the DWL-G800AP is set to Repeater mode.

To repeat the wireless signal, click on **Site Survey** to bring up a list of available access points to select from.

Click **Next**

D-Link Building Networks for People

DWL-G800AP Setup Wizard

Set Wireless LAN Connection

Choose the Operating mode and enter in the SSID name and Channel number to be used for the Wireless Access Point. Click **Next** to continue.

Operating Mode: AP Mode Repeater

SSID: Site Survey

Channel:

Back Next Exit

Step 3 - Encryption
The DWL-G800AP is capable of three levels of wireless encryption: 64-bit, 128-bit, and 256-bit. **By default the encryption is disabled.** You can change the encryption settings for more secure wireless communication.

Click **Next**

D-Link Building Networks for People

DWL-G800AP Setup Wizard

Setup Encryption

If you wish to use encryption, enable it here and enter the encryption Key values. Click **Next** to continue.

Wep: Enabled Disabled

Encryption:

WEP Mode:

Key1:

Key2:


Key3:

Key4:

Back Next Exit

3

Your Setup is Complete!

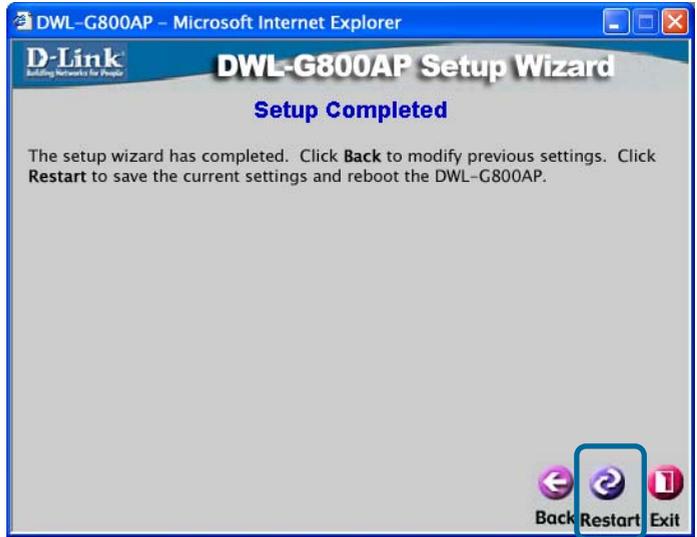


Click **Restart**

4


Connecting to the DWL-G800AP

Using the *AirPlus Xtreme G™* Wireless Utility included with the *AirPlus Xtreme G™* Adapters, you can browse and connect to the DWL-G800AP.

 The MAC address of the DWL-G800AP is listed on the product sticker on the bottom of the unit.

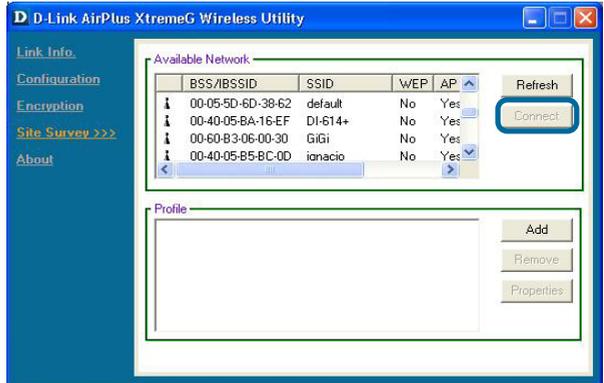

The Link Info page of the *AirPlus Xtreme G™* utility will show the connection status between the DWL-G800AP and *AirPlus Xtreme G™* wireless adapter.

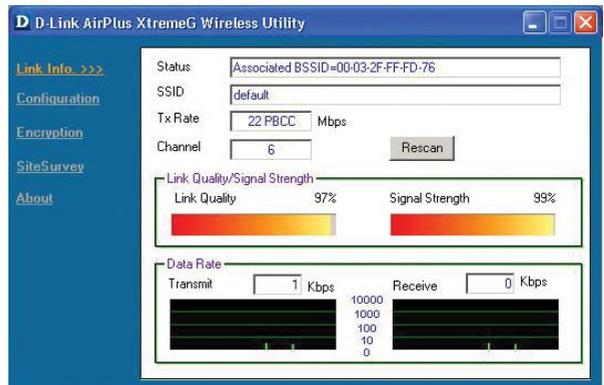

Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our website, or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week.

D-Link Technical Support over the Internet:

<http://support.dlink.com>

email: support@dlink.com

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone:

(800) 361-5265

Monday to Friday 7:30am to 12:00am EST

D-Link Technical Support over the Internet:

<http://support.dlink.ca>

email: support@dlink.ca

