



300N Draft 802.11n Wireless USB Adapter

Model # AWLL6080

User's Manual

Rev. 1.1

Table of Contents

1. Introduction.....	3
1.1 Package Contents	3
1.2 Features	3
2. Installation.....	4
2.1 Install Driver & Utility.....	4
2.2 Verify Driver Installation.....	12
3. Configuring the Adapter	14
4. Wireless Monitor	19
4.1 Wireless Information	19
4.2 AP List	20
4.3 Profile Settings.....	21
4.4 Configuring Encryption	23
4.5 Ad-hoc and Peer-to-Peer Wireless Networks	29
4.6 Wi-Fi Protected Setup (WPS).....	29
4.7 About.....	38
Appendix A – Specifications	40
Appendix B – Information	41
Technical Support	43

1. Introduction

Congratulations on your purchase of the 300N Draft 802.11n Wireless USB Adapter. The 300N USB Adapter provides wireless data rate of up to 300 Mbps* when used with other AirLink101® 300N wireless products. The high bandwidth combined with extended wireless coverage delivers fast and reliable connection for all of your networking applications.

A full range of security features such as WEP, WPA-PSK, and WPA2-PSK provide the highest level of wireless network security. The bundled Wireless Utility allows you to set up the adapter with an easy-to-use user interface. Best of all the 300N USB Adapter works with 802.11g and 802.11b network devices ensuring compatibility with your existing wireless products.

1.1 Package Contents

Before you begin the installation, please check the items of your package. The package should include the following items:

- Wireless USB Adapter
- USB Cable
- Quick Installation Guide
- Installation CD (Driver/Utility/Manual)

1.2 Features

- Industry's highest wireless data rate of up to 300 Mbps* with IEEE 802.11n draft specification version 1.0.
- 64-bit/128-bit WEP encryption, Pre-shared Key (PSK), and Wi-Fi Protected Access (WPA2) and WPA support provide full protection for your wireless connection
- Higher data rate increases the reliability and stability of wireless connections
- Great for environments with higher wireless data traffic requirements
- Fully backward-compatible with 802.11b/g devices
- Works best with AirLink101® 300N Wireless Router AR680W


2. Installation

2.1 Install Driver & Utility

This section provides instructions on how to install the **300N Draft 802.11n Wireless USB Adapter**. The driver is installed along with the utility.

Step 1 Insert the USB adapter into an available USB port and turn on your computer.

Step 2 After turning on the computer, Windows will launch the **Found New Hardware Wizard**. The Found New Hardware Wizard appears differently depending on your operating system. Click **Cancel** to quit the wizard and insert the Installation CD into your CD drive.

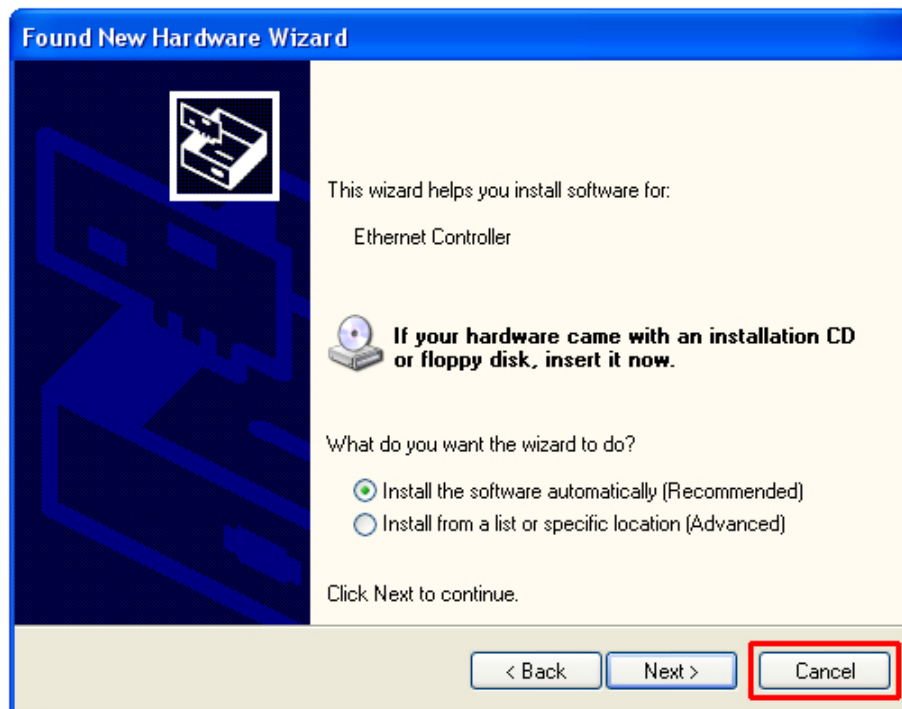


Step 3 The Autorun screen will pop up. Select **Install Utility and Driver** from the menu.




Note: If the Autorun screen doesn't appear automatically, or if you get a blank white screen, go to **Start, Run,** and type **D:\Utility\Setup.exe** (where **D** is the letter of your CD drive) and click **OK**.


Windows Vista users: At this point, you may get a warning message like the one below. Make sure that you click **Allow** to continue with the installation.

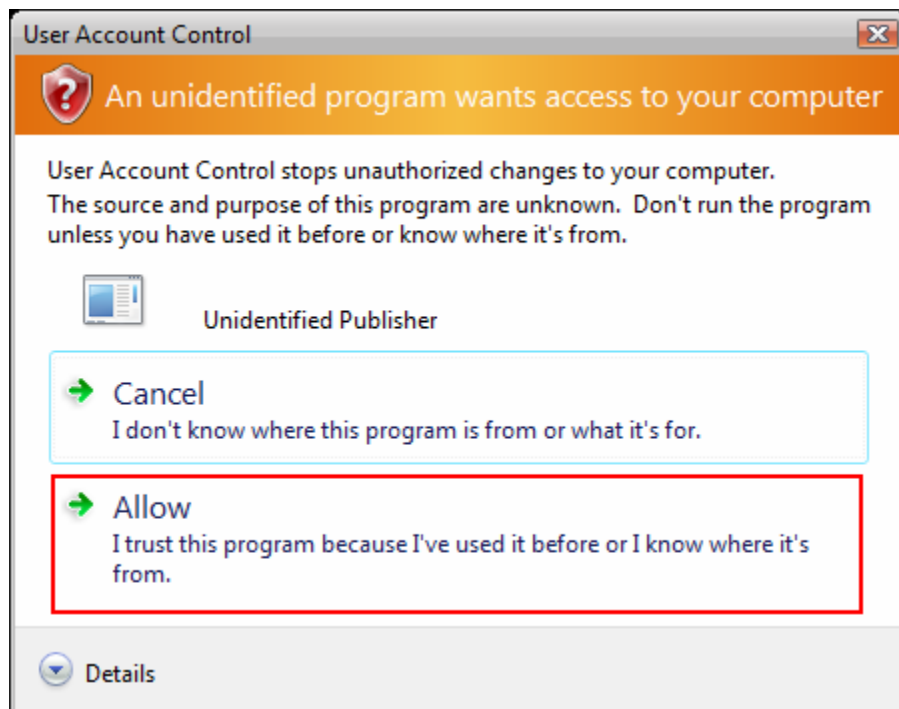


Step 4 Click **Next** at the welcome screen.

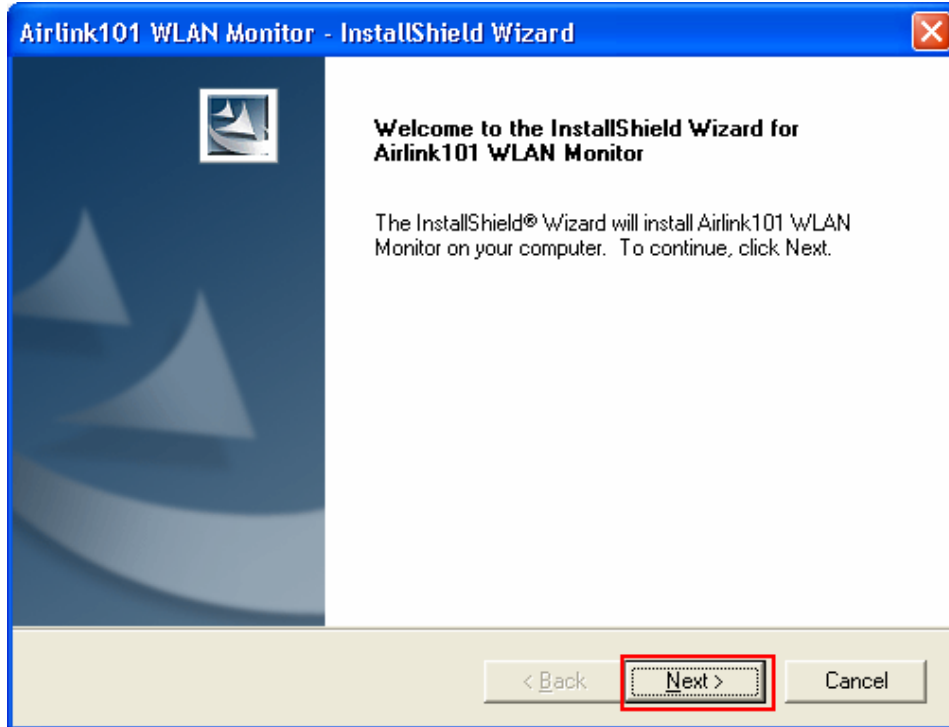

Step 5 Click **Next** to accept the default destination folder.

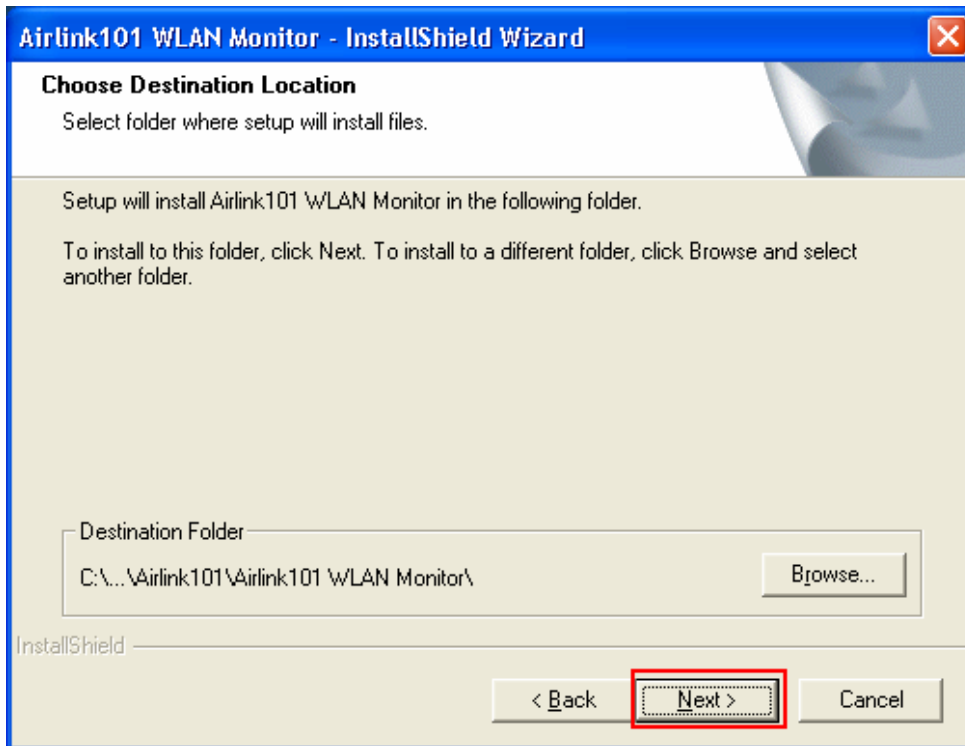


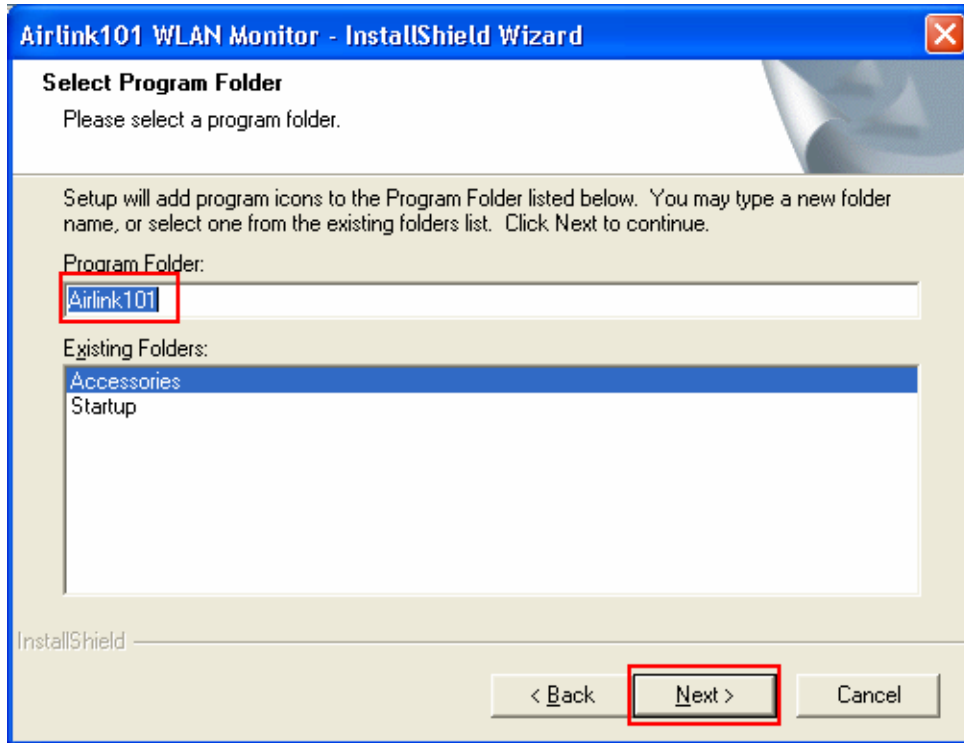


Step 6 Click **Continue Anyway** at the Windows Logo Screen. (For Windows 2000, click **Yes** at the Digital Signature Not Found prompt).



For Windows Vista, click the **Install this driver software anyway** button when the security warning appears.

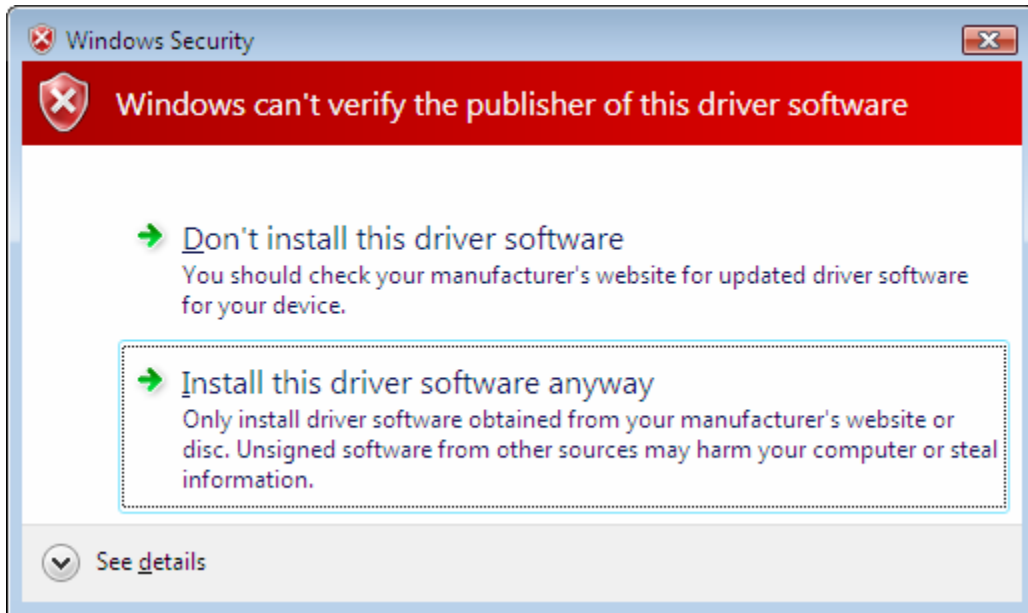


Step 7 Click **Yes, I want to restart my computer now** and then **Finish** to restart your computer.

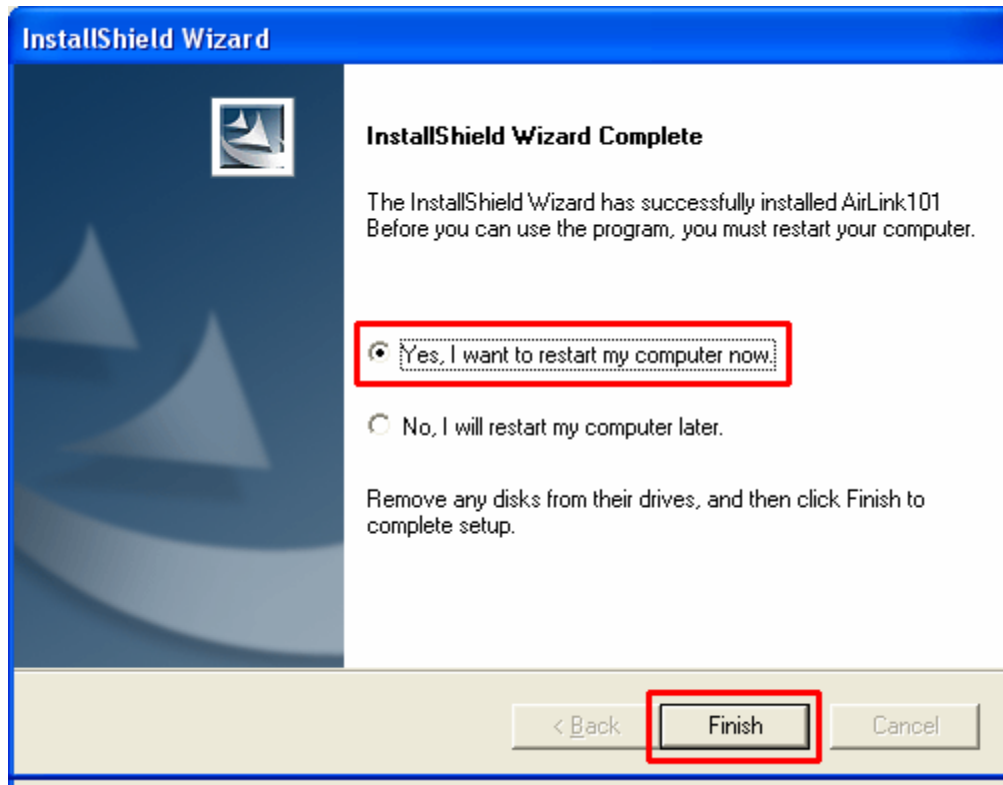


Step 8 After the computer is restarted, Windows will ask to connect to Windows


Update, select **No, not this time** and click **Next**. If this screen does not appear, you can skip to section 2.2.

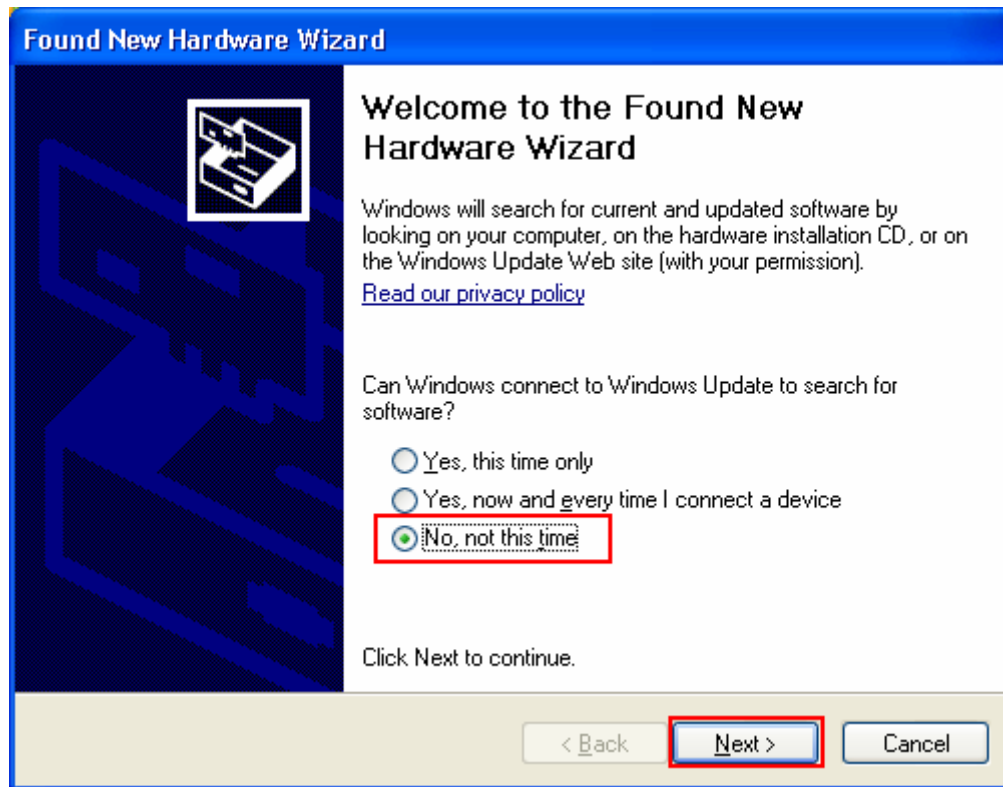


Step 9 Select **Install the software automatically** and click **Next**.

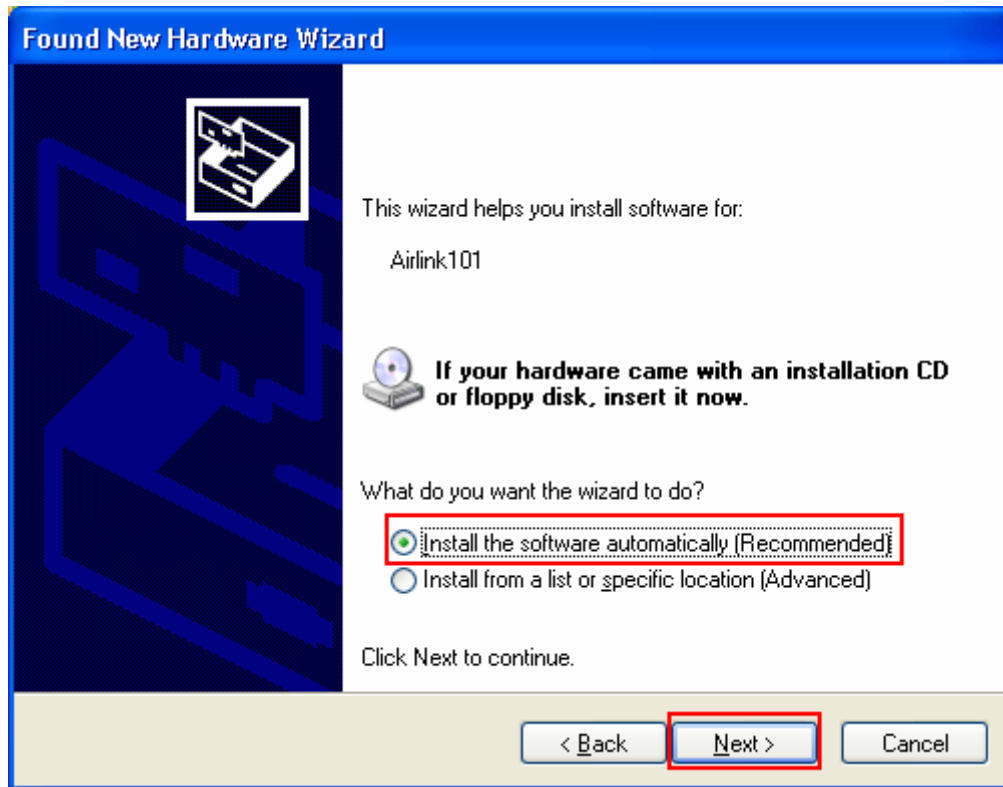


Step 10 Click **Continue Anyway** at the Windows Logo Screen.
(For Windows 2000, click **Yes** at the Digital Signature Not Found prompt).

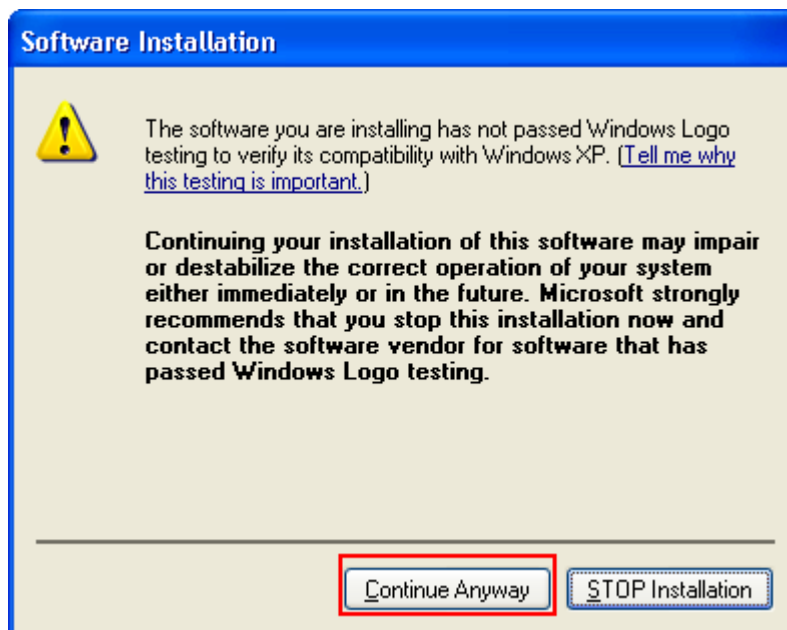

For Windows Vista, click the **Install this driver software anyway** button when the security warning appears.

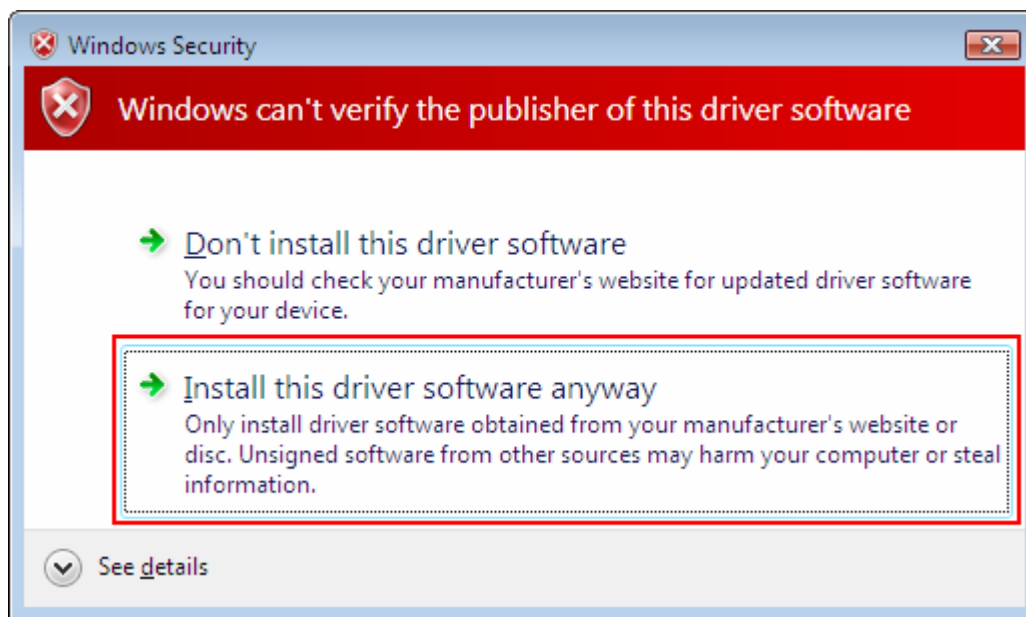

Step 11 Click **Finish**.

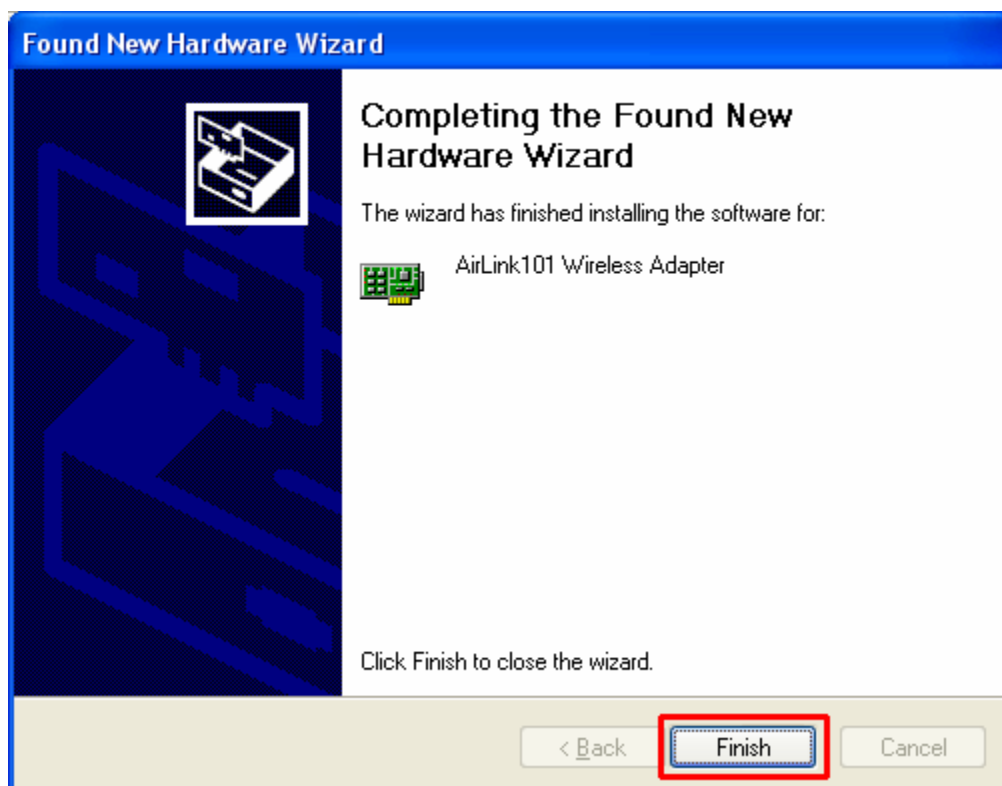


2.2 Verify Driver Installation


To verify if the driver has been installed successfully, please perform the following steps.

Step 1 Right-click on **My Computer** from your desktop and select **Properties**.


Step 2 If you are using Windows XP/2000 select the **Hardware tab**, then click on **Device Manager**.

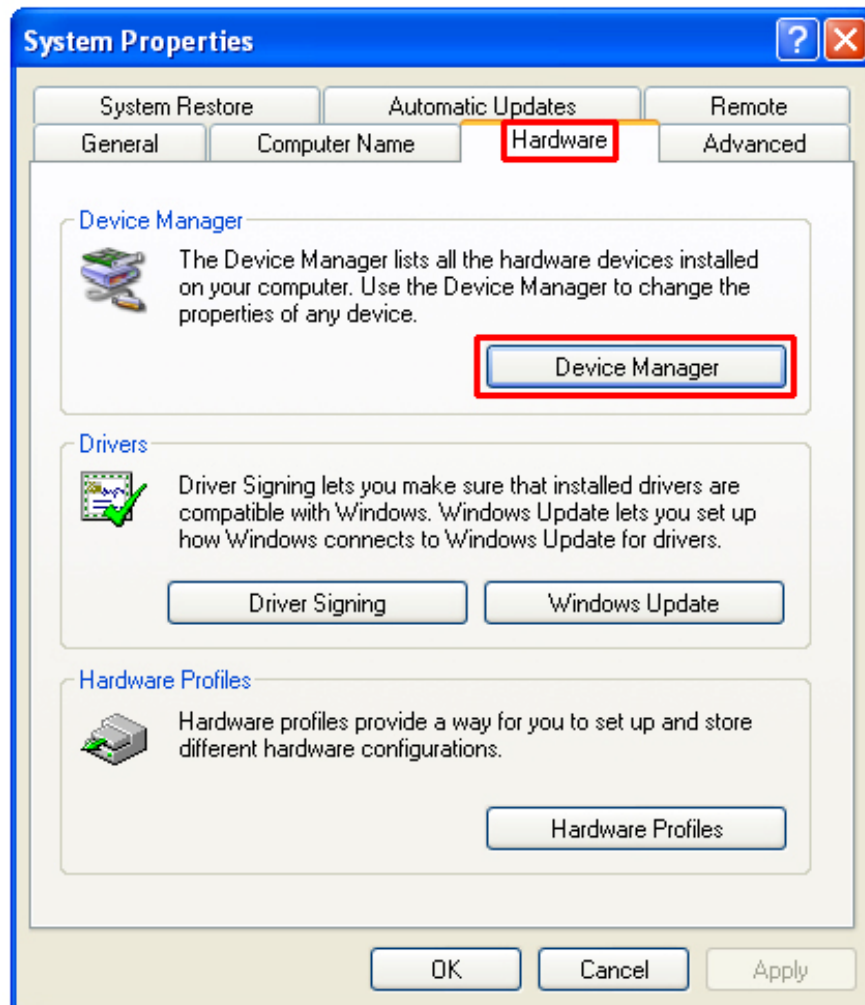

If you are using **Windows Vista**, click on the device manager link on the left side of the screen.

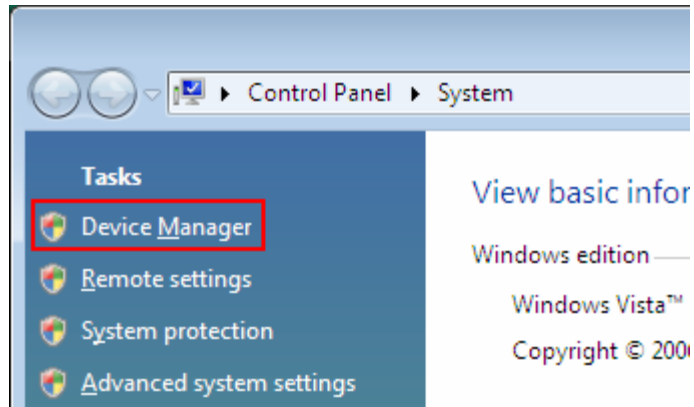

Step 3 Expand **Network adapters** from the list and verify that **AirLink101 300N Wireless USB Adapter** is listed and no yellow question mark is beside it.

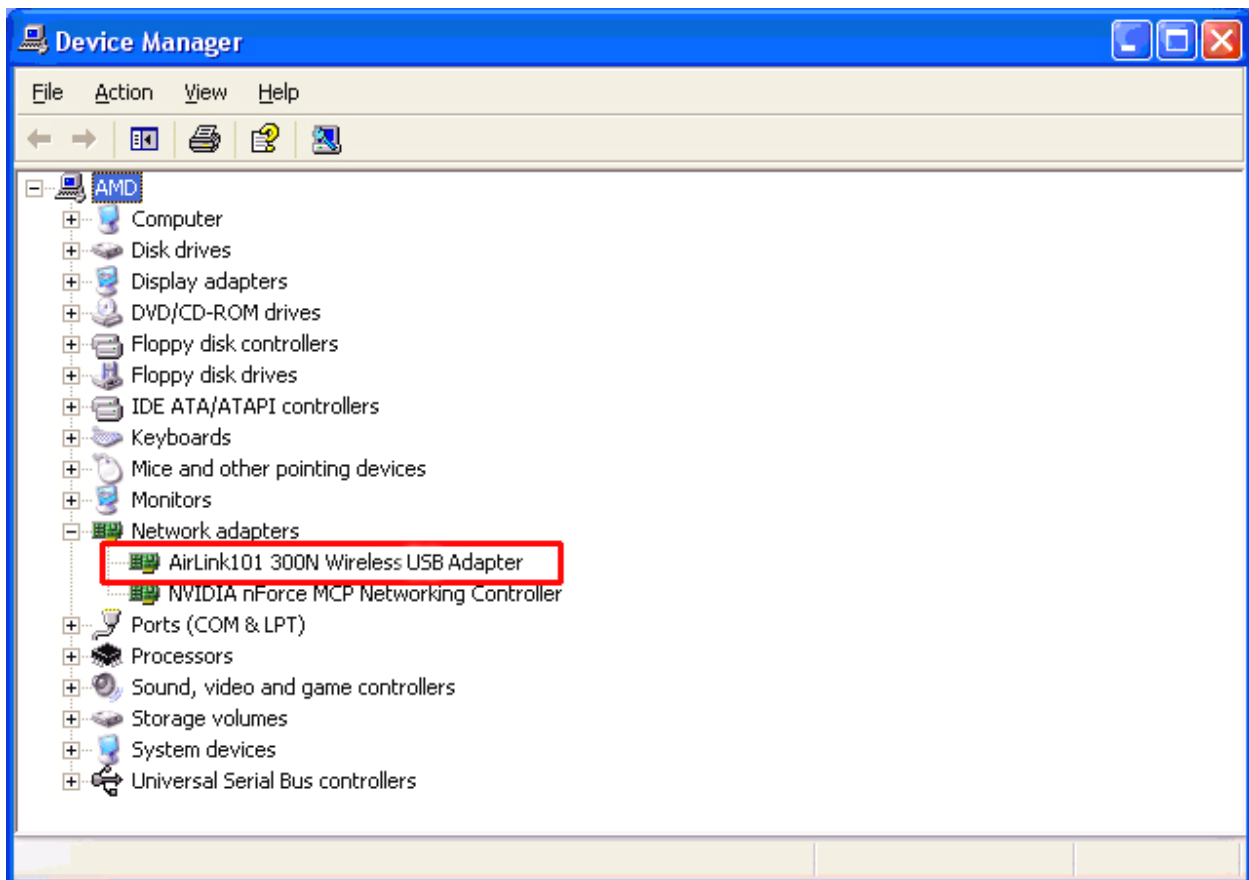

If **AirLink101 300N Wireless USB Adapter** is not listed, or you see a yellow question mark beside it, you will need to reinstall the driver.

3. Configuring the Adapter

This section describes how to connect your wireless adapter to a wireless network.


Note to Windows XP Users:

You must disable the Wireless Zero Configuration Utility in order to use the bundled Wireless Utility. Please follow the steps below to disable XP's wireless utility. Windows Vista users can skip the following instructions and go to **Step 1**

Double-click on the **Wireless Network Connection Icon** in the system tray and then click on **Properties** or **Advanced**.




When the new wireless network connection properties window appears, go to the **Wireless Networks** tab, uncheck the “**Use Windows to configure my wireless network settings**” check box and click **OK**.

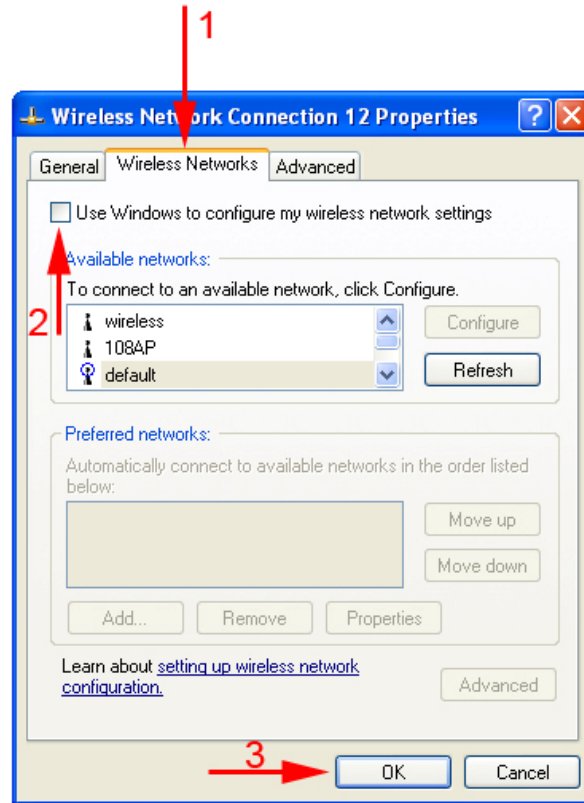


Step 1 To open the utility, double click on the Wireless Monitor icon in the system tray at the bottom right-hand corner of your screen.




Step 2 Go to the **AP List** tab, select the **SSID** (Network Name) of the wireless network you wish to connect to, and click **Connect**.

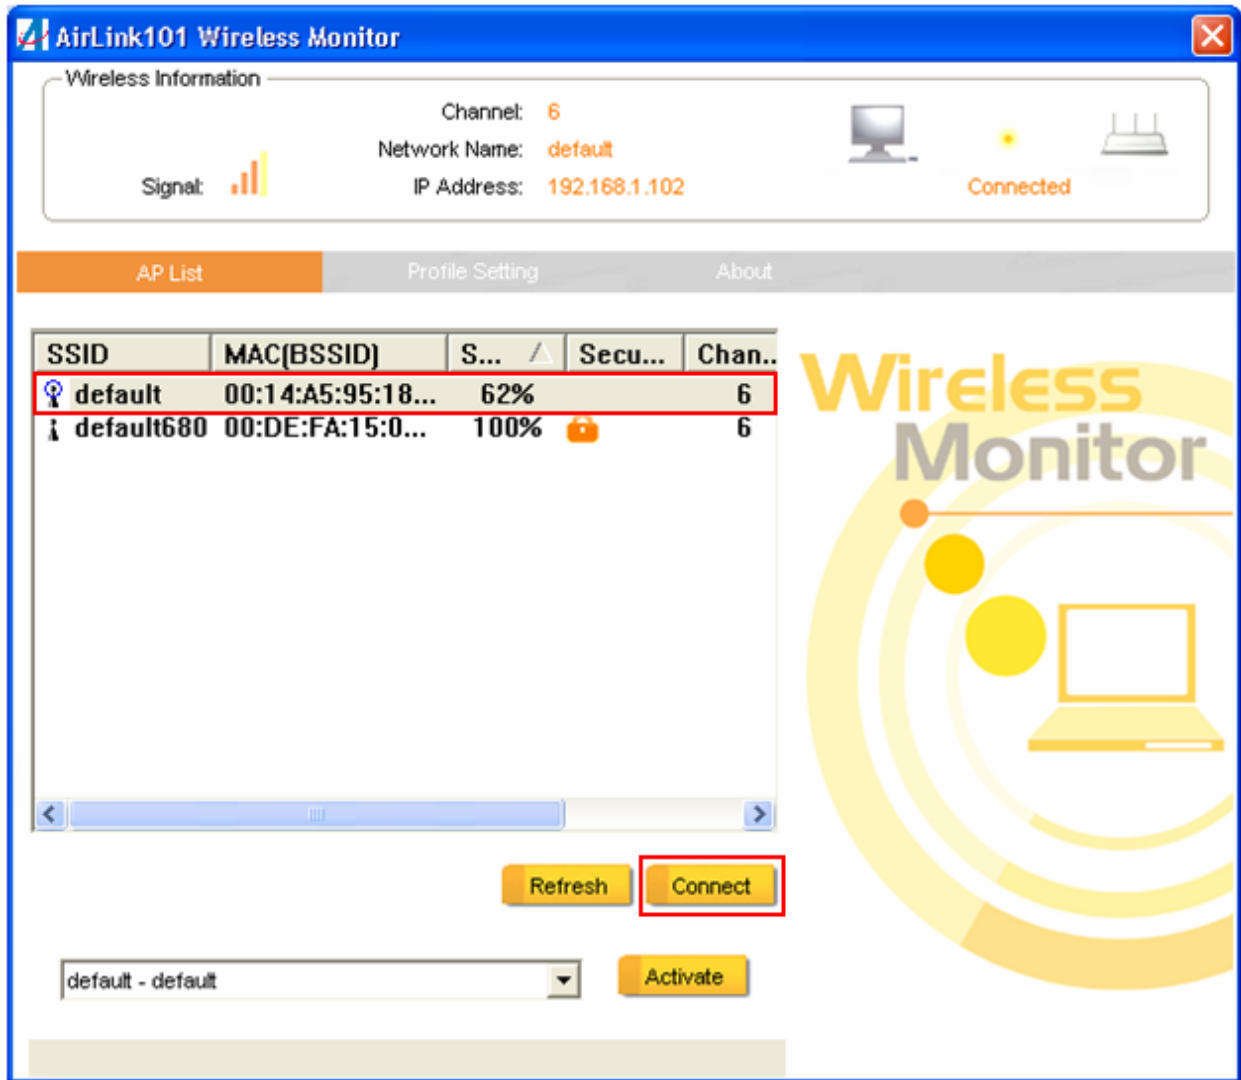


If the network you are attempting to connect to is configured for encryption, you will see an orange lock icon next to the network.

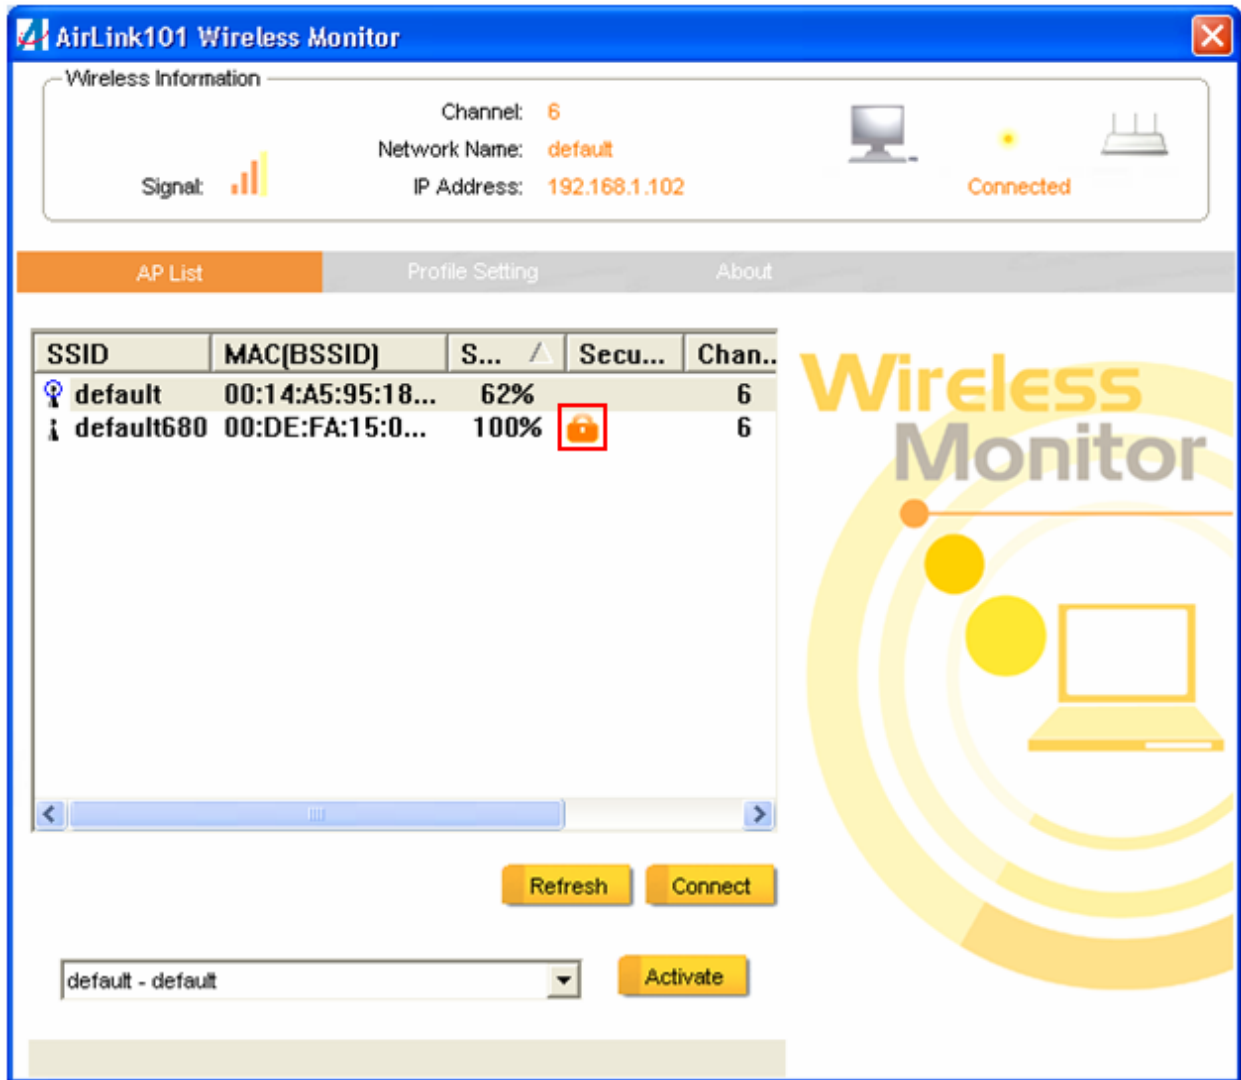

When you click on it and click connect, a box will pop up requesting the wireless encryption key for the router. Enter the encryption key into the box and click **OK**.

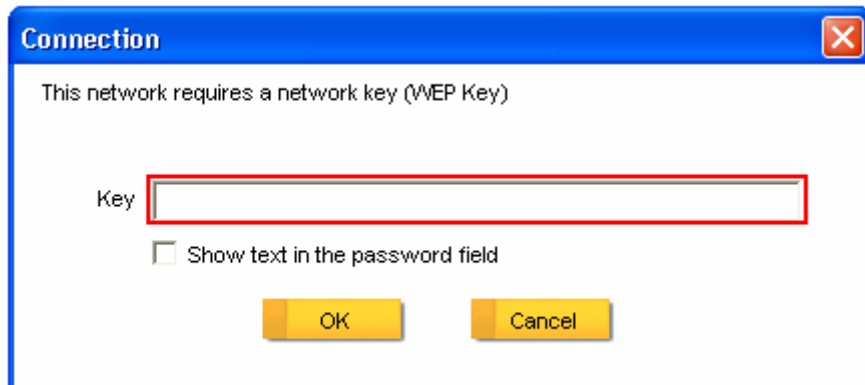

Step 3 You should now be connected. You should see “Connected” in the top, right hand corner, and there will be a blue circle around the antenna icon next to the network name.

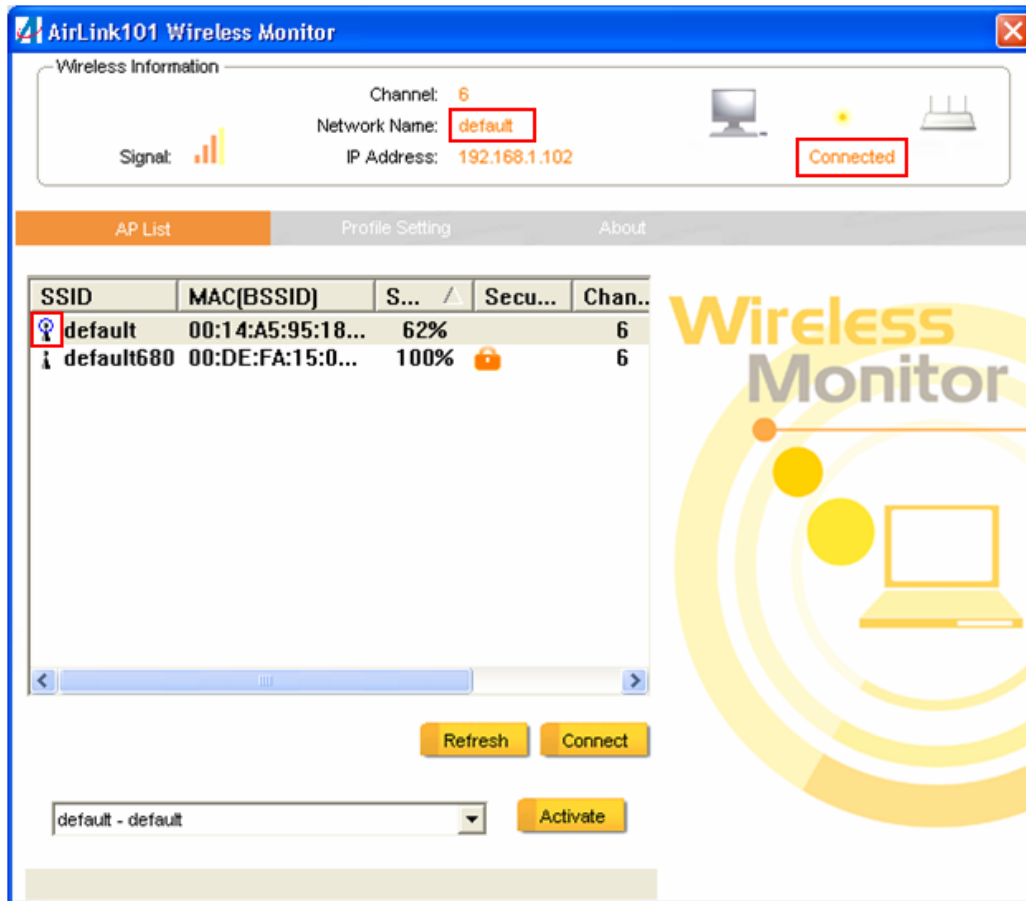

Troubleshooting: If you are experiencing problems with the connection (unable to connect, low signal strength, slow connection speed, not working, unstable wireless connection) you will want to tune your router’s signal by changing channels on the router.

You do not need to change the channel on the card, it will automatically pick up the new channel after you reboot. The only channel that you need to change is the router’s channel.

Your router has 11 different channels to choose from. Start with channel 1 and work your way up. Each time you change the channel on the router, make sure that you restart the wireless computer before trying to connect again. Keep going through the channels until you find one that gives you a stable connection.

For instructions on changing channels, refer to the documentation that came with your router.

4. Wireless Monitor

This section describes the various functions of the Wireless Monitor that you can configure, including the settings of wireless encryption.

4.1 Wireless Information

The **Wireless Information** box at the top of the window provides you with the status of the current connection, including signal, network name (SSID), IP Address and router channel.

Wireless Information

Channel: 6
Network Name: default
IP Address: 192.168.1.102
Connected

AP List Profile Setting About

SSID	MAC(BSSID)	S... /	Secu...	Chan..
default	00:14:A5:95:18...	62%		6
default680	00:DE:FA:15:0...	100%	🔒	6

Refresh Connect

default - default Activate

Wireless Monitor

4.2 AP List

The **AP List** tab displays all the available wireless networks detected by the Wireless Adapter. Simply select the wireless network you wish to connect to and click **Connect**. If you have created multiple profiles, you can use the profile chooser at the bottom to select the specific profile you want to use. Then click **Activate** to enable that profile.


The screenshot shows the 'AirLink101 Wireless Monitor' application window. The 'AP List' tab is selected and highlighted with a red box. The 'Wireless Information' section at the top shows a signal strength indicator, Channel: 6, Network Name: default, and IP Address: 192.168.1.102. A 'Connected' status is shown with a router icon. The main area contains a table of detected wireless networks:

SSID	MAC(BSSID)	S...	Secu...	Chan..
default	00:14:A5:95:18...	62%		6
default680	00:DE:FA:15:0...	100%		6

Below the table are 'Refresh' and 'Connect' buttons. At the bottom, a profile selector dropdown is set to 'default - default' and is highlighted with a red box, with an 'Activate' button next to it. A large 'Wireless Monitor' watermark is visible on the right side of the interface.

4.3 Profile Settings

This section provides instructions on using the **Profile Settings** section of the wireless monitor.

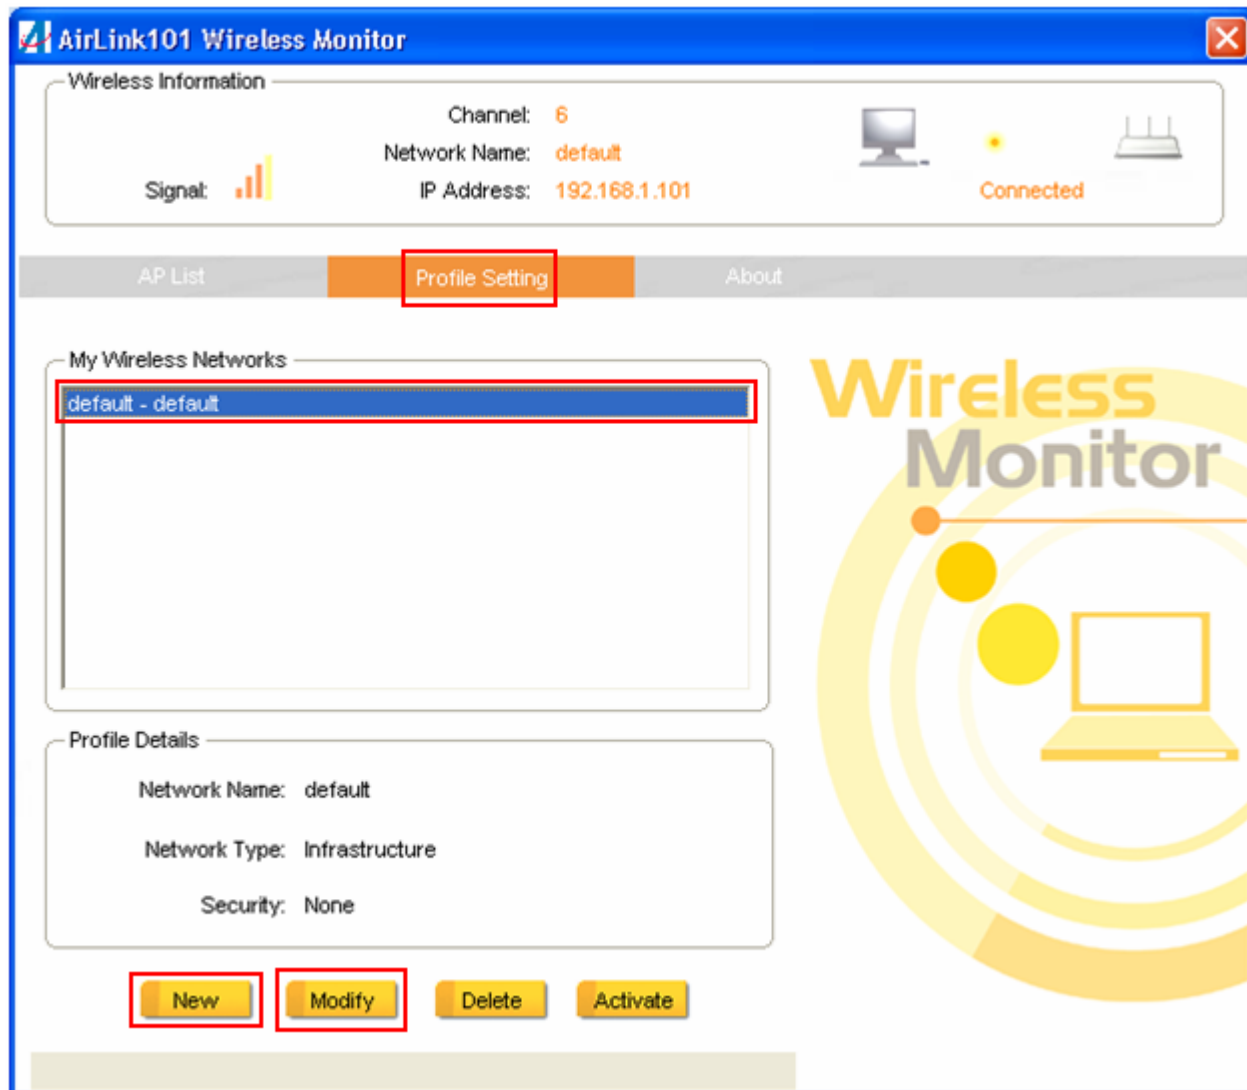


The **My Wireless Networks** box lists the different profiles you've created for the different networks that you use. Profiles are automatically created and added to this list when you connect to new networks. You can also manually add profiles.

To modify an existing profile, select that profile from the **My Wireless Networks** box and click on modify.

To create a new profile, click on **New**.

The **Profile Settings** box will appear allowing you to specify the settings for your new profile or change settings for your existing profile.

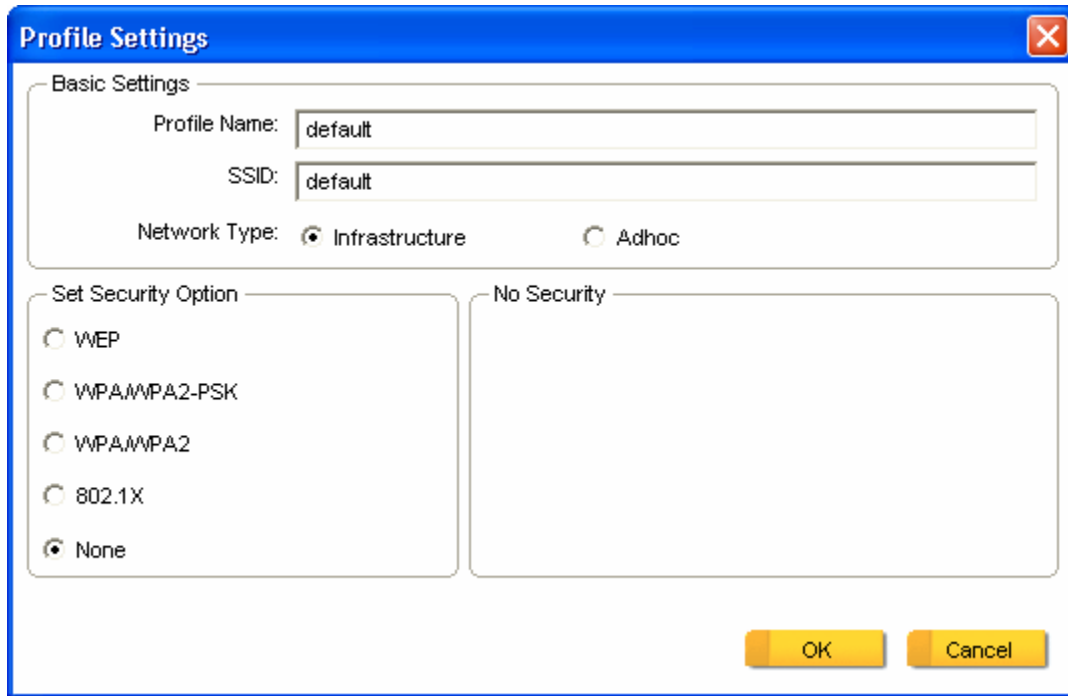

The image shows a 'Profile Settings' dialog box with a blue title bar and a close button in the top right corner. The dialog is divided into two main sections. The top section, titled 'Basic Settings', contains two text input fields: 'Profile Name' with the value 'default' and 'SSID' with the value 'default'. Below these fields are two radio buttons for 'Network Type': 'Infrastructure' (which is selected) and 'Adhoc'. The bottom section is split into two panes. The left pane, titled 'Set Security Option', contains five radio buttons: 'WEP', 'WPA/WPA2-PSK', 'WPA/WPA2', '802.1X', and 'None' (which is selected). The right pane, titled 'No Security', is currently empty. At the bottom right of the dialog are two yellow buttons labeled 'OK' and 'Cancel'.

Once you are finished entering the settings, click **OK** to save the changes.


4.4 Configuring Encryption

This section describes the different types of encryption available and how to configure them. In most cases, encryption will be automatically configured and all that will need to be entered is the key, as described in **Section 3 Step 2**. The only time you will need to manually configure the encryption settings is if you are creating a custom profile.

Click on **Profile Settings** then **New**.



The profile settings box will appear. This is where you will change your encryption settings. As you can see you have five different options to choose from.

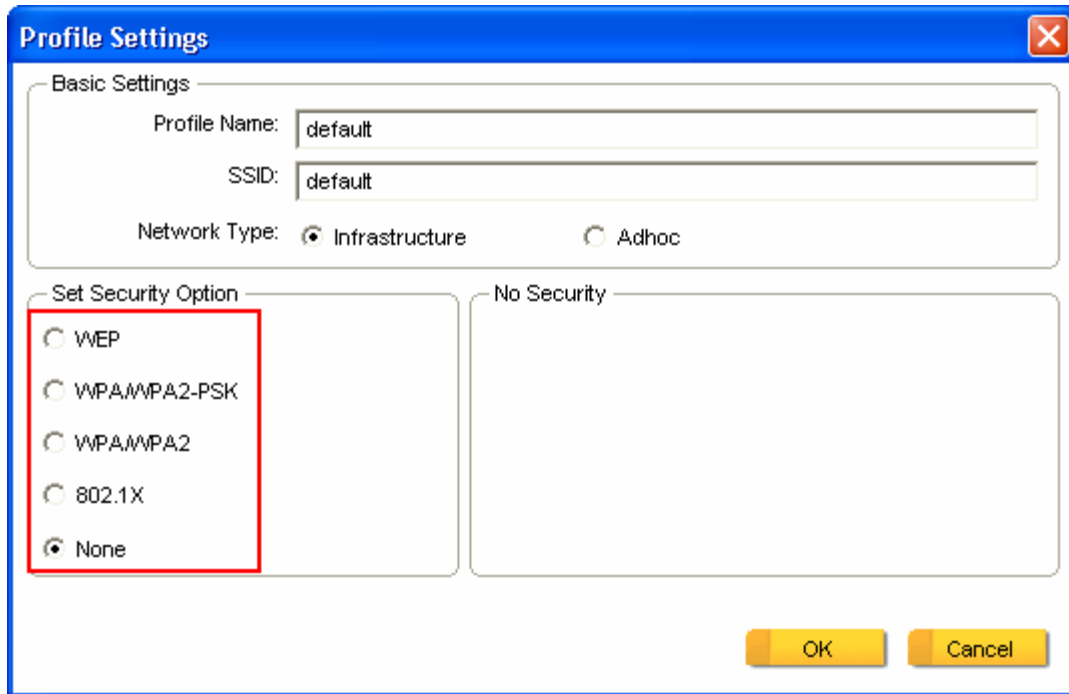

These three are meant for the home user:

None: No encryption in use

WEP: The most popular but least secure form of encryption

WPA/WPA2-PSK: The most secure and recommended level of encryption

The remaining two are for use in a corporate environment that utilizes authentication servers. If you do not know if you have an authentication server, you probably don't and will want to stick with the three options above.

Configuring WEP encryption

The screenshot shows a 'Profile Settings' dialog box with the following sections:

- Basic Settings:** Profile Name: [text box], SSID: [text box], Network Type: Infrastructure, Adhoc.
- Set Security Option:** WEP, WPA,WPA2-PSK, WPA,WPA2, 802.1X, None.
- Wired Equivalent Privacy(WEP):** Open, Shared, Auto. Key: [text box]. Key Length: 64 bits (40+24) - 10 Hexadeci [dropdown], Key Index: 1 [dropdown].
- Show text in the password field.
- Buttons: OK, Cancel.

Select **WEP** from the **Set Security Option** box.

Under **Wired Equivalent Privacy (WEP)**, you will want to select **Shared** or **Open**, depending on the router settings.

In the **Key** box, you will want to type in the encryption key for the router. If you check the **Show text in the password field** box, your key will appear in the box as you are typing it instead of showing only asterisks. This is helpful as it allows you to double check the key before saving the changes.

Key Length will also be predetermined by the router. Refer to your routers settings to find out what you should select here.

Key Index is the key on the router that is currently in use. Refer to your routers settings to find out what you should choose.

Once you are done, click **OK** to save your settings.

Configuring WPA/WPA2-PSK Encryption (for home users)

The screenshot shows a 'Profile Settings' dialog box with the following sections:

- Basic Settings:** Profile Name: [text box], SSID: [text box], Network Type: Infrastructure Adhoc
- Set Security Option:** WEP, WPA/WPA2-PSK, WPA/WPA2, 802.1X, None
- Passphrase Settings:** TKIP AES Auto, Key: [text box]
- At the bottom: Show text in the password field, OK, Cancel


Red boxes in the original image highlight the 'WPA/WPA2-PSK' option, the 'TKIP' option, and the 'Key' text box.

Select **WPA/WPA2-PSK** from the **Set Security Option** box.

Under **Passphrase Settings** select either **TKIP** or **AES** depending on the settings for your router.

Enter the encryption key into the **KEY** box.

Configuring WPA/WPA2 Encryption (for corporate networks)

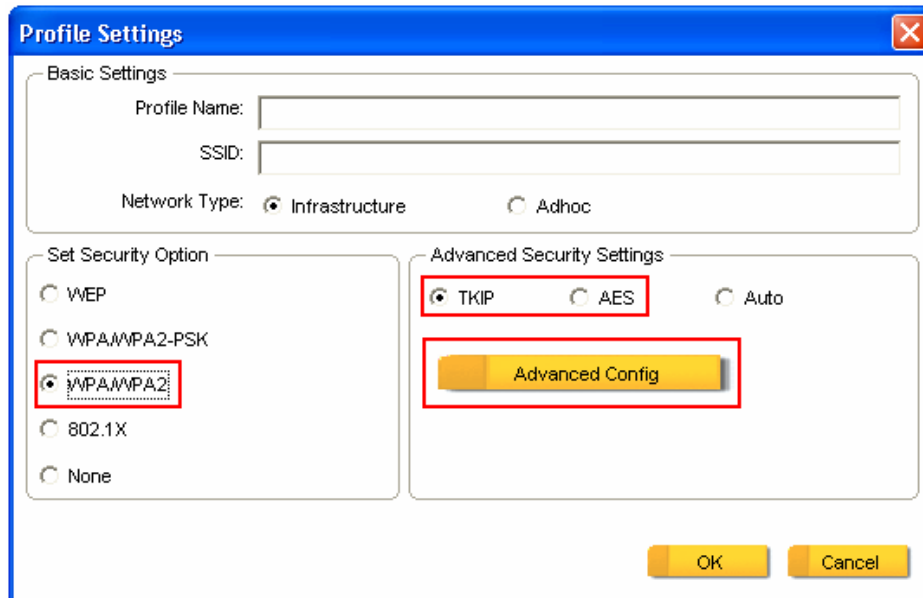


The screenshot shows the 'Profile Settings' dialog box. It is divided into several sections:

- Basic Settings:** Includes fields for 'Profile Name' and 'SSID', and radio buttons for 'Network Type' (Infrastructure and Adhoc).
- Set Security Option:** A group of radio buttons where 'WPA/WPA2' is selected.
- Advanced Security Settings:** Includes radio buttons for 'TKIP', 'AES', and 'Auto', with 'TKIP' selected. Below these is a yellow 'Advanced Config' button.
- Buttons:** 'OK' and 'Cancel' buttons are located at the bottom right.

Select **WPA/WPA2** from the **Set Security Option** box.

Under **Advanced Security Settings** select either **TKIP** or **AES** depending on the settings for your router.

Click on **Advanced Config** to enter your authentication settings.

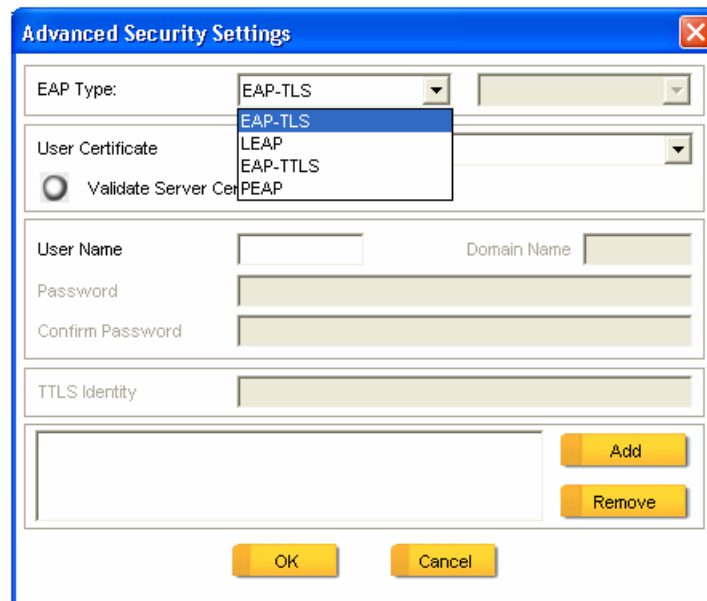


The screenshot shows the 'Advanced Security Settings' dialog box. It contains the following fields and controls:

- EAP Type:** A dropdown menu with 'EAP-TLS' selected and a list of options (EAP-TLS, LEAP, EAP-TTLS, PEAP) displayed.
- User Certificate:** A dropdown menu.
- Validate Server Certificate:** A checked radio button.
- User Name:** and **Domain Name:** text input fields.
- Password:** and **Confirm Password:** text input fields.
- TTLS Identity:** text input field.
- Buttons:** 'Add' and 'Remove' buttons are on the right side, and 'OK' and 'Cancel' buttons are at the bottom.

The adapter supports EAP-TLS, LEAP, EAP-TTLS, and PEAP authentication methods. Refer to your system administrator for information about what settings you should enter here.


Configuring 802.1x authentication (for corporate networks)

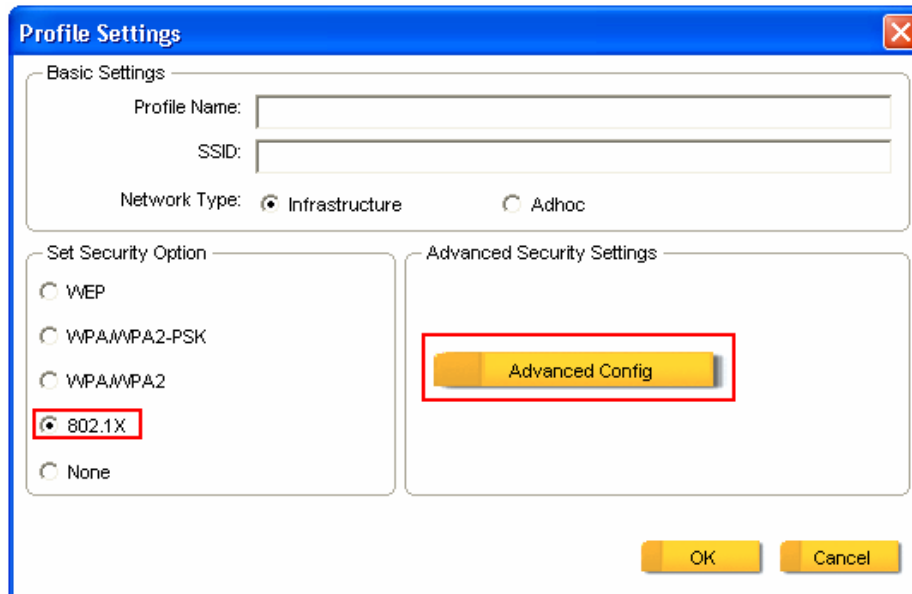

The screenshot shows the 'Profile Settings' dialog box. It is divided into two main sections: 'Basic Settings' and 'Advanced Security Settings'. In the 'Basic Settings' section, there are fields for 'Profile Name' and 'SSID', and radio buttons for 'Network Type' with 'Infrastructure' selected. In the 'Advanced Security Settings' section, there are radio buttons for 'Set Security Option' with '802.1X' selected. A yellow button labeled 'Advanced Config' is highlighted with a red rectangular box. At the bottom right, there are 'OK' and 'Cancel' buttons.

Select **802.1x** from the **Set Security Option** box.

Click on **Advanced Config** to enter your authentication settings.

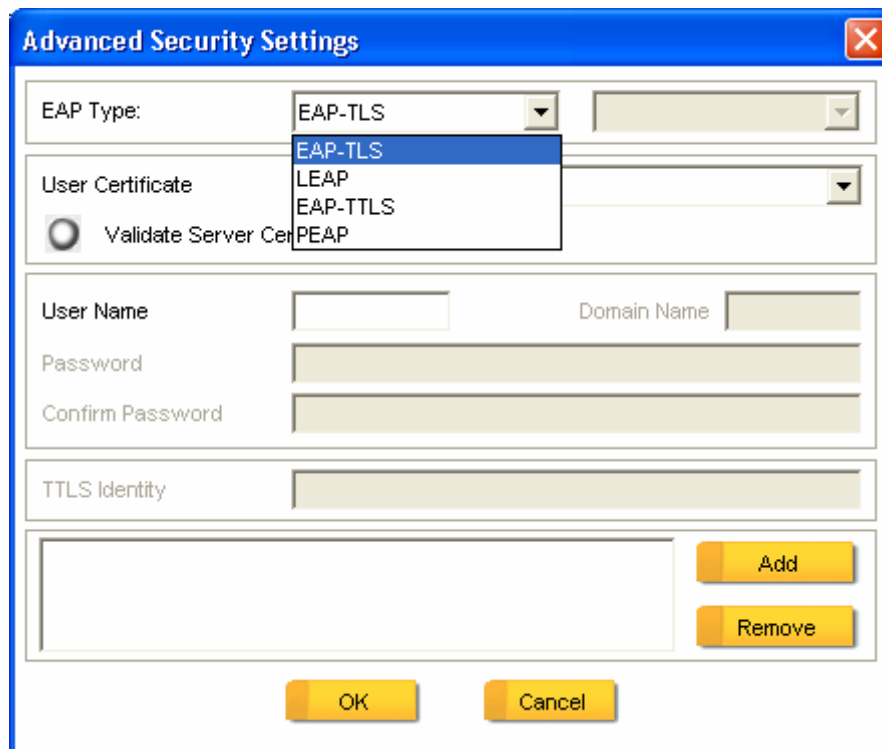

The screenshot shows the 'Advanced Security Settings' dialog box. The 'EAP Type' dropdown menu is open, showing options: EAP-TLS, LEAP, EAP-TTLS, and PEAP. The 'Validate Server Certificate' checkbox is checked. There are fields for 'User Name', 'Domain Name', 'Password', and 'Confirm Password'. There is also a 'TTLS Identity' field. At the bottom right, there are 'Add' and 'Remove' buttons. At the bottom center, there are 'OK' and 'Cancel' buttons.

The adapter supports EAP-TLS, LEAP, EAP-TTLS, and PEAP authentication methods. Refer to your system administrator for information about what settings you should enter here.

4.5 Ad-hoc and Peer-to-Peer Wireless Networks

Ad-hoc networking is used when you want to connect two or more computers together but you don't have a router.

In ad-hoc mode, you lose a lot of the features that come with a router. Instead of being able to operate at 300Mbps, the maximum connection speed is significantly less at 11Mbps. WEP encryption is the only security available in ad-hoc mode.

To set up ad-hoc mode, you will need to create a new profile.



Open the **Wireless Monitor**.

Click on **Profile Setting**, then click on **New**.

The profile settings box will appear.

The screenshot shows a 'Profile Settings' dialog box with the following elements:

- Basic Settings:**
 - Profile Name: [Text Input]
 - SSID: [Text Input]
 - Network Type: Infrastructure Adhoc
 - Channel: 6 (Dropdown)
- Set Security Option:**
 - WEP
 - None
- Buttons:** OK, Cancel

First change the network type to **Adhoc**. (Infrastructure is for when you are using a router).

Enter a profile name into the **Profile Name** box so that you can identify the profile.


Type in a network name (SSID) into the **SSID** box

Select your desired **Channel**

You can also choose between no security or WEP security. If you choose WEP security, you can follow the instructions in the **Configuring Encryption** section of the manual.

Click **OK** to save the profile.

Once that is done, click on the **AP List**.

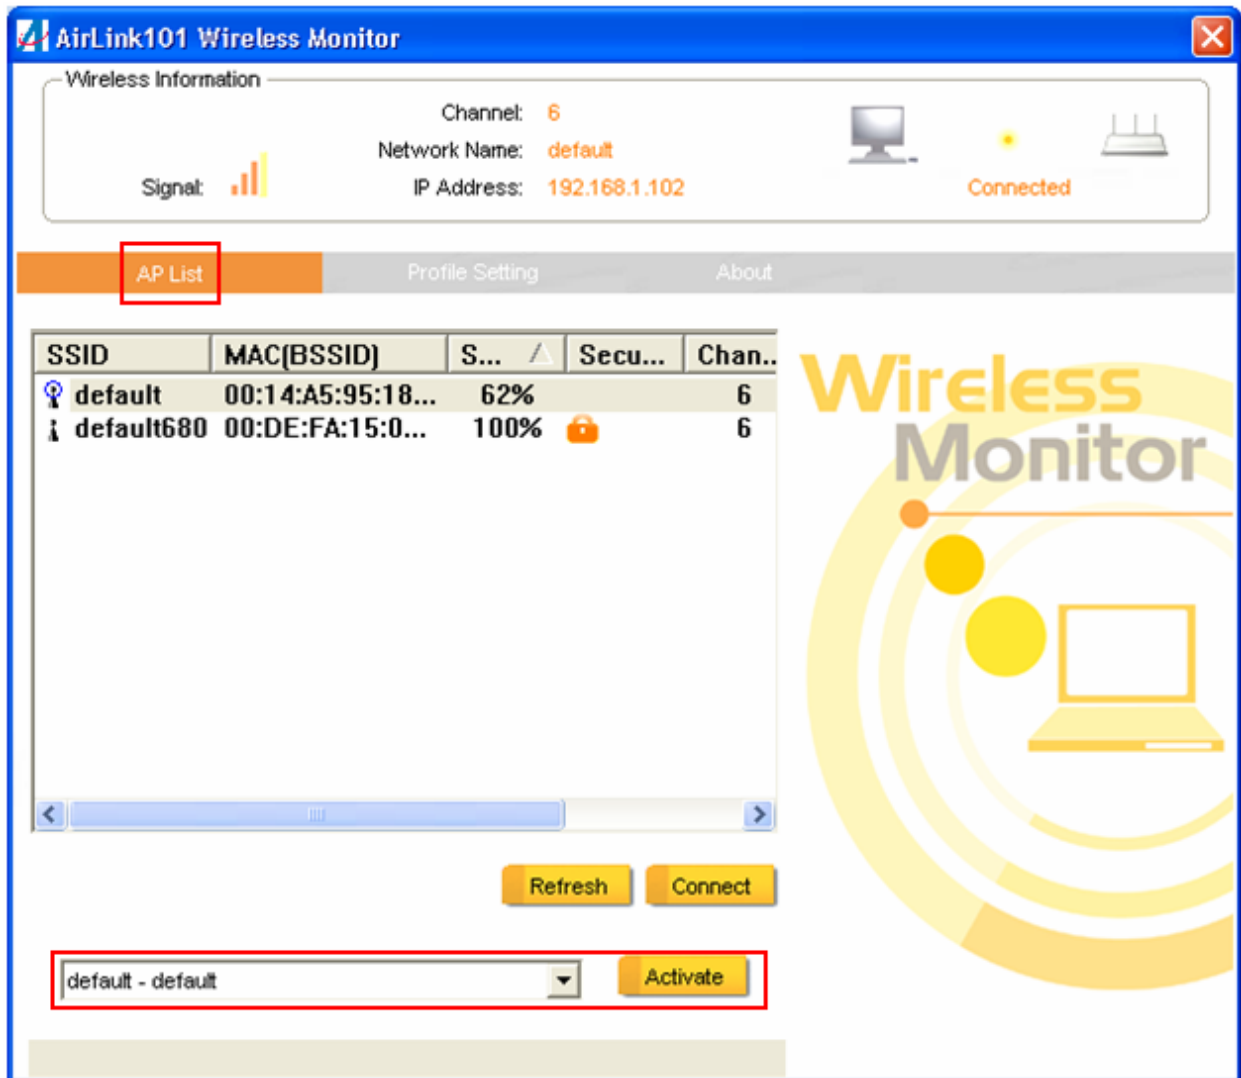

Select your new profile from the profile chooser and click **Activate** to enable the profile.

You will need to configure all other computers that you are planning on connecting to your ad-hoc network with the same settings that you input on this screen. Every computer has to be set up exactly the same. If any of the settings are different, the network will not function.


Troubleshooting: If you are having trouble connecting, if the connection is slow, or if it is unstable, you will want to try changing channels. Start with channel 1 and work your way up until you find a channel that gives you a stable connection. Each time you change the channel, save the settings, then reboot the computer. Also make sure that you do this on every ad-hoc machine so that they will all be set to the same channel.

4.7 Wi-Fi Protected Setup (WPS)

Wi-Fi Protected Setup™ (WPS) is a new and easy way to configure the encryption for your wireless network clients. In order to use it with your router, firstly, you must configure the wireless encryption on the router. You can find instructions for configuring it in the User Manual located on the CD that came with your router. Secondly, you will need to have a router that supports this feature, like our AR680W AirLink101 300N Wireless router. If your wireless adapters do not support WPS, you will need to set up the wireless security manually and you can skip this section.


In the instructions below, we are going to use the utility, Wireless Monitor that comes with the Airlink101 300N Wireless Adapters, AWLC6080, AWLH6080, and AWLL6080 with the AR680W AirLink101 300N Wireless router as the example.

First, go to the computer with the wireless adapter and open the Wireless Monitor. Click on the **WPS Connect** button.

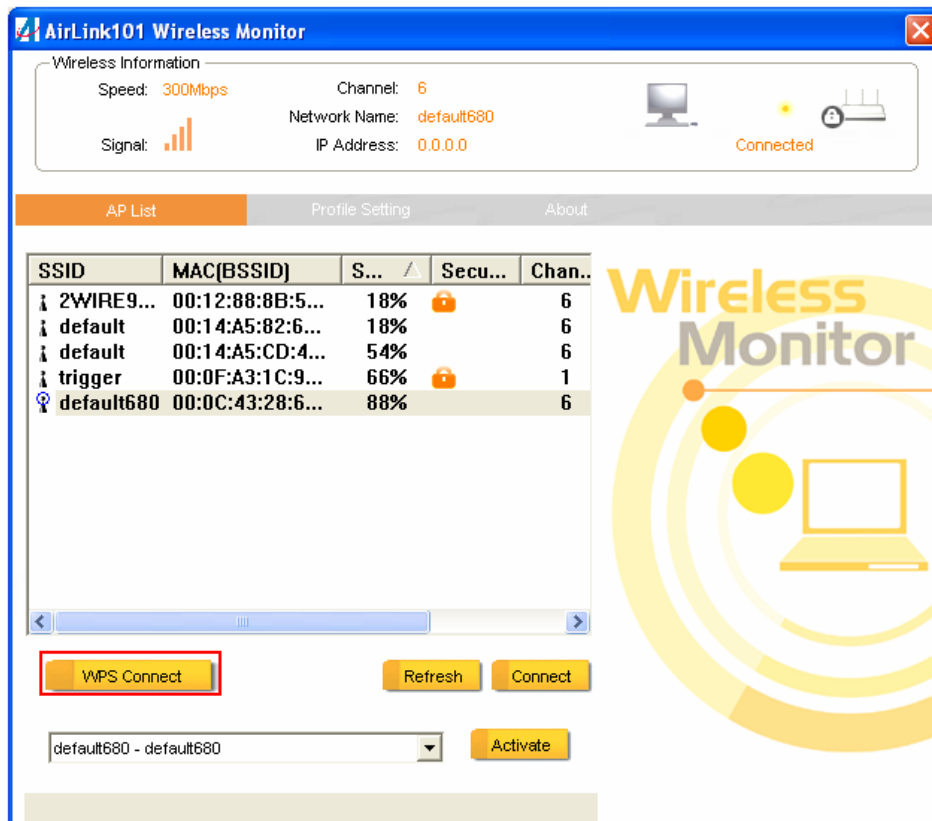


Note: If you do not see the WPS Connect button, you can go to www.airlink101.com to download the latest utility and driver.


Choose your configuration method, either **Push Button** or **Pin Code** and click **Next**.

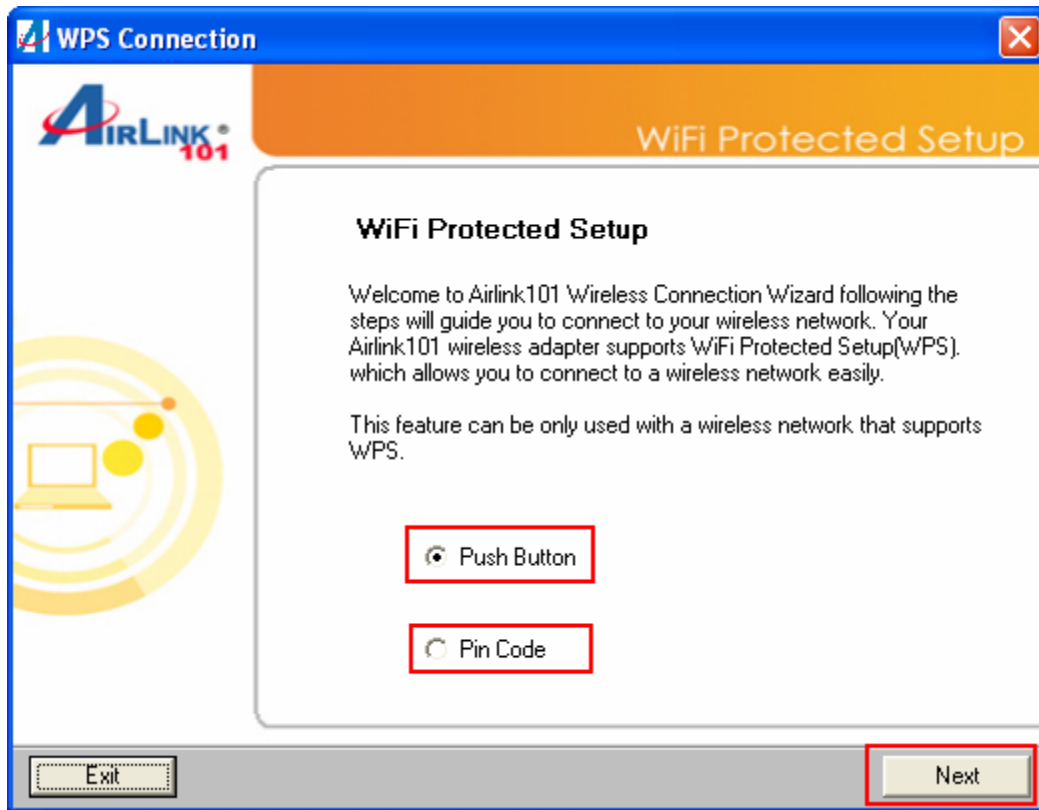


Write down the **PIN** if you are using Pin Code method and click **next**.

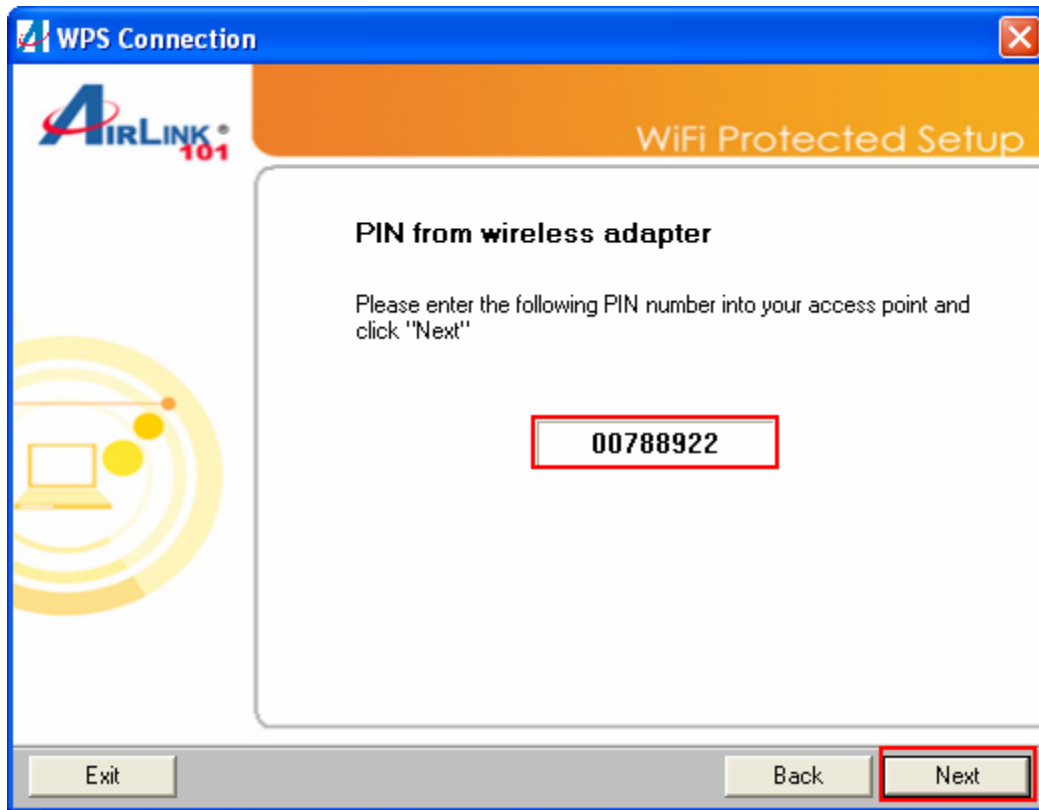

If you choose Push Button method, make sure that you click on the **Wi-Fi Protected Setup** button.

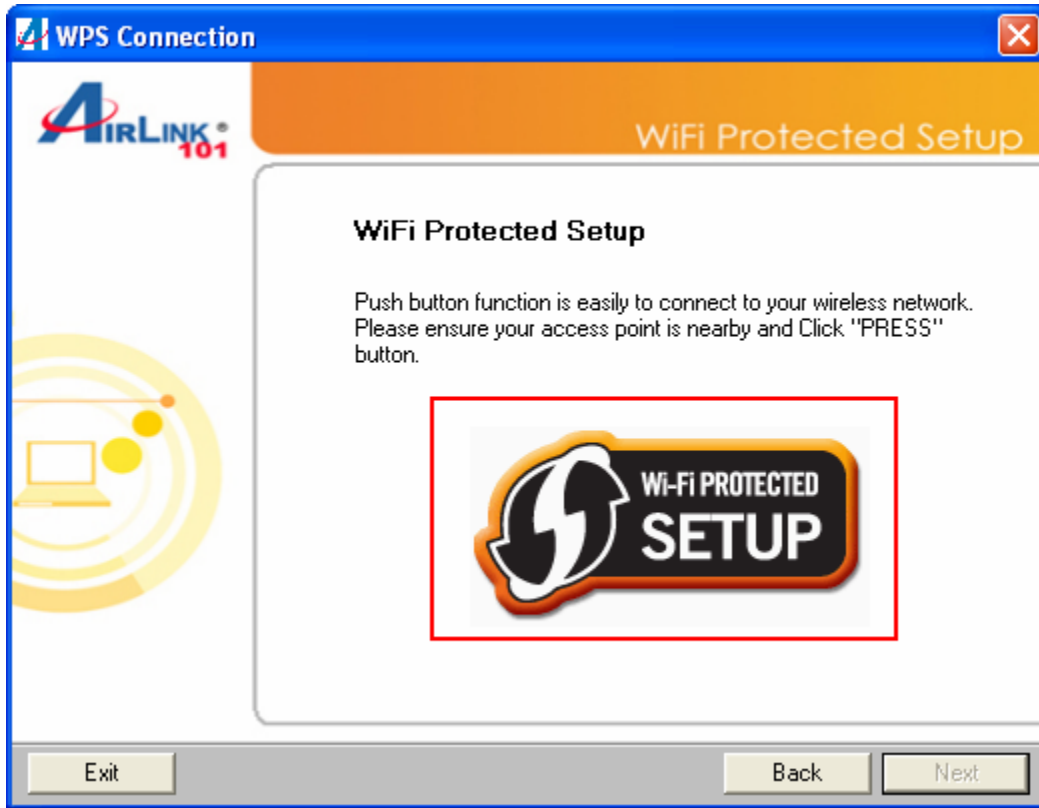

Go to your routers configuration screen and click on **Wireless**. Then click **Wireless security**. Make sure that the Wi-Fi Protected Setup **Enable** box is checked. Then click the **Add Wireless Device Wizard** button.

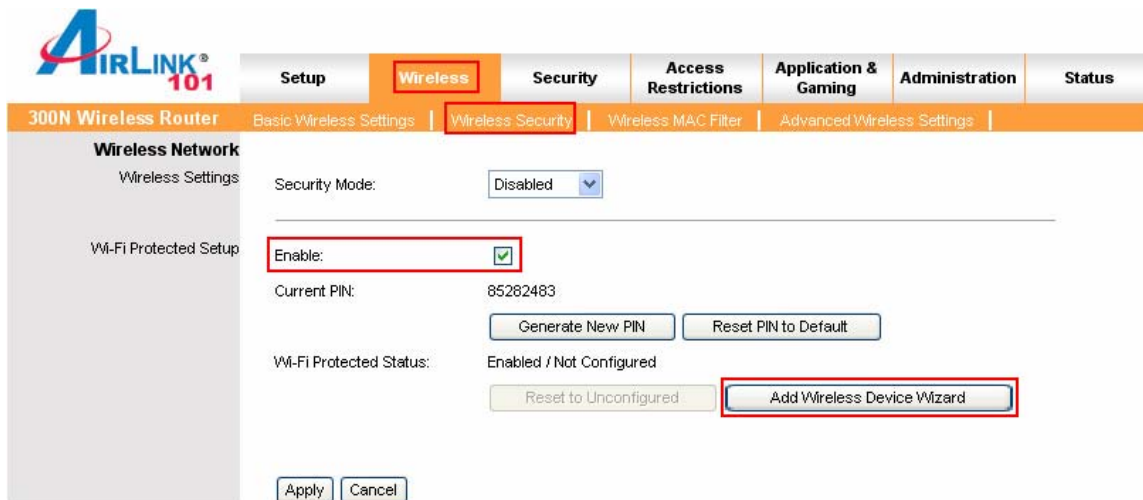

If you are using Pin Code method, enter the Pin Code in the **Pin Number** box and click **connect**. If you are using Push Button method, click on **Virtual Push Button** OR the physical push button on the router.

Draft 802.11N Wireless Router

Wi-Fi Protected Setup

There are two way to add a wireless device to your wireless network: PIN or Push Button.

If the wireless device you want to add only comes with a PIN number, enter its PIN number below and press the "Connect" button. It will help you to add this device to your wireless network.

PIN number :

If the wireless device your want to add has both options available, you may use the Virtual Push Button if you prefer .

Push Button :




After a few moments both the router configuration screen and the adapter configuration screen should show a message telling you that you are connected.

Click **Finish** on the adapter screen.



Click **Continue** on the router configuration screen.

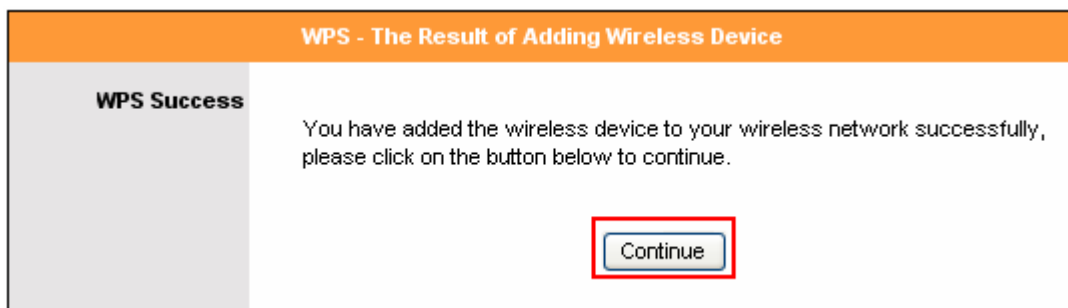

4.7 About

The About tab shows the Utility, Driver, and Firmware version as well as the MAC address of the adapter.



Appendix A – Specifications

Frequency Band

- 2.4~2.5Ghz

Standards

- IEEE 802.11b / 802.11g
- IEEE 802.11n draft

Chipset

- Ralink

Interface

- USB 2.0

Antenna type

- Integrated antenna

Security

- WPA-PSK(TKIP)
- WPA2-PSK (AES)
- WEP 64/128 bits
- 802.1x

LED

- Link/Power

System requirement

- Windows 2000, XP and Vista
- Available USB slot
- Recommended use with 300N Wireless Router AR680W

Weight

- 15g

Dimensions

- 75 x 25 x 12mm (L x W x H)

Temperature

- Operating: 0°C to 40°C
- Storage: -20°C to 75°C

Humidity

- Operating: 10% to 90% Non-Condensing
- Storage: 5% to 95% Non-Condensing

Warranty

- Limited 1-year warranty

Safety Approvals

- FCC, CE, IC

without prior notice.

Copyright 2007 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement:

This device has been tested for compliance with FCC RF Exposure (SAR) limits in the typical laptop computer configuration and this device can be used in desktop or laptop computers with side mounted USB ports which can provide 2 cm separation distance from the antenna to the body of the user or a nearby person. This device cannot be used with handheld PDAs (personal digital assistants). This device and its antenna must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTICE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11. This equipment has been SAR-evaluated for use in laptops (notebooks) with side slot configuration.

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This equipment should be installed and operated with minimum distance 1.5cm between the radiator & your body.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

Technical Support

E-mail: support@airlink101.com

Toll Free: 1-888-746-3238

Web Site: www.airlink101.com

*Theoretical maximum wireless signal rate derived from IEEE 802.11g standard and IEEE 802.11n draft specification version 1.0. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, mix of wireless products used, radio frequency interference (e.g., cordless telephones and microwaves) as well as network overhead lower actual data throughput rate. Specifications are subject to change without notice. All products and trademarks are the property of their respective owners. Copyright ©2007 AirLink101®