




- ★ Please remove any ADSL USB Modem Driver or dial-up software and disable the firewall. As they may cause connection problem.
- ★ This quick installation is meant to help you to install the product quickly and easily. For further information, please refer to the User Manual

ADD-NWR9500 Quick Installation Guide




Package Contents

- One Wireless N/Draft Broadband Router
- One Power Adapter
- One Ethernet Cable
- One ADD-NWR9500 CD-ROM with User's Manual
- One Quick Installation Guide

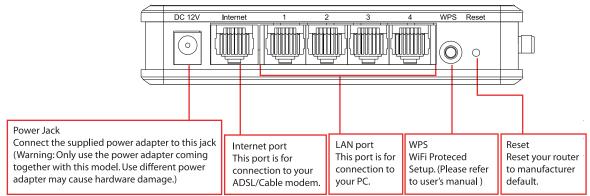

Installation Procedure

- Before you install, ensure the wireless router, the ADSL/Cable modem and your PC are turned off.
- Connect your ADSL/Cable modem to the Internet port on the wireless router using a standard RJ-45 Ethernet cable.
- Connect an Ethernet cable to one of the LAN ports at the back of the wireless router to the Ethernet port on your PC.
- Turn on the ADSL/Cable modem first.
- Then turn on your wireless broadband router.
- Check the LEDs on top of the wireless broadband router.
 - *The PWR, Internet and WLAN LEDs should be on.
 - *For each active LAN (PC) connection, the LAN Activity LEDs (1-4) should be on.
- Turn on your PC.

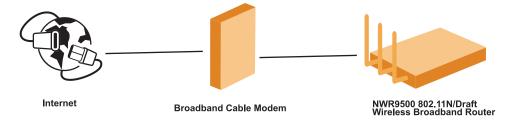

PC Configuration


- For Win98/ME/Macintosh, please refer to the User's Guide on the CD;
- For Win2000/XP, click 'Start' 'Control Panel' 'Network and Internet Connections' (Right click on) Local Area Connection' 'Properties';
- Click 'Internet Protocol (TCP/IP) and click 'Properties';
- choose 'Obtain an IP address automatically' and 'Obtain DNS server address automatically'; Click 'OK' to complete.

Router Configuration

1. Start your WEB browser. In the address box, enter the following:http://10.10.10.254



2.Once the system requests a login username and password, please enter "admin" as the username and "admin" as the password and click "OK" to login

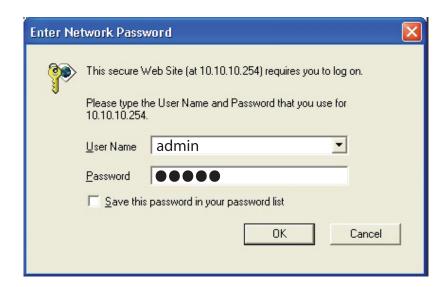

3. The setup Wizard provides configuration of the device, you may enter each screen to change the default settings. Simply click on "Setup Wizard" and follow the on screen instructions to complete the installation process

