



Installation Guide

For WMP-D16

IEEE 802.11a/b/g MiniPCI Card



以下警語適用於台灣地區：

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

本模組於取得認證後將依規定於模組本體標示審驗合格標籤，並要求平台上標示「本產品內含射頻模組：ID 編號」

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. We declare this product is limited in CH1-CH11 for 2.4G band by specific firmware controlled by the manufacturer and is not user changeable.

This device is intended only for OEM integrators under the following condition-

- 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna.
- 3) For all products market in US, OEM has to limit the operation channels in CH1 to CH11 for 2.4G band by supplied firmware programming tool. And OEM shall not supply any tool or info to the end-user regarding to change the domain selection. As long as 3 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).

IMPORTANT NOTE: In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID can



not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

End Product Labeling

This transmitter module is authorized only for use in device where the antenna may be installed such that 20 cm may be maintained between the antenna and users (for example: Access point, Wireless Router, Notebook, etc.). The final end product must be labeled in a visible area with the following: “Contains TX FCC ID: RRK2005090049-1”.

Manual Information That Must be Included

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the users manual of the end product which integrate this module.

The users manual for OEM integrators must include the following information in a prominent location “

IMPORTANT NOTE: To comply with FCC RF exposure compliance requirements, the antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. We declare this product is limited in CH1-CH11 for 2.4G band by specific firmware controlled by the manufacturer and is not user changeable.

If the end product integrating this module is going to be operated in 5.15 ~ 5.25GHz frequency range, the following warning statement must be included in the user manual.

The 5.15 ~ 5.25GHz frequency band in US/Canada is restricted to indoor use only.



Industry Canada Statement

Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device

This device has been designed to operate with an antenna having a maximum gain of 5 dBi.

Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the EIRP is not more than required for successful communication.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with Canada radiation exposure limits set forth for uncontrolled environments. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Test Utility Installation:

1. Unzip “ART_V52_build58.zip” to “C:\”.
2. The utility must run on Win2000 or WinXP.

Hardware Installation:

Before insert the adapter , please execute the below instruction at first !!

Win2000 OS :

Enter in the directory : C:\ART_V52_build58\art_driver\bin\2000

Execute the [inst_new_drv_2k.bat](#) :

WinXP OS :

Enter in the directory : C:\ART_V52_build58\ art_driver\bin\XP\

Execute the [inst_new_drv_xp.bat](#)

2. Insert the adapter , then install the driver , the driver is located at

Win2000 OS :

C:\ART_V52_build58\art_driver\bin\2000

WinXP OS :

C:\ART_V52_build58\ art_driver\bin\XP\

Configuration:

1. Enter the DOS command mode , then change the directory to :
C:\ART_V52_build58\art\bin\



2. Input the instruction : art \id=2062

Then press enter .

```
命令提示字元 - art \remote=usb \id=b051
C:\>art \remote=usb \id=b051

--- Atheros Radio Test (ART) ---
- Revision 5.2 BUILD #10
- Customer Version (ANWI BUILD)-

Reading in Configuration Setup from artsetup.txt
Calsetupfile Used : calsetup.txt
----- USB function
----- USB function
Client Version = 5.2 Build 10
Boot rom version 1.6
Loading values for devNum [0] from eep file ar5005ug_ub51g.eep

Reading in Calibration Setup from calsetup.txt
----- USB function
----- USB function
Client Version = 5.2 Build 10
Boot rom version 1.6
Attached to the Device for instance = 1
BOARD PARAMETERS EEPROM_SIZE = 400 checkSumLength = 400
Loading values for devNum [0] from eep file ar5005ug_ub51g.eep

Reading in Calibration Setup from calsetup.txt
Loading values for devNum [0] from eep file ar5005ug_ub51g.eep

Operating in 11g at channel 2.412GHz
=====
! AR5006mg_UB51 <g> !
=====
Devlib Revision 5.2 BUILD #10
Devices detected:
```

ART TEST MODE:

1. Once utility is executed, a menu with test options will appear. To run a test, press the character key that is assigned to the test option.

For example, press “c” to run the continuous transmit test, or press “r ” to run the continuous receive test.

For example: press “o” to change 11g or 11b test mode, Press “c” to continuous transmit mode .

```
C:\WINNT\system32\cmd.exe
Operating in 11b at channel 2.412GHz

=====
! Test Harness Main Options: !
! o - Toggle M(o)de !
! e - Ignore (E)EPROM Calibration !
! c - (C)ontinuous transmit mode !
! r - Continuous RF (R)eceive mode !
! l - (L)ink test menu !
! t - (T)hroughput test menu !
! p - EE(P)ROM function !
! s - (S)witch test card !
! m - (M)anufacturing/Calibration Test !
! g - Enable lo(g)ging !
! u - (U)tility Menu !
! i - (N)oise Immunity Menu !
! q - (Q)uit !
=====
```

2. Continuous Transmit Options.

The channel frequency, data rate and output power could be changed in continuous transmit options. Press “c” to increase the output power , 11g Power (data rate 6Mbps) is 17dBm, 11b Power is 17dBm , Press ESC to return to the main Test Options menu when finished.



3. Continuous Receive Options

Continuous receive options will put the radio into receive mode to allow for radio measurements.

Press ESC to return to the main Test Options menu when finished.

A screenshot of a Windows command prompt window titled "C:\WINNT\system32\cmd.exe". The window contains a menu of options for continuous RF receive, enclosed in a dashed border. The options are: 'p' for increasing center frequency by 10 MHz (or 100 MHz), 'l' for decreasing center frequency by 10 MHz (or 100 MHz), 'i' for increasing rx gain by 10, 'j' for decreasing rx gain by 10, 'a' for toggling the antenna, 's' for looping through the antenna switch table, and 'ESC' for exiting. Below the menu, it states "Operating in 11g at channel 2.412GHz" and "ANT_A receive Gain set externally".

```
=====  
: Continous RF Receive Options :  
: p - Increase Center Frequency by 10 MHz <P inc by 100 MHz> :  
: l - Decrease Center Frequency by 10 MHz <L dec by 100 MHz> :  
: i - Increase rx Gain <I inc by 10> :  
: j - Decrease rx Gain <J dec by 10> :  
: a - Toggle antenna :  
: s - Loop through antenna switch table :  
: ESC - exit :  
=====  
  
Operating in 11g at channel 2.412GHz  
  
ANT_A receive Gain set externally
```

1.0 Scope

1.1 Document

This document is to specify the product requirements for **IEEE 802.11a/b/g MiniPCI Card**. This Mini-PCI Card is based on Atheros AR5413 chipset ..

With seamless roaming, fully interoperability and advanced security with WEP standard, **IEEE 802.11a/b/g MiniPCI Card** offers absolute interoperability with different vendors' 802.11a/b/g Access Points through the wireless LAN.




1.2 Product Features

- Compatible with IEEE 802.11a/b/g standard to provide wireless 54Mbps data rate.
- Maximum reliability, throughput and connectivity with automatic data rate switching
- Supports wireless data encryption with 64/128/152-bit WEP for security
- Supports infrastructure networks via Access Point and ad-hoc network via peer-to-peer communication
- Dual UFL antenna connectors for diversity
- Supports DFS/TPC for European operation
- Supports WPA and AES enhanced security
- Support WPA and WPA2 enhanced security
- Supports WMM and Jumpstart function*(Drivers only support Windows XP and 2K)
- Friendly user configuration and utilities
- Drivers support Windows 98SE, ME, 2K, and XP
- Supports Mini-PCI Type IIIB form factor

2.0 Requirements

The following sections identify the detailed requirements of the **IEEE 802.11a/b/g MiniPCI Card**.

2.1 Functional Block Diagram

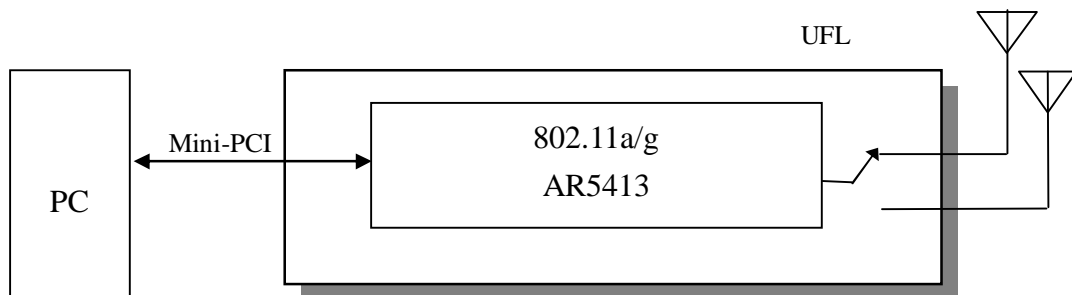



2.2 General Requirements

2.2.1 IEEE 802.11a Section

#	Feature	Detailed Description
2.2.1.1	Standard	Y IEEE 802.11a
2.2.1.2	Radio and Modulation Type	Y BPSK, QPSK, 16QAM, 64QAM, OFDM
2.2.1.3	Frequency Range & Channels	5.15~5.25 GHz (FCC/IC/CE) . 4 Chs 5.25~5.35 GHz (CE only) 4 Chs 5.470~5.725 GHz (CE only) . 11Chs 5.725~5.850 GHz (FCC/IC) . 5Chs
2.2.1.4	Data Rate	Y 54, 48, 36, 24, 18, 12, 9, and 6Mbps
2.2.1.5	Media Access Protocol	Y CSMA/CA with ACK
2.2.1.6	Transmitter Output Power (Average power)	Y Typical RF Output Power at each Data Rate Y +10 ~ 13dBm at 54Mbps Y +11 ~ 14dBm at 48Mbps Y +13 ~ 16dBm at 36Mbps Y +15 ~ 17dBm at 24, 18, 12, 9, and 6Mbps
2.2.1.7	Receiver Sensitivity	Y Typical Sensitivity at Which Frame (1000-byte PDUs) Error Rate = 10% Y -87dBm at 6Mbps Y -86dBm at 9Mbps Y -85dBm at 12Mbps Y -83dBm at 18Mbps Y -80dBm at 24Mbps Y -76dBm at 36Mbps Y -71dBm at 48Mbps Y -66dBm at 54Mbps

2.2.2 IEEE 802.11b Section

#	Feature	Detailed Description
2.2.2.1	Standard	Y IEEE 802.11b
2.2.2.2	Radio and Modulation Schemes	Y DQPSK, DBPSK, DSSS, and CCK
2.2.2.3	Operating Frequency	Y 2400 ~ 2483.5 MHz ISM band
2.2.2.4	Channel Numbers	Y 11 channels for United States · Canada and Taiwan



#	Feature	Detailed Description
		13 channels for Europe Countries 14 channels for Japan
2.2.2.5	Data Rate	ÿ 11, 5.5, 2, and 1Mbps
2.2.2.6	Media Access Protocol	ÿ CSMA/CA with ACK
2.2.2.7	Transmitter Output Power (Average power)	ÿ Typical 18dBm at 11, 5.5, 2, and 1Mbps
2.2.2.8	Receiver Sensitivity	ÿ Typical -84dBm for 11Mbps @ 8% PER ÿ Typical -90dBm for 2Mbps @ 8% PER

2.2.3 IEEE 802.11g Section

#	Feature	Detailed Description
2.2.3.1	Standard	ÿ IEEE 802.11g
2.2.3.2	Radio and Modulation Schemes	ÿ BPSK, QPSK, 16QAM, 64QAM, and OFDM
2.2.3.3	Operating Frequency	ÿ 2400 ~ 2483.5MHz ISM band
2.2.3.4	Channel Numbers	ÿ 11 channels for United States, Canada and Taiwan ÿ 13 channels for Europe Countries ÿ 13 channels for Japan
2.2.3.5	Data Rate	ÿ 54, 48, 36, 24, 18, 12, 9, and 6Mbps
2.2.3.6	Media Access Protocol	ÿ CSMA/CA with ACK
2.2.3.7	Transmitter Output Power (Average power)	ÿ Typical RF Output Power at each Data Rate ÿ +11 ~ 15dBm at 54Mbps ÿ +12 ~ 16dBm at 48Mbps ÿ +13 ~ 17dBm at 36Mbps ÿ +16 ~ 18dBm at 24, 18, 12, 9, and 6Mbps
2.2.3.8	Receiver Sensitivity	ÿ Typical Sensitivity at Which Frame (1000-byte PDUs) Error Rate = 10% ÿ -87dBm at 6Mbps ÿ -86dBm at 9Mbps ÿ -85dBm at 12Mbps ÿ -83dBm at 18Mbps ÿ -80dBm at 24Mbps ÿ -76dBm at 36Mbps ÿ -71dBm at 48Mbps ÿ -66dBm at 54Mbps



2.2.4 General Section

#	Feature	Detailed Description
2.2.3.1	Antenna Connector	Y Dual UFL antenna connectors
2.2.3.2	Operating Voltage	Y 3.3VDC +/- 10%
2.2.3.3	Current Consumption	Y 520mA at continuous transmit mode Y 260mA at continuous receive mode Y 15mA at sleep mode
2.2.3.4	Form Factor and Interface	Y Mini-PCI Type IIIB form factor
2.2.3.5	LEDs	Y External LED function supported



2.3 Software Requirements

The Configuration Software supports Microsoft Windows 98SE, ME, 2000, and XP. This configuration software includes the following functions:

Y Information

Information allows you to monitor network status.

Y Configuration

Configuration allows you to configure parameters for wireless networking.

Y Security

Supports enhanced security WEP, 802.1x,WPA,WPA2.

2.3.1 Information

#	Feature	Detailed Description
2.3.1.1	General Information	Y General Information shows the name of Wireless Adapter, Adapter MAC Address, Regulatory Domain, Firmware Version, and Utility Version.
2.3.1.2	Current Link Information	Y Current Link Information shows the Current Setting ESSID, Channel Number, Associated BSSID, Network Type (infrastructure or Ad-hoc network), WEP Status (enable or disable), Link Status (Connect or Dis-connect), 802.11g Transmit Speed, 802.11b Transmit Speed, Signal Strength, and Link Quality.
2.3.1.3	Site survey	Y To search the neighboring access points and display the information of all access points.

2.3.2 Configuration

#	Feature	Detailed Description
2.3.2.1	ESS ID	Y Input an SSID number if the roaming feature is enabled Y Supports for ASCII printable characters.
2.3.2.2	Network Type	Y Ad-hoc Mode and 802.11 Ad-hoc Mode for network configurations that do not have any access points Y Infrastructure Mode for network configurations with access points
2.3.2.3	Power Save	Y Extend the battery life of clients by allowing the client to sleep for short periods of time while the Access Point buffers the messages.



#	Feature	Detailed Description
2.3.2.4	RTS Threshold	ÿ Set the number of bytes used for fragmentation boundary for messages
2.3.2.5	Fragment Threshold	ÿ Set the number of bytes used for RTS/CTS boundary
2.3.2.6	Transmission Speed	ÿ This indicates the communication rates. Select appropriate transmission speed to match your wireless LAN settings
2.3.2.7	Roaming	ÿ Support Automatic or Manual Rescan to associate with access point.

2.3.3 Security

#	Feature	Detailed Description
2.3.3.1	Encryption	ÿ RC4 encryption algorithm ÿ Support 64/128/152 bit WEP encryption ÿ Support open system and shared key authentication
2.3.3.2	WEP Management	ÿ Four WEP keys can be selected ÿ STA with WEP off will never associate any AP with WEP enabled ÿ WEP Key Format: Option for Hex format
2.3.3.3	802.1x	ÿ Support EAP-TLS, EAP-TTLS, and EAP-PEAP
2.3.3.4	WPA	ÿ Support WPA/WPA2-PSK and WPA/WPA2-EAP ÿ Support Cipher Mode AES and TKIP

2.4 Mechanical Requirements

#	Feature	Detailed Description
2.4.1	Length	ÿ 44.6mm
2.4.2	Width	ÿ 50.75mm
2.4.3	Height	ÿ 5mm

2.5 Compatibility Requirements

This device passes the following compatibility requirements.

#	Feature	Detailed Description
2.5.1	Wi-Fi	ÿ Meet Wi-Fi certification for IEEE 802.11a/b/g product
2.5.2	WHQL	ÿ Meet applicable WHQL certification requirements
2.5.3	Physical Layer	ÿ Meet ALPHA Engineering Test Plan and Test



#	Feature	Detailed Description
	and Functionality	Report

2.6 Requirements of Reliability, Maintainability and Quality

#	Feature	Detailed Description
2.6.1	MTBF	Y Mean Time Between Failure > 30,000 hours
2.6.2	Maintainability	Y There is no scheduled preventive maintenance required
2.6.3	Quality	Y The product quality is followed-up by ALPHA factory quality control system

2.7 Environmental Requirements

#	Feature	Detailed Description
2.7.1	Operating Temperature Conditions	Y The product is capable of continuous reliable operation when operating in ambient temperature of 0 °C to +55°C.
2.7.2	Non-Operating Temperature Conditions	Y Neither subassemblies is damaged nor the operational performance is degraded when restored to the operating temperature after exposing to storage temperature in the range of -20 °C to +75 °C.
2.7.3	Operating Humidity conditions	Y The product is capable of continuous reliable operation when subjected to relative humidity in the range of 10% and 90% non-condensing.
2.7.4	Non-Operating Humidity Conditions	Y The product is not damaged nor the performance is degraded after exposure to relative humidity ranging from 5% to 95% non-condensing

檔名: WMP-D16 Manual (updated)
目錄: S:\客服部\明泰\960316H01 WMP-D16 (註 Version 1)\
舊資料
範本: C:\Documents and Settings\sam\Application
Data\Microsoft\Templates\Normal.dot
標題: Test Operation Manual for MB23
主旨:
作者: Victor Pai
關鍵字:
註解:
建立日期: 2007/4/23 4:19:00 PM
修訂版編號: 4
前次更新日期: 2007/4/23 4:24:00 PM
前次存檔人員: user
編輯總時間: 13 分鐘
最後列印在: 2007/4/23 4:24:00 PM
最後列印的字數
頁數: 15
字數: 2,336 (約)
字元數: 13,321 (約)