

WX-1516
Hot Spot Access Point

User's Manual

Apr. 20, 2003 (Draft 1.0)

Contents

1	Getting started	4
1.1	Introduction	4
1.2	Contents of this manual	4
1.3	Wireless networking basics and advantages	4
1.4	Adding Access Points to your (network) environment	5
1.4.1	Connecting an Access Point directly to a computer	6
1.4.2	Extending a wired network with one or more Access Points	6
1.4.3	Creating a wireless network	7
1.4.4	Creating a gateway	7
2	Installing the Access Point	8
2.1	Introduction	8
2.2	Access Point environment	8
2.3	Physical installation of the Access Point	9
2.4	Desktop installation	9
2.5	Wall mount installation	10
2.6	Connecting the Access Point	11
2.6.1	Power adapter	11
2.6.2	Ethernet port	11
2.7	LEDs	12
2.8	The reset button	12
2.8.1	Unlocking the Access Point	12
2.8.2	Resetting to the default factory settings	13
3	Connecting to the Access Point	14
3.1	Introduction	14
3.2	When to configure the Access Point	14
3.3	Starting the Web Interface	15
3.4	Using KickStart	15
3.4.1	Installing KickStart	15
3.4.2	Launching KickStart	15
3.4.3	Select wireless ethernet device	16
3.4.4	Change IP settings	17
3.4.5	Static IP settings	17
3.4.6	Set Gateway address	18
3.4.7	Changing IP settings	18
3.4.8	Ready to start the Web Interface	18

3.5	Launching the Web Interface directly	19
3.6	Contents of the Web Interface	19
4	Basic configuration21
4.1	Introduction	21
4.2	IP addressing	21
4.3	Connecting an Access Point directly to a computer	22
4.4	Extending a wired network with one or more Access Points	24
4.5	Creating a wireless network	25
4.6	Creating a gateway	26
4.7	Using a DHCP server	27
4.8	Adding multiple Access Points to a network	28
4.8.1	Connecting Access Points via Ethernet links	28
4.8.2	Connecting Access Points via wireless links	29
4.9	Network Setup in general	29
4.9.1	WAN Connection	30
4.9.2	LAN settings	32
5	Advanced configuration33
5.1	Introduction	33
5.2	Settings Summary	33
5.3	Event reporting/logging	34
5.4	Identifying the Access Point	34
5.5	Wireless Settings	35
5.6	Security	35
5.6.1	Security against unauthorized network access	36
5.6.2	Security against eavesdropping	37
5.6.3	Security against unauthorized configuration	38
5.6.4	Firewall	39
5.7	Port forwarding	45
5.8	Upgrading the Access Point firmware	46
6	Troubleshooting47
	Federal Communication Commission Interference tatement	51
	R&TTE Compliance tatement	52

1 Getting started

1.1 Introduction

Thank you for purchasing your 11 Mbps WLAN Access Point.

The package you have received contains the following items:

- user manual
- 11 Mbps WLAN Access Point
- power adapter
- CD containing configuration software and this manual

1.2 Contents of this manual

Table 1-1 Contents of this manual

Chapter	When to read:
This chapter (Getting Started)	Read this chapter for general information on wireless networks.
Chapter 2: 'Installing the Access Point' on page 8	Read this for information on how to install and connect the Access Point to your (network) environment.
Chapter 3: 'Connecting to the Access Point' on page 14	Read this chapter when you want to connect to an Access Point to configure it.
Chapter 4: 'Basic Configuration' page 20	Read this chapter when you want to configure the Access Point for use in common situations (the ones listed in section 1.4: 'Adding Access Points to your (network) environment').
Chapter 5: 'Advanced Configuration' on page 31	Read this chapter when you want to make full use of the Access Point's advanced capabilities.
Chapter 6: 'Trouble shooting' on page 43	Read this chapter when the Access Point does not function properly.

1.3 Wireless networking basics and advantages

A wireless network connects computers to each other using radio technology. This offers you the freedom to move around the area and work anywhere within range of an Access Point. Such a wireless network is called a WLAN (Wireless Local Area Network).

Access Points can be connected to a wired (Ethernet) network. This allows wireless clients to communicate with computers on the wired network. This type of network is called a LAN (Local Area Network).

An Access Point can also act as a gateway. You can connect the

Access Point to your internet connection (for example a cable modem or ADSL modem), and use the wireless LAN to connect your computers to the internet. The internet, or any other network outside the gateway, is called a WAN (Wide Area Network).

1.4

Adding Access Points to your (network) environment

Where to place and how to connect an Access Point depends entirely on your specific (network) environment. The following sections give some guidelines on how to add Access Points to your environment.

An Access Point can be used to:

- connect to a single computer (see section 1.4.1)
- extend an existing wired network (see section 1.4.2)
- create a wireless network (see section 1.4.3)
- create a gateway to the internet (see section 1.4.4)

These are not the only ways you can use an Access Point. You can adapt these basic scenarios for use in your network environment.

The scenarios listed below are described in more detail in chapter 4: 'Basic configuration'

The Access Point also has a number of advanced functions. These are not required for the Access Point to function, but are optional. These functions are described in chapter 5: 'Advanced configuration'.

1.4.1 Connecting an Access Point directly to a computer

You can connect an Access Point directly to your computer.

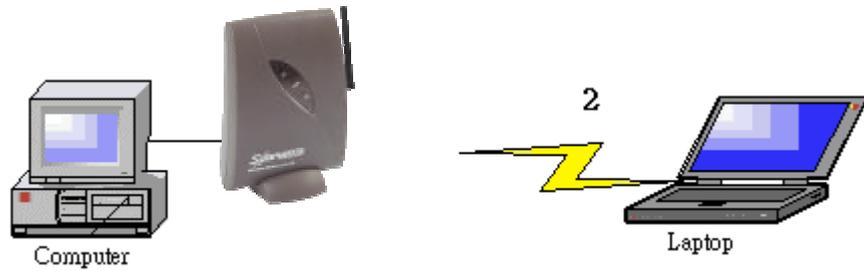


Figure 1-2 Connecting an Access Point directly to a computer

You need to use a crossover cable to connect the Access Point directly to your computer.

1.4.2 Extending a wired network with one or more Access Points

You can extend existing wired networks with wireless capability by adding Access Points to them.

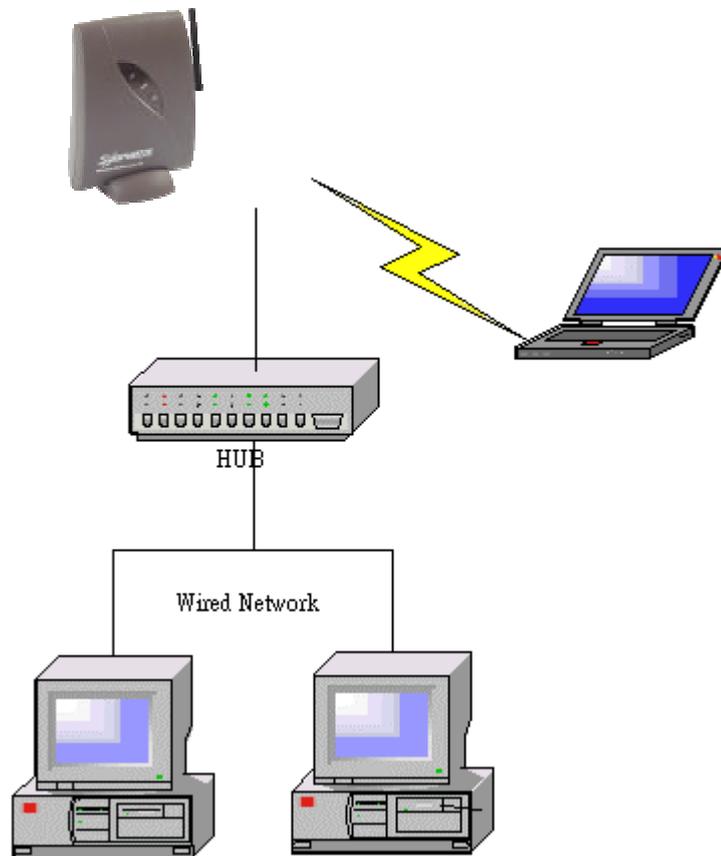


Figure 1-3 Adding an Access Point to a wired network

1.4.3

Creating a wireless network

You can use an Access Point to set up a wireless network.

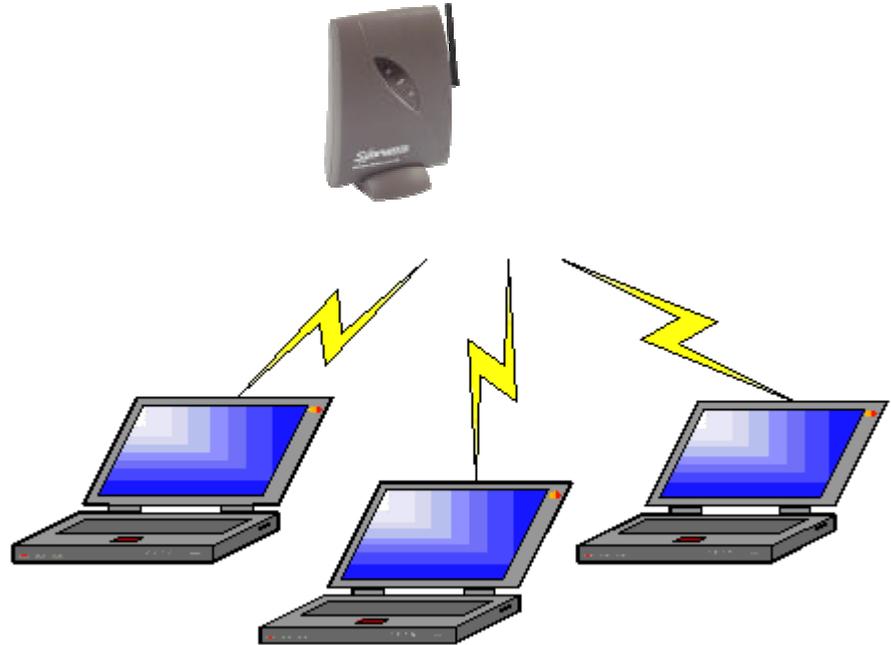


Figure 1-4 Wireless network

1.4.4

Creating a gateway

You can use an Access Point to set up a gateway to the internet.

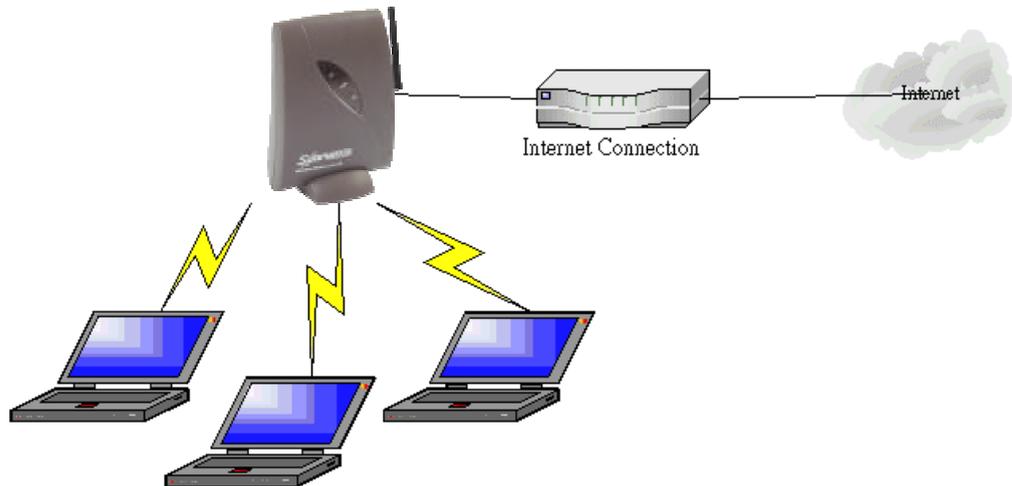


Figure 1-5 Wireless network with internet gateway

2 Installing the Access Point

2.1 Introduction

This chapter describes the physical installation of an Access Point.

Table 2-1 Overview of this chapter

Section	Describes
2.2	Where to install an Access Point
2.3, 2.4, 2.5	How to install an Access Point.
2.6	How to connect the AccessPoint.
2.7	Explanation of the LEDs.
2.8	How to unlock/reset the Access Point.

2.2 Access Point environment

When you install an Access Point, you must consider the following items:

- connection to a power outlet
- connection to the network
- environment of the Access Point (heat/humidity)
- range of the Access Point

2.3

Physical installation of the Access Point

For best performance, install the Access Point in a vertical position.



Figure 2-1 The Access Point

The Access Point can be installed in 2 different ways:

- on a desktop
- mounted to a wall

The stand is used for desktop placement.

2.4

Desktop installation

Determine where you want to place the Access Point. Make sure you have a clear area on a desktop.

You can insert the Access Point into the stand as shown in Figure 2-2.



Figure 2-2 Access Point for desktop use

No mounting materials are required

2.5 Wall mount installation

Note: Before you start drilling holes into a wall, make sure that part of the wall is clear of electricity, water and gas pipes.

The wall mount package contains two screws and plugs to fasten the Access Point to the wall.

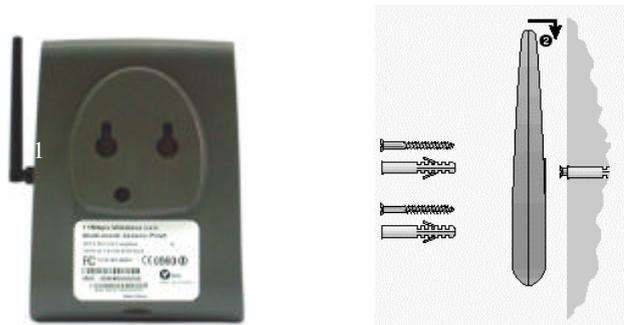


Figure 2-3 Mounting the Access Point on a wall

Step by step wall mount installation:

1. Determine the position of the screws. The screws must be 5 cm apart to fit the keyholes at the back of the Access Point.
2. Drill the holes in the wall (at the appropriate size for the plugs).
3. Insert the plugs into the holes.
4. Fasten the screws into the plugs, and leave about 3 mm of space between wall and screw head.
5. Attach the Access Point to the screws: there are two keyholes ¹ in the back of the Access Point. The screwheads fit into the large half of the keyholes. Once the screwheads are inside the keyholes, the Access Point can drop ², locking the screwheads into the small half of the keyholes.

2.6 Connecting the Access Point

Your Access Point is now ready to be connected to a power outlet and to your wired network.

You can find the power input and the Ethernet port on the left hand side of the Access Point.

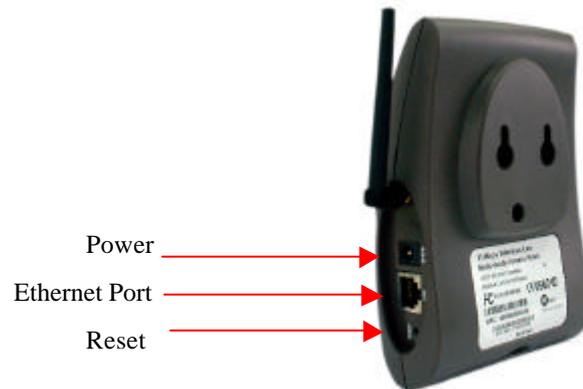


Figure 2-4 Connecting the Access Point

2.6.1 Power adapter

The Access Point package contains a power adapter. To connect it:

1. Plug it into the Access Point.
2. Plug the power cord into the adapter.
3. Plug the power cord into a power outlet.
4. Check the power LED (the middle of the three LEDs). If it is ON, you are connected properly.

2.6.2 Ethernet port

The Ethernet port (an RJ45 socket) can be found next to the power connector on the Access Point.

For a wired connection, attach the Ethernet cable to the Access Point and connect the cable on the other end to either a hub in the network, or a computer.

If you want to connect to an Access Point via a wired connection, it must be connected correctly:

- if the Access Point is connected to a hub or switch, a 'Normal' (not a crossover) cable must be used
- if the Access Point is connected directly to a computer, a crossover

cable must be used

2.7

LEDs

The Access Point has three LEDs

Table 2-2 LEDs

LED	LED Function
Link	The link LED is on when the Access Point is connected to a wired network.
Power	The power LED is on when the Access Point is connected to the electricity net.
ACT (Radio signal)	The ACT LED blinks when the Access Point is active.

Figure 2-5 shows the LEDs.

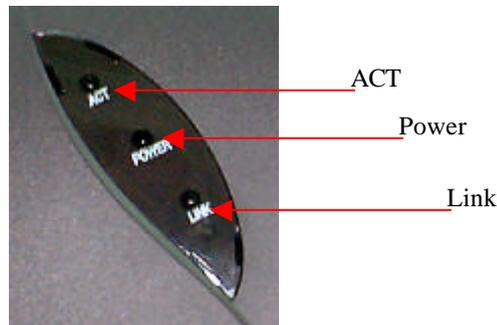


Figure 2-5 Access Point LEDs

2.8

The reset button

The unlock/reset button is found beneath the power and Ethernet ports. It is a small hole that gives access to a pushbutton switch. You can use this button in two ways: to unlock or to reset the Access Point. Unlocking makes the Access Point accessible for configuration changes. Resetting removes all settings you made.

2.8.1

Unlocking the Access Point

Doing this unlocks the Access Point (i.e. the Lock Access Point setting) and removes the WCS (Write Community String) password. These settings are described in section 5.6.3: 'Security against unauthorized configuration'.

1. Insert the end of a paperclip into the hole.
2. Press the button until the Radio LED (the one on the right) goes from blinking to being on constantly. This takes about one second.

3. Release the reset button when the LED is on constantly.
You can now use the Web Interface to manage the Access Point again.

2.8.2 Resetting to the default factory settings

If you press the reset button for more than 5 seconds, the Access Point will be reset to the default factory settings.

All changes you made to the configuration will be lost.

1. Insert one end of a paperclip into the hole for the reset button and keep it pressed for more than five seconds. After about one second, the Radio LED (the one on the right) goes from blinking to being on constantly. After about five seconds, the LED goes off.

2. Release the reset button when the LED has gone off.
All settings are deleted. You will need to reconfigure the Access Point.

3 Connecting to the Access Point

3.1 Introduction

The Access Point is a ready to use device. It is delivered with default settings which allow you to use its basic functions without configuring it.

Whether you need to configure the Access Point or not, depends entirely on how you use the Access Point in your network environment. Section 3.2: ‘When to configure the Access Point’ discusses the consequences of configuring the Access Point.

You configure the Access Point via Web pages that are built into the Access Point. These are accessible via any Web browser. The KickStart application helps you access this Web Interface.

Table 3-1 Overview of this chapter

Section	Description
3.2	When to configure the Access Point
3.3-3.4	Starting the Web Interface
3.5	Launching the Web Interface manually
3.6	Contents of the Web Interface

3.2 When to configure the Access Point

Configuring the Access Point means installing settings with respect to the use of radio channels, security, identification, etc.

Out of the box, the Access Point is configured so you can use it as a basic Access Point (a ‘Hub’ for your wireless network).

In scenarios like section 1.4.1: ‘Connecting an Access Point directly to a computer’ where there’s no gateway, the Access Point will probably function without additional configuration. If it doesn’t, you need to change the IP address settings.

Not configuring your Access Point will make your network accessible to anyone. Once your network is up and running, we recommend you read section 5.6: 'Security' and secure your network.

When you want to use the more advanced functions (e.g. use the Access Point as a gateway to the internet), you need to change the configuration.

3.3 Starting the Web Interface

The first time you want to access the Web Interface, you need to use KickStart to find it. For subsequent access, you can go to the Web Interface directly (see section 3.5) and you don't need KickStart.

Tip: you can bookmark the web address for the Web Interface for even easier access.

You also need to use KickStart after you have reset the Access Point to factory defaults.

3.4 Using KickStart

KickStart helps you start the Web Interface: it finds all Access Points in your network and it points your Web browser to the Web Interface of the Access Point you selected.

If your network uses DHCP or Auto IP to assign IP addresses, KickStart retrieves the address assigned to the Access Point.

If your network uses static IP addresses, KickStart allows you to change the IP address settings for an Access Point.

3.4.1 Installing KickStart

You can install KickStart on any PC in the network to which the Access Point will be connected. Follow the instructions of the installation wizard.

3.4.2 Launching KickStart

Launch KickStart via the Start menu. The application starts up. When you click Next, KickStart will search for all Access Points within range, whether they have been configured properly or not.

3.4.3

Select wireless ethernet device

In the ‘Select wireless ethernet device’ dialog, select the Access Point you want to configure from the list. Once you have selected an Access Point, click Next to continue.

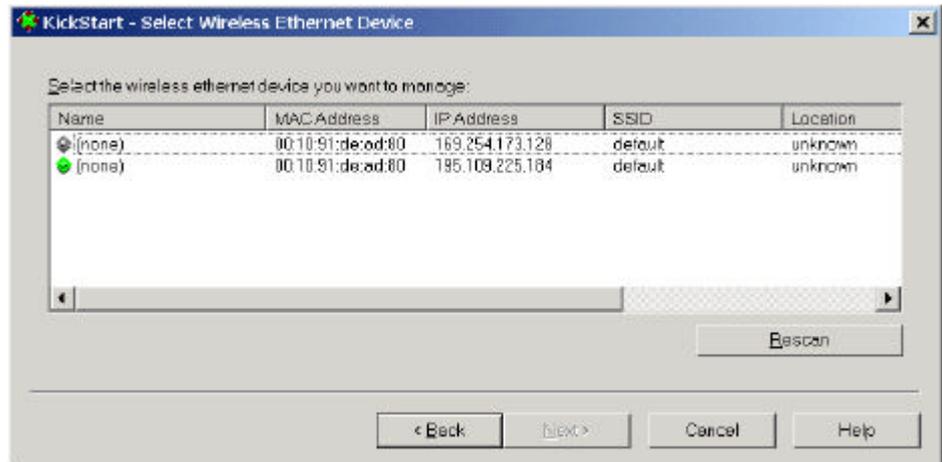


Figure 3-1 KickStart: ‘Select wireless ethernet device’ dialog

If the Access Point you are looking for does not appear in the list, click Rescan. KickStart will search for Access Points again. For example, use this to find Access Points that have just been switched on or reset. These devices may take up to a minute to find an IP address, and they won’t appear in the list until then.

If the device that you want to manage is not in the list and is not found after clicking the Rescan button, go to chapter 6: ‘Troubleshooting’.

An Access Point may appear twice in the list: you? I see two items with the same MAC address, but different IP addresses. In this case, select the one with the green icon.

The columns in the list contain the properties of all detected wireless devices. Table 3-2 lists these properties:

Table 3-2 Description of the device data

Column	Description
Name	The name of the Access Point. This cannot

	<p>be changed. The icon that precedes the name can be gray or green.</p> <p>A gray icon means that the Access Point's IP address needs to be changed: it is not in the same subnet as your computer. For more information on subnets.</p> <p>A green icon means the Access Point's IP address does not need to be changed.</p>
MAC address	<p>Every Ethernet device has a unique address that is permanently linked to that device. It cannot be changed. On most wireless devices, the MAC address is printed on its type label.</p>
IP address	<p>In order to access a TCP/IP network, a device must have an IP address in addition to its MAC address.</p>
SSID	<p>The SSID is also known as Service Set ID. This is the name of your wireless network.</p>
Location	<p>The location of the Access Point. See section 5.4: 'Identifying the Access Point' on how to edit this field.</p>
Contact	<p>The name of the contact person for the Access Point. See section 5.4: 'Identifying the Access Point' on how to edit this field.</p>

3.4.4 Change IP settings

In the 'Change IP Settings' dialog you can select to use either dynamic or static IP settings.

Select Dynamic IP settings when you install the Access Point in a network with an external DHCP server or Auto IP.

Select Static IP settings when you want to configure the IP settings manually. You also need to do this if you want to use the DHCP server that is built into the Access Point.

Click Next to continue to the next screen.

- If you selected the option Use dynamic IP settings, you will continue to the ‘Changing IP settings’ dialog directly. see section
- If you selected the option Use static IP settings, you will continue to the ‘Set IP address of Wireless Device’ dialog, see section 3.4.5.

3.4.5 Static IP settings

If you selected the option Use static IP setting in the ‘Change IP Settings’ dialog, you will enter the Set IP Address of Wireless Device’ dialog.

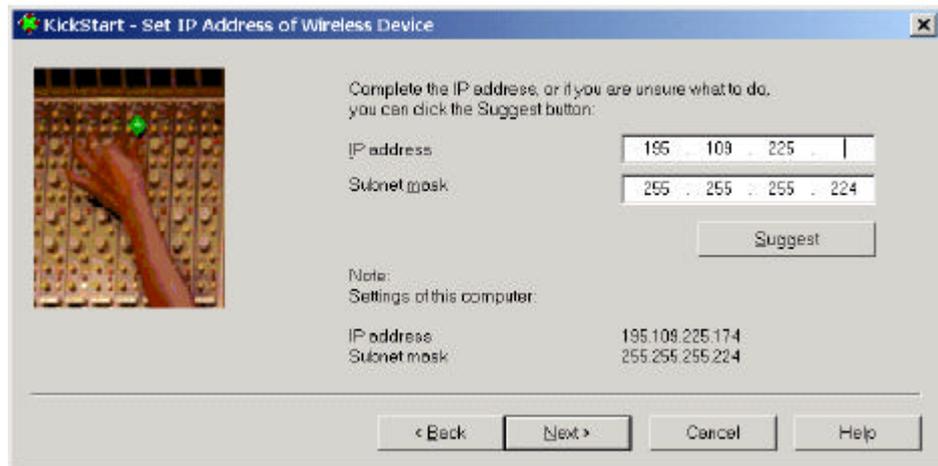


Figure 3-2 KickStart: IP settings

Here you can either manually insert an IP address and Subnet mask, or you can click Suggest to let the system find suitable IP settings. Click Next to continue to the Set Gateway address dialog.

3.4.6 Set Gateway address

In the ‘Set Gateway of Wireless Device’ dialog you can set the Gateway address of the Access Point. A gateway is used to connect your network to the internet.

Setting a gateway address is only necessary if you use another router in your network. If you use the gateway that is built into the Access Point, you do not need to set this address.

Click Next to continue to the Changing IP settings dialog.

3.4.7. Changing IP settings

KickStart will install the proper IP settings of the device.

If it cannot install the proper IP settings, a warning is given. With the Back button you can return to the Change IP settings dialog (see

section 3.4.4) where you can select another method for installing the IP settings.

If the IP settings were set successfully, the Next button is activated. Click Next to continue to the Ready to start the Web Interface dialog.

3.4.8 Ready to start the Web Interface

If you click Finish in this screen, KickStart will launch a Web browser and open the Web Interface for the Access Point you have chosen. You can now configure the Access Point. Chapters 4: 'Basic Configuration' and 5: 'Advanced configuration' tell you more about this. When you use KickStart to find an Access Point that already has correct IP settings, KickStart will go directly from the 'Select wireless ethernet device' dialog to this page.

3.5 Launching the Web Interface directly

When you know the IP address of an Access Point, you can manually open the Web Interface in a web browser, just as you would open any other Web page.

1. Open a web browser.
2. Insert the IP address of the Access Point on the address bar as follows (a sample IP address is used in the example):

`http://192.168.0.1/`

Tip: you can bookmark the web address for the Web Interface for easier access.

3.6 Contents of the Web Interface

With the Web Interface application, you can configure the Access Point. The settings are divided into pages. These pages are listed in the frame on the left side of the browser window.

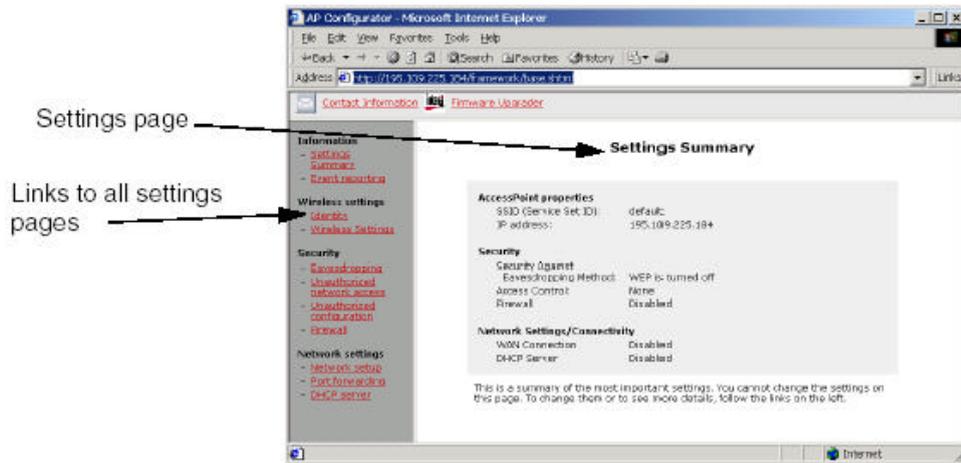


Figure 3-3 The Web interface

Basic configuration is described in chapter 4: 'Basic configuration'

Advanced settings are described in chapter 5: 'Advanced Configuration'.

4 Basic configuration

4.1 Introduction

An Access Point can be used in a variety of ways. This chapter guides you through common scenarios, and gives general information on the basic configuration of the Access Point.

The Access Point can be used to:

- connect to a single computer (section 4.3)
- extend an existing wired network (section 4.4)
- create a wireless network (section 4.5)
- create a gateway to the internet (section 4.6)

At the end of the chapter, you will find more general information about:

- Using a DHCP server (section 4.7)
- Adding multiple Access Points to a network (section 4.8)

The scenarios don't cover every possible use of the Access Point. With the information in Network Setup in general (section 4.9) you can configure the Access Point for situations that haven't been covered by the scenarios.

In all scenarios, there is one important piece of information you need: the IP addressing method for the network. The IP addressing section tells you more about that.

4.2 IP addressing

Each computer and Access Point in your network has an address so other computers can talk to it. This address is called an IP address.

There are three ways for assigning IP addresses to your computers and Access Points:

1. Auto IP
2. DHCP
3. static IP addresses

For now, these are the most important differences:

1. With Auto IP, the computers automatically select an IP address. This is convenient, because you don't have to do anything. But it can take a while for the computers to find an unused address.
2. With DHCP, a server gives each computer its address. You will have to set up the DHCP server (one is built into the Access Point), but once set up, it takes care of all addressing issues.
3. If you use static addresses, you'll have to give each computer an address manually. This is more work than the other methods. Only use static addressing if you really need it.

In general, Auto IP and DHCP are the easiest to use. In an existing network, you may want to keep the existing addressing method.

4.3 Connecting an Access Point directly to a computer

You can connect an Access Point directly to a computer 1, and use it to make a wireless connection from a laptop computer 2.



Figure 4-1 Connecting an Access Point directly to a computer

Install the components of your network:

1. Install a network card in the computer 1 and install the software for the card.
2. Install the Access Point.

Note: You need to use a crossover cable to connect the Access Point to the computer.

3. Connect the Access Point to the computer, using the crossover cable.
4. Prepare the wireless client(s): install their network card and software.

Configure the Access Point from the computer 1. In this example, we will use Auto IP.

5. Use KickStart (see chapter 3: 'Connecting to the Access Point') to connect to the Access Point.

In your Web browser, the Web Interface opens.

6. Go to the Network Setup page.

7. Make sure the LAN settings radio button is set to Dynamic.

8. On your computer, open the network settings:

on a Windows 98 computer: open the Network control panel.

9. Find the TCP/IP properties:

on a Windows 98 computer: select TCP/IP, then click Properties.

10. Make sure the IP address settings are set to Obtain an IP address automatically.

11. Repeat steps 8. to 10. for each computer on the network.

12. To secure your network, we recommend you configure these security settings:

- To prevent unauthorized access to your WLAN, you can use an Access Control List, see section 5.6.1.1: 'MAC Address based Authorization' . In this list, enter the MAC address of the network cards that are allowed access to your WLAN.

- To prevent unauthorized changes to your configuration, change the Write Community String password, see section 5.6.3: 'Security against unauthorized configuration'.

This password will be requested when a client accesses the web interface.

For even tighter security, you can use the other features described in section 5.6: 'Security'

If you want to use a DHCP server instead of Auto IP, see section 4.7: 'Using a DHCP server'

4.4 Extending a wired network with one or more Access Points

When you want to extend a wired network with wireless capability, you can connect Access Points to it.

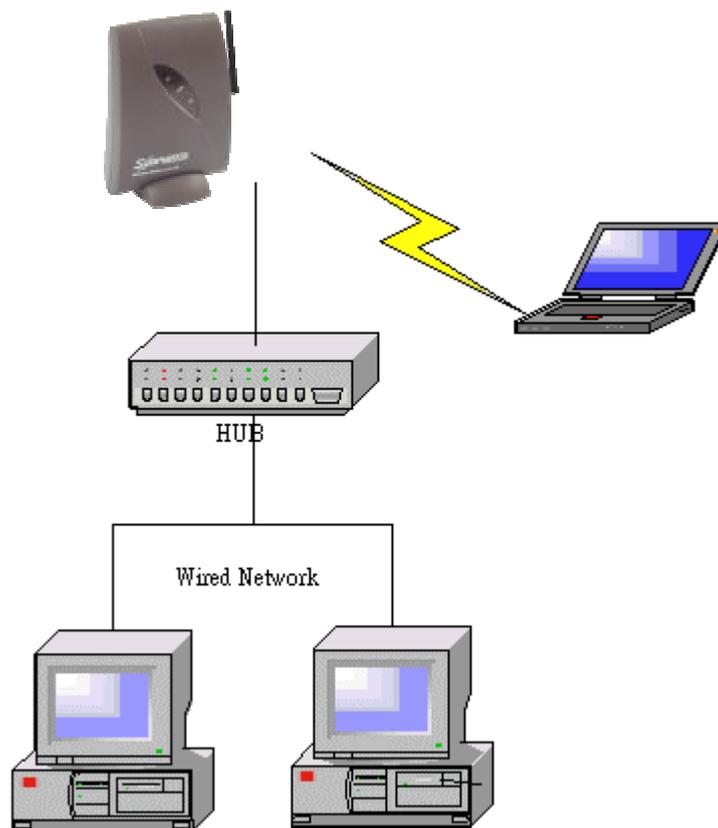


Figure 4-2 Adding an Access Point to a wired network

To add the first Access Point to a network:

1. Make sure the wired network is completely functional.

2. Install the Access Point and connect it to your wired network.
Configure the Access Point from a computer in your existing network:
3. Use KickStart (see chapter 3: ‘Connecting to the Access Point’) to connect to the Access Point.
In your Web browser, the Web Interface opens.
4. Go to the Network Setup page.
5. If the network uses Auto IP or DHCP: set the LAN settings radio button to Dynamic.
If you want to use the DHCP server in the Access Point: see section 4.7: ‘Using a DHCP server.’
6. Prepare the wireless client(s): install their network card and software.
To add more Access Points: see section 4.8: ‘Adding multiple Access Points to a network.’

4.5

Creating a wireless network

You can use an Access Point to set up a wireless network.

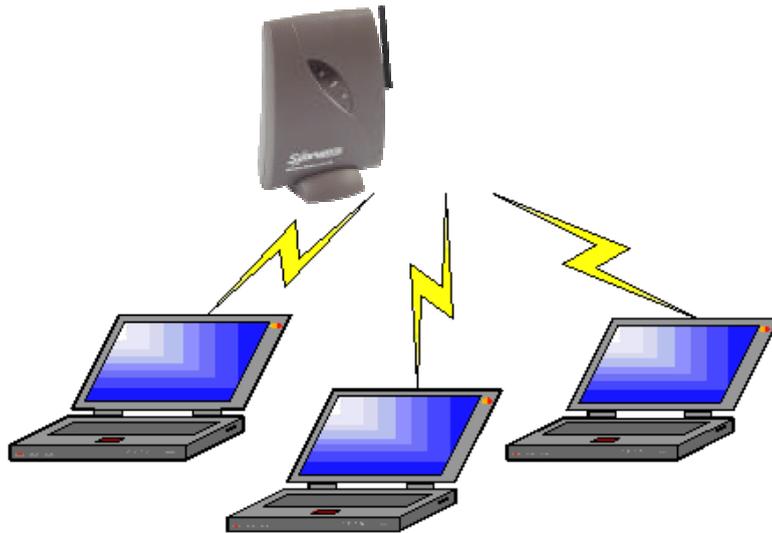


Figure 4-3 Creating an all-wireless network

Install the components of the network:

1. Prepare one computer (install wireless network card and software).
2. Install the Access Point.
Configure the Access Point from the computer you just installed. In this example, we will use Auto IP.
3. Use KickStart (see chapter 3: ‘Connecting to the Access Point’) to connect to the Access Point.
In your Web browser, the Web Interface opens.
4. Go to the Network Setup page.

5. Set the LAN settings radio button to Dynamic.
 6. On your computer, open the network settings:
on a Windows 98 computer: open the Network control panel.
 7. Find the TCP/IP properties:
on a Windows 98 computer: select TCP/IP, then click Properties.
 8. Make sure the IP address settings are set to Obtain an IP address automatically.
 9. Prepare all other computers (install wireless network card and software).
 10. Repeat steps 6. to 8. for each computer on the network.
- If you want to use a DHCP server instead of Auto IP, see section 4.7: 'Using a DHCP server.'

4.6 Creating a gateway

You can use an Access Point to set up a gateway to the internet.

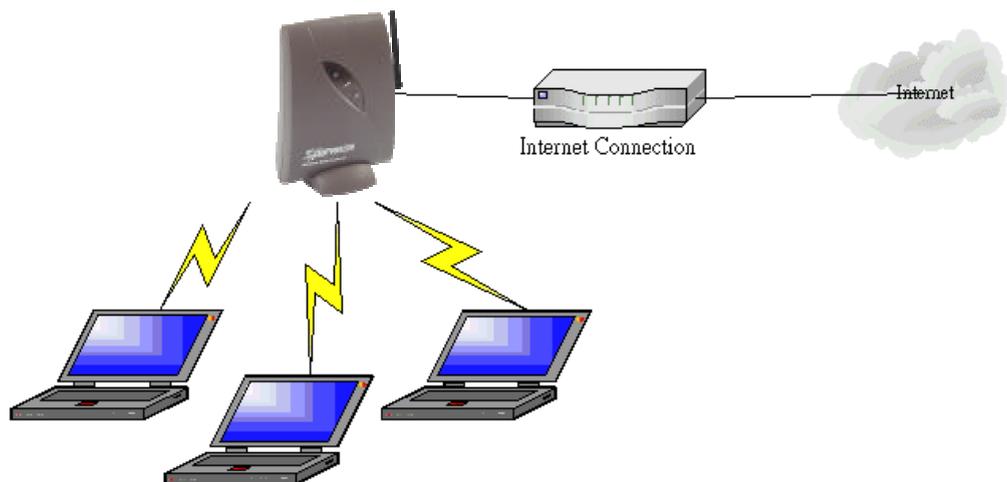


Figure 4-4 Creating a wireless network with a gateway

Install the components of the network:

1. Prepare one computer (install wireless network card and software).
2. Install the Access Point.
3. Connect the Access Point to your internet connection (for example a cable modem or ADSL modem) via the Ethernet port.

Configure the Access Point from the computer you just installed. In this example, we will use the DHCP server built into the Access Point:

4. Use KickStart (see chapter 3: 'Connecting to the Access Point') to connect to the Access Point.

In your Web browser, the Web Interface opens.

5. Go to the DHCP server page.
6. Select the Enable DHCP radio button to start the DHCP server.
7. Click Apply.
8. Go to the Network Setup page, and edit these LAN Settings:
9. Set the LAN address to Static.
10. Make sure the IP address is in the range of the DHCP server.
11. In the Gateway Address edit box, enter the LAN IP address of the Access Point.
12. Check the WAN Connection check box.
13. The WAN settings (the Connection Type radio buttons and the settings to their right) depend on information you get from your Internet Service Provider (ISP).
 - If your ISP instructs you to 'use DHCP' select the Dynamic radio button.
 - If your ISP gives you IP settings, select the Static IP radio button and enter the IP address, subnet mask and gateway address the ISP gave you.
 - If your ISP gives you PPPoE information, select the PPPoE radio button and enter the user name, password and Service name the ISP gave you. If your ISP didn't give you a Service name, leave that edit box empty.
14. Check the NAPT check box. This switches Network Address Port Translation on. NAPT is also known as Internet Connection Sharing.
15. Make sure the Share Ethernet check box is unchecked.
16. Click Apply.
17. On your computer, open the network settings:
 - on a Windows 98 computer: open the Network control panel.
18. Find the TCP/IP properties:
 - on a Windows 98 computer: select TCP/IP, then click Properties.
19. Make sure the IP address settings are set to Obtain an IP address automatically.
20. Prepare all other computers (install wireless network card and software).
21. Repeat steps 17. to 19. for each computer on the network.

4.7 Using a DHCP server

A DHCP server contains a list of IP addresses (the DHCP range) that

can be used on the network. When a client wants to access the network, the DHCP server checks its list, and gives the client an IP address that is not in use by another client.

You can have only one DHCP server on your network.

To configure the internal DHCP server in the Access Point:

1. Go to the DHCP server page.
2. Select the Enable DHCP radio button to start the DHCP server.
3. In the Subnet Min and Subnet Max edit boxes, enter IP addresses: these are the upper and lower bounds of the DHCP range. If default values have been supplied, you can use these. The DHCP range must be in the same subnet as the Access Point's own LAN address.
4. In the Gateway Address edit box, enter the LAN IP address of the Access Point.
5. Click Apply.
6. Go to the Network Setup page, and edit these LAN Settings:
7. Set the LAN address to Static.
8. Make sure the IP address is in the range of the DHCP server.
9. Click Apply. You may lose the network connection to the Access Point. If that happens, reboot your computer.

Optionally, you can add reservations. A reservation is an IP address that will always be used by the same computer (identified by MAC address).

To add a reservation:

1. Go to the DHCP server page.
2. Click Add. A new window opens.
3. In the MAC address edit box, enter the MAC address of the computer you want to reserve an address for.
4. In the IP address to reserve edit box, enter the IP address you want to reserve for that computer.
5. Click OK. The reservation is added to the list.

4.8 Adding multiple Access Points to a network

When you want to extend the range of your network, you can add more Access Points. When you have multiple Access Points in your network, you need to connect them to each other. You can do this in two ways:

- connect the Access Points to a wired Ethernet
- connect the Access Points via wireless links

When adding Access Points, you must consider the placement of the Access

Points. Ideally, you'll want to be able to access the network in the entire area (e.g. your office building). An Access Point's range depends on its environment: an Access Point that is surrounded by reinforced-concrete walls has less range than one that hangs in an open space.

You may need to experiment with Access Point placement to optimize coverage.

4.8.1 Connecting Access Points via Ethernet links

You can link Access Points via a wired Ethernet network just like you would link computers via such a network. This solution is suitable for larger networks.

Once you have added the first Access Point, do the following for each Access Point you want to add:

1. Install and connect the Access Point to your network.

Configure the Access Point from a computer in your network:

2. Use KickStart (see chapter 3: 'Connecting to the Access Point') to connect to the Access Point you just added.

In your Web browser, the Web Interface opens.

3. Go to the Wireless settings page.
4. The Access Point must use a radio channel that does not interfere with other Access Points in range. Radio channels 1, 6 and 11 do not interfere with each other, so these are the best to choose here. Set the *radio channel*.
5. If you want clients to be able to move their connection from one Access Point to another ('roaming', the SSID must be the same on all Access Points.

4.8.2 Connecting Access Points via wireless links

With the Wireless Distribution System (WDS) you can link Access Points via a wireless link. This way you can extend the range of your network without having to use cables to link the Access Points.

You can use up to eight links per Access Point.

To use WDS:

1. Go to the Wireless Settings page.
2. Click Add, then enter the MAC address of an Access Point you want to add to the WDS.
3. If you want to add more Access Points: repeat step 2. until you have added all Access Points to the WDS.
4. Check the Radio channel: all Access Points in a WDS must use the same

radio channel.

5. If you want clients to be able to move their connection from one Access Point to another ('roaming', the SSID must be the same on all Access Points.
6. Repeat steps 1.-5. for all other Access Points in the WDS.

4.9 Network Setup in general

The scenarios don't cover every possible use of the Access Point. With the information in this section you can configure the Access Point for Situations that haven't been covered by the scenarios.

Network setup is done on the Network setup page. This page is divided into two areas: the upper area is for the WAN connection (this is your link to the internet), the lower one is for the LAN connection (these settings govern how the Access Point appears on your own network).

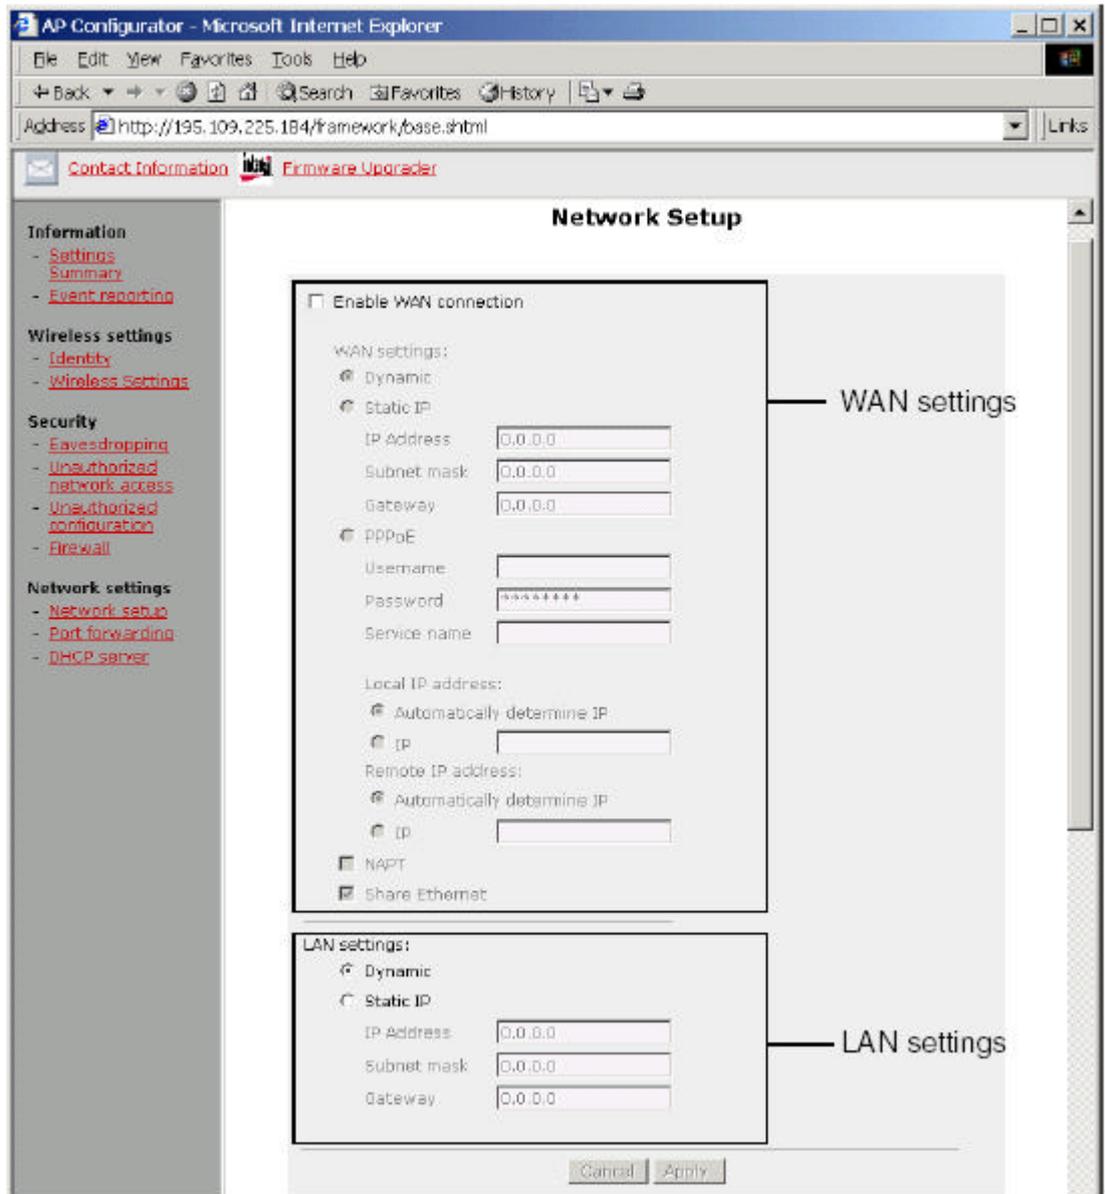


Figure 4-5 Network setup page

4.9.1 WAN Connection

You only need to configure this part of the page to use the Access Point as a gateway.

1. Check the WAN Connection check box. The settings depend on information you get from your Internet Service Provider (ISP).
 - If your ISP instructs you to “Use DHCP” select the Dynamic radio button.
 - If your ISP gives you IP settings, select the Static IP radio button and enter the IP address, subnet mask and gateway address the ISP gave you.
 - If your ISP gives you PPPoE information, select the PPPoE radio button

- and enter the user name, password and Service name the ISP gave you.
 If your ISP didn't give you a Service name, leave that edit box empty.
2. Check the NAPT check box. This switches Network Address Port Translation on. NAPT is also known as Internet Connection Sharing.
 3. The Share Ethernet option can be used for sharing the single ethernet port for both WAN and LAN, in a situation like this:

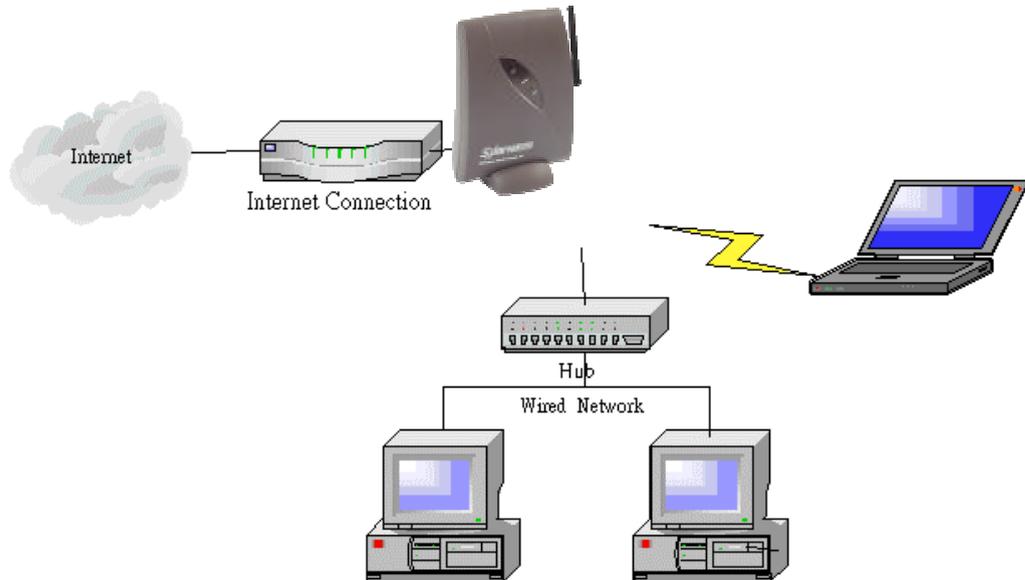


Figure 4-6 Using the Share Ethernet option

When the Share Ethernet option is OFF, only traffic that has a destination outside your subnet (i.e. traffic destined for the internet) will be forwarded from the wireless LAN to the Ethernet port. Use this setting if the Ethernet port is only connected to your internet connection (e.g. ADSL modem).

When the Share Ethernet option is ON, all traffic from the wireless LAN will be forwarded to the Ethernet port and vice versa.

This is useful if the Ethernet port is connected via a hub to both your internet connection and to clients on your LAN.

If you use this option, both LAN and WAN traffic will pass through the Ethernet port. In order to prevent your LAN traffic from 'leaking' onto the internet, you must use PPPoE for the WAN connection (this depends on your ISP).

If your ISP doesn't offer PPPoE, you can only use the Share Ethernet option if you use static IP addressing on your LAN. In this configuration, your LAN traffic will 'leak' onto the internet.

If you want to use DHCP and the WAN connection doesn't use PPPoE, you

can't use the Access Point as a gateway: you need a separate gateway.

4.9.2 LAN settings

If your network has a DHCP server (other than this Access Point) or uses Auto IP, select the Dynamic radio button.

If your network uses static IP addressing, select the Static IP radio button and enter the IP, subnet, and gateway addresses for the Access Point.

If you want to use the DHCP server in this Access Point, you need to set the LAN settings to Static IP. See section 4.7: 'Using a DHCP server.'

5 Advanced configuration

5.1 Introduction

Once your network is up and running, you can configure a number of advanced settings. These are not required for the Access Point to function, but are optional. The options are:

Table 5-1 Configuration options

Section	Feature
5.2	Settings Summary: a quick overview of essential settings
5.3	Event reporting/logging: keeping track of what happens to the Access Point
5.4	Identifying the Access Point: information that helps you find a specific Access Point (handy if you have a lot of them)
5.5	Wireless Settings: how to make multiple Access Points cooperate
5.6	Security: how to protect your network
5.7	Port forwarding: allows you to reach computers on your network from the internet
5.8	Upgrading the Access Point firmware

5.2 Settings Summary

This page contains a summary of the settings of the Access Point. You cannot change any of the settings on this page. Table 5-2 shows you how these settings can be changed.

Table 5-2 Web Interface page: Settings Summary

Setting	How to change the setting
SSID	See section 5.5: 'Wireless Settings.'
IP address	Either use KickStart (section 3.4: 'Using KickStart') or edit the LAN settings on the Network Setup page (section 4.9: 'Network Setup in general')
Security against Eavesdropping method	See section 5.6.2: 'Security against Eavesdropping.'
Access Control	See section 5.6.1: 'Security against unauthorized network access.'
Firewall	See section 5.6.4: 'Firewall.'

WAN Connection	See section 4.9: 'Network Setup in general.'
DHCP Server	See section 4.7: 'Using a DHCPserver'

5.3

Event reporting/logging

The Access Point keeps a log of important events. Go to the Event reporting page to access it. The event log contains the following information:

- Report level: shows how important the event (or how critical the error) is
- ID: an internal number for the event
- Description: description for the event
- Count: the number of times this event has occurred
- Occurrence: when this event has occurred, in months, days a hours: minutes since the Access Point was started

Click *Reset eventlog* to remove all entries.

5.4

Identifying the Access Point

You have a number of options for identifying the Access Point. This is especially useful when you have multiple Access Points in your network.

To access the identity data of the Access Point, go to the **Identity** page. You can use the first two fields on this page to identify the Access Point for yourself. These fields do not influence the behavior of the Access Point.

- Location: This field can be used to indicate the physical location of the device (for example: 2nd floor, room 3).
- Contact: This field can be used to indicate the person responsible for the device, this can be an E-mail address (for example: someone@company.com).

When you have entered or changed your data, click *Apply* to apply the changes to the Access Point.

The following fields cannot be changed (they are factory-set or controlled by the Access Point's firmware):

- MAC address: the MAC address of the Access Point.
- Access Point Type: information on your type of Access Point.
- Firmware Version: the version number of the software that controls the Access Point.

5.5 Wireless Settings

On this page you can configure items such as the network name (SSID) of the device and the radio channel.

Table 5-3 Web Interface page: Wireless Settings

Option	Description
SSID	Every wireless network has a network name (also called SSID, or Service Set IDentification). Only Access Points and wireless clients that share the same SSID are able to communicate with each other. Your networking client allows you to choose to which network you connect. The network names you see there are SSIDs.
Radio Channel	This is the channel that the Access Point uses to transmit and receive information. The channel that you select here is restricted to the channels that can be used within your Regulatory Domain.
Regulatory Domain	This is the organization that certifies the Access Point for use in your country. It determines which radio channels can be used to transmit and receive signals. This is a factory setting and cannot be changed.
High Rate	Switching this option ON improves performance slightly but will break backward compatibility with some older products.
Peer AP's for Wireless Distribution System (WDS)	With WDS, you can link Access Points via a wireless link instead of using Ethernet cables. See section 4.8.2: 'Connecting Access Points via wireless links' .

5.6 Wireless Settings

The Access Point gives you a number of options to provide security for your network:

- Security against unauthorized network access:
this allows you to control who can access the network.
- Security against eavesdropping:
this is encryption, to prevent people from reading the traffic on the network.

- Security against unauthorized configuration:
this is to prevent people from changing the settings of the Access Point.
- Firewall:
this allows you to block unwanted traffic from the network.

5.6.1 Security against unauthorized network access

This allows you to control access to the network. There are two ways to do this:

- MAC Address based: This will only allow the clients you specify to access the network.
- Port based: In order for a client to access the network, it must be authenticated by a RADIUS server on your network.

To configure this, open the **Unauthorized network access** page.

To select a security method, select its radio button. Select None for no authorization (anyone will have access to your network).

5.6.1.1 MAC Address based authorization

With this option you can create a list of clients (an 'Access Control List' that have access to the network. All other clients will be denied access. The client is identified by the MAC address of his network card. The MAC address consists of six groups of two digits each (e.g. 00:10:91:00:00:00).

If you have multiple Access Points, you will need to create this list for every Access Point through which a network card may access your network.

Follow these steps to add a client to the list:

1. Click on the button Add client...: a new dialog opens.
2. In the field MAC Address, enter the MAC address of the client that you want to allow access to.
3. Click OK. The client is now added to the list.

To delete a client from the list:

1. Click Delete: a new dialog opens in which the list is displayed.
2. Select the MAC address(es) of the client(s) that you want to remove from the list.
3. Click OK. The list is updated.

5.6.1.2 Port based authorization

With this option you use a RADIUS server to handle access control.

RADIUS (“Remote Authentication Dial In User Service?”) is a standard for user authentication. The RADIUS server contains a database with users and their access rights. When a user wants to use the Access Point, the Access Point contacts the RADIUS server to see if this is permitted. Port-based security uses the 802.1x standard.

When you use a RADIUS server, the only thing you need to do on the Access Point is to tell it where to find the RADIUS server.

To be able to use port-based security, you also need clients that support port-based security / 802.1x: both the operating system (Windows XP, some Linux variants) and the network card must support it.

To add a RADIUS server:

1. Click Add to add a RADIUS server.
2. In the window that appears, enter the following data:
 - IP Address: the IP address of the RADIUS server.
 - UDP Port: the UDP port number of the RADIUS server.
 - Secret: the password for access to the RADIUS server.
3. Click OK. The server is now added to the list.

You can add more than one RADIUS server. The first server in the list will be used by default, the second will be used if the first is not available, etc.

Checking the **Require reauthentication** check box forces the Access Point to check all connected clients with the RADIUS server at the interval you specify.

To delete a RADIUS server from the list:

1. Click Delete.
2. Select the RADIUS server that you want to remove from the list.
3. Click OK. The list is updated.

5.6.2 Security against eavesdropping

The Access Point provides encryption to secure the data flow from and to the Access Point. This can be configured on the **Eavesdropping** page. These are your choices:

- Open System: when you select this option, data is not encrypted.
- WEP: when you select this option, you activate WEP security. When you select this, the ‘Enter the WEP Settings’ dialog appears, see below.

5.6.2.1

Change WEP settings

When you select the WEP radio button or click the 'Change Settings' link, the 'Enter the WEP Settings' dialog appears. To change the settings:

1. Select the WEP mode: 64 bit or 128 bit. This is the length of the key you'll need to enter. For WEP 64-bit, the key is 10 characters long. For WEP 128-bit, the key is 26 characters long. The longer the key, the harder it is to crack the encryption.
2. Enter a password:
 - WEP 64: the key must contain exactly 10 characters.
For example: 02f4e621ac
 - WEP 128: the key must contain exactly 26 characters.
For example: 02f4e621ac29183ac6b4f9a3e1

Only the following (hexadecimal) characters are allowed in the key:

- 0 to 9
- a to f

3. Click OK.

5.6.3

Security against unauthorized configuration

To prevent unauthorized people from making changes to the Access Point's configuration, you can install a password, the Write Community String (WCS). When you set a WCS, you can only make changes to the Access Point if you supply the correct WCS. You can also lock the Access Point; when the Access Point is locked, no one can change its configuration. You need to press the Reset button on the Access Point itself to unlock it. This increases security: only people who can physically access the Access Point, will be able to change its configuration.

To configure this, go to the Unauthorized configuration page.

To set the WCS:

1. Click Change Password.
A window opens.
2. Enter the WCS (twice).
3. Click OK. The change is applied.
4. The next time you want to access the configuration pages, a dialog asking for a user name and password appears. Leave the 'User name' field empty, and in the 'Password' field, enter the

WCS you just chose.

If you forget the WCS, or if you want to have access without supplying the password, you need to unlock the Access Point, see below.

To lock the Access Point:

1. Click Lock Access Point.

A warning appears: 'Are you sure you want to lock the Access Point' ?

2. Click OK to lock the Access Point.

No more configuration changes to the Access Point are allowed.

To unlock the Access Point so that the configuration changes are allowed again:

1. Insert the end of a paperclip into the reset hole.
2. Press the button until the network LED (the red one on the right) goes from blinking to being on constantly. This takes about one second.
3. You can now use the Web Interface to manage the Access Point again.

This also removes the WCS password.

5.6.4

Firewall

A firewall allows you to prevent unwanted network traffic from going through the Access Point between LAN and WAN. This is useful to protect your network if you connect it to the internet. The firewall tests each traffic packet: the characteristics of a packet are compared to rules you create.

A rule consists of a set of conditions that describe what the packet must look like, and a target: a description of what to do with these packets.

If a packet meets the conditions of the rule, it is processed according to the rule's target. If it does not meet the conditions, the rule is not applied. The packet will be tested against the next rule.

When the packet doesn't satisfy any rule, default policies will be applied. The default policies allow you to accept or block the packet. To configure the firewall, go to the Firewall page. This is the basic configuration procedure:

1. Set the Default policies.
2. Create Rules.

3. Test the firewall.
4. Set the firewall to Enabled.

The following sections first describe configuration in general, and then give an example of a common firewall configuration.

5.6.4.1 Default policies

The default policies allow you to accept or block all traffic for each traffic chain (direction). The directions are:

- Input: all traffic with the Access Point as destination.
- Output: all traffic with the Access Point as origin.
- Forward: all traffic between LAN and WAN that passes through the Access Point to another destination.

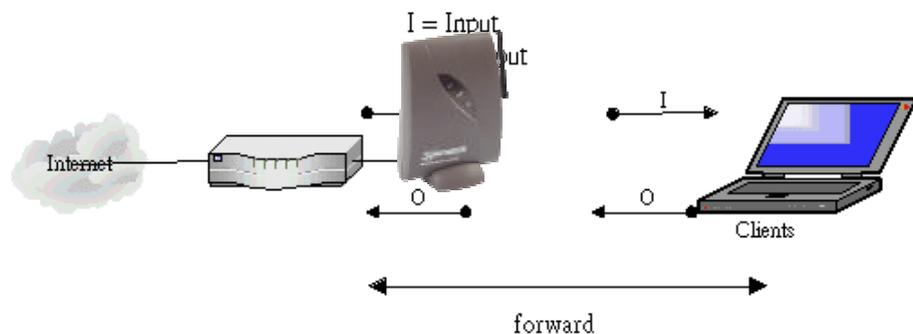


Figure 5-1 Traffic directions

For each of these directions you can select one of these settings:

- Accept sends the traffic through;
- Discard blocks the traffic.

5. Once you have set the default policies, click Apply.

5.6.4.2 Rules

A rule consists of a set of conditions that describe what the packet must look like, and a target: a description of what to do with these packets.

The conditions you can specify are:

- the traffic chain:
 - the direction in which the traffic flows through the Access Point
- the source and destination IP address
- the source and destination port number
- for TCP traffic: flags.

These are settings within the packet that define the packet's

purpose.

To create a rule:

1. Click Add to create a rule.
2. Select the Chain type.
3. In the Enter Rule Number edit box, enter a number. This will be used to identify the rule (the Id column in the list of rules), and the order in which rules are applied.
4. Click OK to continue to the next page.
5. Check the Rule Enabled check box.
6. Select the Target from the drop-down menu: this tells the firewall what to do with the traffic that meets the conditions in this rule. Your choices are:
 - Accept: traffic will be allowed.
 - Drop: traffic will be stopped, with no response to the sender.
 - Reject: traffic will be stopped, and a response will be returned to the sender.
 - Continue: the traffic packet will be counted, and testing will continue with the next rule. Use this if you only want to count packets.

You can now enter the conditions for the rule.

7. In the **Source address/mask** area, enter the IP address for the source. You can enter an address range by giving the network (lowest) address and the net mask. Select the All radio button to get the range of 'all IP addresses'.
8. In the **Destination address/mask** area, enter the IP address for the destination. You can enter an address range by giving the network (lowest) address and the net mask. Select the All radio button to get the range of 'all IP addresses'.
9. In the **Protocol** area, select the type of traffic you want to be affected by the rule. If you select TCP or UDP, you can click Advanced to select a specific port number or port number range. To set a port range, enter the first and last port number in the range into the edit boxes. If you selected the **TCP** protocol, you can also select specific **flags**.

5.6.4.3

Test the firewall

Once you have completed configuration, you need to test the

settings before using them: with the firewall it is possible to block all traffic on the network, making it unusable. To test the settings, click Test Settings.

The firewall will be activated for 15 seconds. If you can reach the Access Point, you'll see a new Web page that allows you to activate the firewall. If the settings you made are so restrictive that you can't reach the Access Point, you won't see this page. Wait for the firewall to switch off, and change the settings so you can reach the Access Point.

This test only makes sure you can reach the Access Point. The test result doesn't say anything about other traffic types.

5.6.4.4

Example: limit management access to the Access Point

In this example, the firewall is used to limit management access (i.e. access to the web interface, for changing the configuration).

To do this, you need two rules:

- one to limit access to the web interface (via HTTP)
- one to limit access via SNMP. The Simple Network

Management Protocol is a standard for managing network components. The Access Point can be configured via SNMP.

These are the rules:

- i10: incoming HTTP (tcp/80) traffic is only allowed from IP address 192.168.10.254:

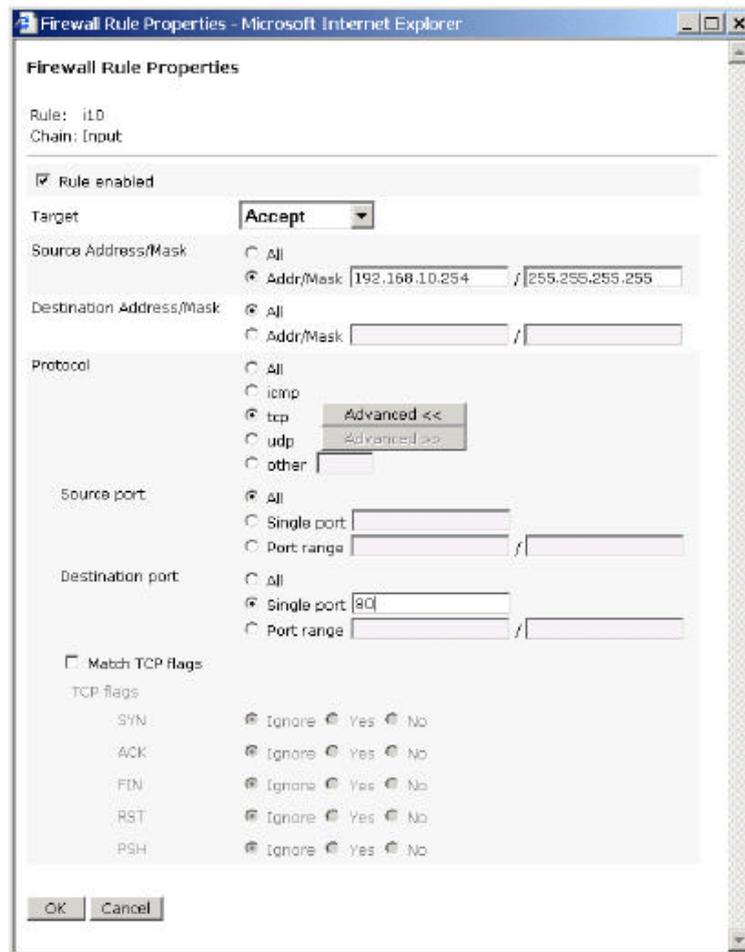


Figure 5-2 Example: Firewall rule i10

i20: incoming SNMP (udp/161) traffic is only allowed from all hosts in the subnet 192.168.10.0/24.

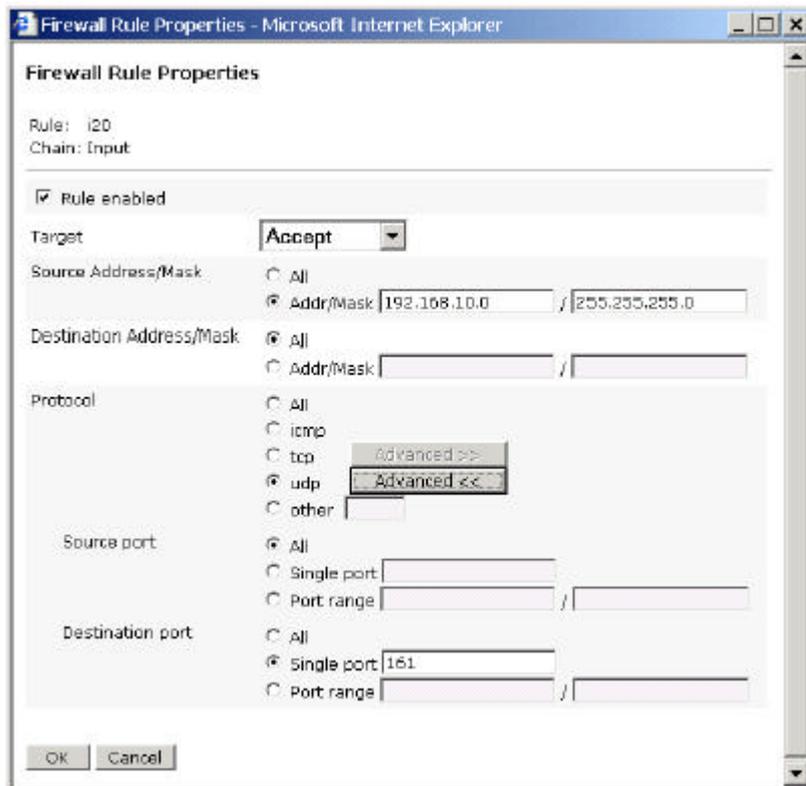


Figure 5-3 Example: Firewall rule i20

The default policy for incoming traffic is 'Discard'. This blocks all other traffic.

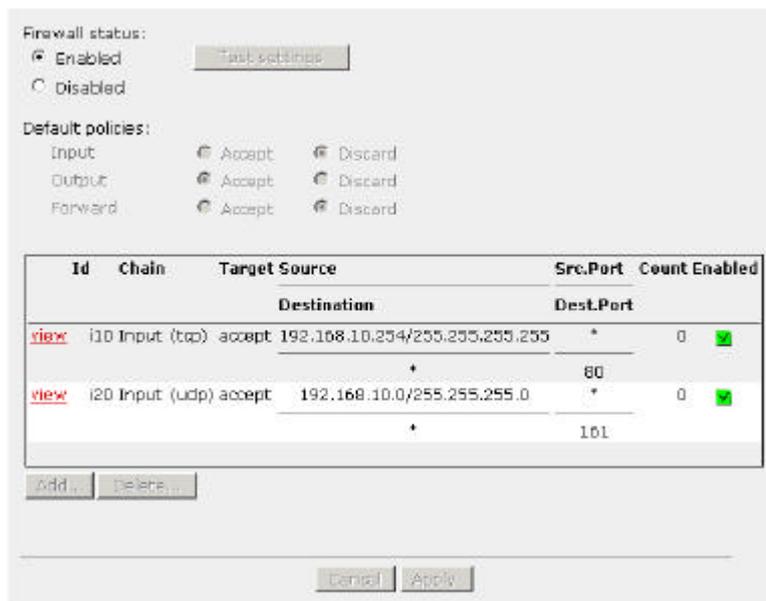


Figure 5-4 Firewall example 1

5.7

Port forwarding

You can use Port Forwarding to allow the outside world to reach other computers on your network. Port Forwarding is only used if you use the Access Point as a gateway.

TCP/IP traffic packets have a port number that is an indication of what type of traffic it is. For each service you want to make available, you must create a Port Forwarding rule that says where to send the traffic to.

This rule contains the port number of the traffic, and the IP address of the destination.

1. Click Add to create a rule.
2. Enter the following data:
 - Source port: the port number that is used to access the service from the internet.
 - Protocol: the kind of traffic (TCP and/or UDP) you want to forward.
 - Destination IP: the address of the host on your network that provides the service.
 - Destination port: the port number of the host that provides the service.
3. Click OK.

For example: to make your Web server available you set a rule with:

Source port = 80

Protocol = TCP

Destination IP = the address of your Web server.

Destination port = 80.

To delete a rule:

1. Click Delete.
- A list of rules appears.
2. Check the check box for the rule(s) you want to delete.
 3. Click OK.

5.8

Upgrading the Access Point firmware

You can upgrade the firmware in the Access Point. New firmware versions may become available to add features to the Access Point or to solve problems.

The following procedure assumes the new firmware is already present on your computer.

To upgrade the firmware:

1. Make sure the firmware version you are about to install is newer than the version currently running on the Access Point: on the **Identity** page, check the firmware version.
2. Click the **firmware upgrader** link at the top of the browser window. A new window opens.
3. Click Browse to browse to the new firmware file.
4. Click Upgrade.

The upgrade process begins. This may take a few minutes.

Do not switch off the power from the Access Point while the upgrade is in progress.

6 Troubleshooting

KickStart does not find my Access Point

Possible cause: the Access Point is not powered up.

Solution:

1. Make sure the power LED is on.
2. Make sure the Access Point is connected to its power adapter and the adapter is plugged in.
3. Make sure the power is switched on at the plug.

KickStart does not find my Access Point, I am attempting to connect from a wireless client

Possible cause: the client cannot make connection.

Solution: a wireless client is not (yet) connected to the Access Point. Refer to the manual of the wireless client on how to connect

Possible cause: The Access Point is not in range of the WLAN card in your computer.

Solution:

1. Check the connection indication of your client.
2. Move closer to the Access Point.

KickStart does not find my Access Point, I am attempting to connect from a wired client

Possible cause: you are using an incorrect cable.

Solution:

- If the Access Point is connected to a hub, a "normal" (not a crossover) cable must be used.
- If the Access Point is connected directly to a computer, a crossover cable must be used.

After configuring the Access Point with an IP address I cannot access the web interface

Possible cause: your laptop may have an incorrect IP address.

Solution: if you have enabled the DHCP server on the Access Point, reboot your laptop to give it a correct IP address.

Browser starts but window stays empty

Possible cause: your browser uses a proxy server to connect to the Web Interface.

Solution: reconfigure the proxy settings in your browser. To do this in Internet Explorer:

1. Go to Tools -> Internet Options... -> Connections -> LAN Settings.
2. Enable "Bypass Proxy Server for local address"

After configuring the Access Point with an IP address one of the computers on the network comes up with a message that says "There is an IP address conflict with another system on the network"

Solution: change the IP address to one that is not currently being used.

Other people are using my Access Point to connect to my network and read sensitive information

Solution:

- To prevent unauthorized access to your WLAN, you can use an Access Control List, see section 5.6.1.1: 'MAC Address based authorization'. In this list, enter the MAC address of the network cards that are allowed access to your WLAN.
- To prevent unauthorized changes to your configuration, you should change the Write Community String password, see section 5.6.3: 'Security against unauthorized configuration'. This password will be requested when a client accesses the web interface.
- It is also possible to enable Port Based security if this is supported in your network environment, see 5.6.1.2: 'Port based authorization'.

I want to use another make of network card in combination with my Access Point and use WEP 64-bit security. I'm not able to connect to the Access Point or the network.

Solution: WEP uses hexadecimal passwords which are long and hard to remember. To make it easier to use WEP, on some products you can use human-readable passwords (with all alphanumerical characters) that are five characters long. This

feature is not standardized, so it may not work on your network. If this is the case, make sure you enter the same hexadecimal WEP password both on the client and the Access Point.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Compliance Statement

This equipment complies with all the requirements of the DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of 9 March 1999 on radio equipment and telecommunication terminal Equipment and the mutual recognition of their conformity (R&TTE).

The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000 .

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this manual and of the computer manufacturer must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries intended for use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Denmark, Finland, France (with Frequency channel restrictions), Germany, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden and United Kingdom.

The ETSI version of this device is also authorized for use in EFTA member states Iceland, Liechtenstein, Norway and Switzerland.

EU Countries Not intended for use

None.

Potential restrictive use

France: Only channels 10,11,12, and13